



Owner's Manual  
**2026**







## WELCOME TO THE FAMILY

Congratulations on your purchase of a new high-performance recreational tow boat!

Your new Malibu Boat has been constructed to meet and/or exceed all U.S. Coast Guard and National Marine Manufacturers Association requirements at the time of its manufacture. However, it is still your responsibility as the boat owner to ensure the boat is operated in a safe manner and properly maintained.

Prior to operating the boat for the first time, you must carefully read and familiarize yourself with this Owner's Manual and all on-product safety labels; you must also agree to comply with federal, state, and local boating regulations.

You should consider this Owner's Manual a permanent fixture of the boat, as it contains important information about boating safety and rules as well as guidelines for proper boat operation and maintenance. If this boat is sold, please be sure to provide the next owner with this manual so they have access to the same important information.

## DISCLAIMERS

Malibu Boats is proud to provide you with a state-of-the-art boat that represents the most exciting, cutting-edge technology available in the towing boat industry to date. As part of our commitment to ongoing innovation, please be aware that Malibu Boats reserves the right to introduce new and/or updated models, options, and/or specifications during any given model year without notification and/or obligation to provide equivalent updates to boats manufactured prior to the date of change.

In addition to this Owner's Manual, Malibu Boats will make every reasonable effort—via various channels of communication such as email, direct mail contact, and/or website updates—to provide you with information required for long-term, safe, and satisfactory use of the boat.

Periodically visit the Malibu website ([malibuboats.com](http://malibuboats.com)), as well as the website(s) of component manufacturers, to stay up-to-date regarding important changes, updates, service bulletins, and/or general information.

## ABOUT THIS OWNER'S MANUAL

This Owner's Manual has been compiled to address as many potential issues and questions as possible—please read and understand it in its entirety before operating the boat. If you follow the advice provided in this manual you will significantly reduce risk to yourself, your passengers, towed participants, and other boaters. Also, it is strongly recommended that you read and understand any and all supplemental instructional documents (manuals, warnings, etc.) provided by component manufacturers and included with the boat at time of delivery.

Malibu Boats cannot anticipate every potential situation that could arise during operation of the boat, nor every circumstance that could affect the care and protection of the boat when not in use. The guidelines and warnings provided herein identify common risks encountered in boating and towed watersport activities and represent the recommended best practices for boat operation and maintenance. If a procedure or method is not specifically recommended, it is your responsibility to determine if it is safe for you and your passengers, and that the boat will not be damaged or made unsafe as a result of your decision(s).

This manual is not a substitute for boating safety courses, nor is it a substitute for boating experience. If you are unfamiliar with the use and operation of a boat, it is recommended that you seek advice and training from a qualified individual or organization—contact your local marine law enforcement agency or nearest authorized Malibu dealer for more information about boating safety classes in your area.

**Remember: Always use caution and common sense when operating and maintaining your boat!** If you do not understand a part of this Owner's Manual or are unsure about any aspect of operation and/or maintenance of your boat, please contact your nearest authorized Malibu dealer for assistance.

# TABLE OF CONTENTS

## INTRODUCTION i

<i>Welcome to the Family</i>	<i>i</i>
<i>Disclaimers</i>	<i>i</i>
<i>About This Owner's Manual</i>	<i>i</i>

## SAFETY 1

<i>Embracing Safety</i>	<i>1</i>
<i>Owner Responsibility And Boating Education</i>	<i>4</i>
<i>Safety And Required Equipment</i>	<i>5</i>
<i>General Boating Safety Topics</i>	<i>10</i>
<i>On-Product Warning Decals</i>	<i>16</i>
<i>Basic Rules Of The Road</i>	<i>19</i>
<i>Watersports Safety</i>	<i>24</i>
<i>Watersports Safety Code</i>	<i>27</i>
<i>Emergency Procedures</i>	<i>28</i>

## QUICK REFERENCE GUIDE 32

<i>Recommended Seating</i>	<i>32</i>
<i>Response TXi</i>	<i>34</i>
<i>Wakesetter 20VTX</i>	<i>35</i>
<i>Wakesetter 21LX</i>	<i>36</i>
<i>Wakesetter 22LSV</i>	<i>37</i>
<i>Wakesetter 23LSV</i>	<i>38</i>
<i>Wakesetter 25LSV</i>	<i>39</i>
<i>Wakesetter 26LSV</i>	<i>40</i>
<i>Wakesetter 22MXZ</i>	<i>41</i>
<i>Wakesetter 23MXZ</i>	<i>42</i>
<i>Wakesetter 24MXZ</i>	<i>43</i>
<i>M230</i>	<i>44</i>
<i>M242</i>	<i>45</i>

## DASH AND DISPLAYS 46

<i>15" Display</i>	<i>46</i>
<i>8" Display</i>	<i>54</i>
<i>4" Auxiliary Display</i>	<i>63</i>
<i>Response TXi — 7" Display</i>	<i>65</i>
<i>Response TXi — 3-In-1 Event Display</i>	<i>70</i>
<i>Response TXi — Wet Sounds Stereo System</i>	<i>74</i>
<i>Basic Electrical Components</i>	<i>75</i>
<i>Other Electrical Components</i>	<i>78</i>

## ENGINE AND POWERTRAIN 80

<i>Malibu Monsoon Engine, Transmission, and V-Drive</i>	<i>80</i>
<i>General Engine Information</i>	<i>81</i>
<i>California Emissions Information</i>	<i>83</i>
<i>Monsoon Engine Support Systems</i>	<i>85</i>
<i>Break-In Period</i>	<i>91</i>
<i>Transmission And V-Drive</i>	<i>93</i>

## HOW IT WORKS 94

<i>Safety Equipment</i>	<i>94</i>
<i>Interior Performance</i>	<i>100</i>
<i>Interior Luxury</i>	<i>102</i>
<i>Tower, Canvas, And Accessories</i>	<i>109</i>
<i>On And Under The Water</i>	<i>115</i>
<i>Saltwater Series</i>	<i>126</i>

## TRAILER 128

<i>Malibu Trailer</i>	<i>128</i>
<i>Connection To The Tow Vehicle</i>	<i>128</i>
<i>Loading The Boat</i>	<i>132</i>
<i>Trailer Components And How They Function</i>	<i>133</i>
<i>Additional Options</i>	<i>141</i>
<i>Towing Advice</i>	<i>142</i>
<i>Launching And Reloading The Boat</i>	<i>143</i>
<i>Cleaning, Maintenance, And Storage</i>	<i>144</i>

## GET READY 145

<i>Malibu Fuel System</i>	<i>145</i>
<i>Starting And Operation</i>	<i>146</i>
<i>Break-In Period</i>	<i>148</i>
<i>Smart Operations</i>	<i>148</i>
<i>Stopping</i>	<i>148</i>
<i>High Speed Maneuvers</i>	<i>148</i>
<i>Special Conditions</i>	<i>149</i>
<i>Towing And Interaction</i>	<i>149</i>
<i>Anchoring</i>	<i>149</i>
<i>Docking And Tie-Up</i>	<i>149</i>
<i>Aquatic Invasive Species (AIS)</i>	<i>150</i>

## CARE AND MAINTENANCE 152

<i>Ongoing Care</i>	<i>152</i>
<i>Saltwater Care And Maintenance</i>	<i>156</i>
<i>Routine Maintenance</i>	<i>159</i>
<i>Before Starting The Engine</i>	<i>160</i>
<i>After Starting The Engine</i>	<i>163</i>
<i>After The Outing</i>	<i>163</i>
<i>After 10 Hours — Engine Oil Change</i>	<i>164</i>
<i>After 50 Hours Or Annually (Whichever Comes First)</i>	<i>164</i>
<i>Storage And Winterization</i>	<i>169</i>

## Maintenance Schedule 174

## WARRANTY STATEMENT 175

## TROUBLESHOOTING 184

<i>Troubleshooting The Boat</i>	<i>184</i>
<i>Troubleshooting The Trailer</i>	<i>186</i>

## SERVICE LOG 188

## INDEX 189

## EMBRACING SAFETY

Basic safety rules and recommendations are outlined in this chapter of the manual. **PLEASE REVIEW ALL SAFETY INFORMATION.**

### Signal Words and Symbols Used in this Manual

Throughout this manual, specific words and symbols indicate safety-related information.

Pay special attention to **DANGER**, **CAUTION**, **WARNING**, and **NOTICE** indicators (shown below), as they explain how to avoid hazards that may endanger you, your passengers, towed participants, and others. When you see one of these indicators, be sure to carefully read all information and follow all given precautions.

#### **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury.

#### **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

#### **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

#### **NOTICE**

**NOTICE** is used to address practices not related to physical injury.

### Basic Safety Rules

**Make sure you understand all of the operating instructions prior to attempting to operate this boat.** Boating-related accidents are generally caused by the operator's failure to follow basic safety rules or written precautions. Most accidents can be

avoided if the operator is completely familiar with the boat and its operation, follows recommended practices, and is able to recognize and avoid potentially hazardous situations.

Past accident data shows that:

- most **fatalities** involve actions which cause falls or ejections overboard, mishaps with towed persons, propeller strikes, collisions, and carbon monoxide exposure;
- most **injuries** are associated with collisions, mishaps with towed persons, falls or ejections overboard, being struck by the propeller, and fires and explosions.

Accidents are mostly caused by operator inattention, operator inexperience, reckless operation, alcohol/drug use, excessive speed, passenger or towed person behavior, and violation of navigation rules. Always exercise caution and common sense when operating your boat—don't take unnecessary chances!

**Failure to observe the safety recommendations contained in this manual may result in severe personal injury or death to you or to others.**

### Pre-Operation Check List — Before Leaving the Dock

#### **WARNING**

**Failure to follow these precautions may result in severe injury or death to you and/or others.**

*The operator shall:*

- Always check the local weather report prior to an outing. It is the operator's responsibility to determine if the boating environment is unsafe due to weather conditions or other factors.
- Verify that all drain plugs are securely in place.
- Verify proper operation of bilge pump(s), horn, lights, blower and other equipment.
- Verify that all onboard fire extinguishers are in proper operating condition.
- Verify that the Emergency Safety Lanyard is in proper operating condition and properly affixed to the operator
- Verify proper operation of the steering system. If the boat is already in the water, turn the steering wheel full-stop in both directions and verify proper rudder movement. If you feel binding or stiffness when rotating



the steering wheel, then the steering system likely needs repair. Failure of the steering cable will result in loss of control of the boat.

- Ensure that the total load of all persons, ballast, and equipment aboard the boat is within the limits stated on the Maximum Capacities Plate and is properly distributed (see *Quick Reference Guide* chapter for model-specific capacity specifications).
- Verify that all safety equipment and personal flotation devices (PFDs) are in good condition and suitable for your boat and passenger load.
- Inform all passengers where safety equipment is located and instruct them in proper usage.
- Ensure that at least one other passenger is capable of safely operating the boat in case of an emergency.

## **⚠ DANGER**

### **GASOLINE VAPORS CAN EXPLODE.**

**BEFORE STARTING THE ENGINE, ALWAYS OPERATE THE BLOWER FOR FOUR (4) MINUTES AND THE CHECK ENGINE COMPARTMENT BILGE FOR GASOLINE VAPORS.**

- Always open the engine cover prior to each outing and after refueling to check for signs of gasoline (both liquid and vapor) in the engine compartment/bilge. Failure to do so may result in fire or explosion as well as serious injury or death to you and/or others. **If you open the engine cover and see liquid gasoline in the engine compartment/bilge and/or smell gasoline vapors, perform the following steps:**
    1. **DO NOT** attempt to start the engine. Liquid gasoline in the bilge is an extreme fire and explosion hazard that may cause injury or death.
    2. Find and eliminate the source of the gasoline.
    3. Carefully remove all liquid gasoline from the bilge.
    4. Ventilate the engine compartment/bilge and run the blower to remove all gasoline vapors before starting the engine.
    5. If gasoline vapors persist after running the blower, **DO NOT** attempt to start the engine, as this possibly indicates a gasoline leak.
  - Always run the blower when idling or operating at low speed.
- Check that the area behind the boat is all clear before starting the engine to **AVOID PROPELLER INJURY** to persons in the water behind the boat or on the swim platform.
  - Turn off the engine prior to anyone occupying the swim platform or being in the water behind the boat to **AVOID PROPELLER INJURY**. Being in neutral gear is insufficient; the propeller may still be turning, or the engine may be inadvertently shifted into gear.
  - Not back the boat toward persons in the water behind the boat to **AVOID PROPELLER INJURY**.
  - Not allow people to be on or near the swim platform or in the water near the swim platform while the engine is running because **CARBON MONOXIDE** will exist around the back of the boat when the engine is running. Engine exhaust contains carbon monoxide, which is a deadly, odorless, colorless gas.
  - Not operate the engine in a confined space or while tethered to another vessel as **CARBON MONOXIDE** will be around the boats.
  - Not go under the boat cover with the engine running or shortly after the engine has been running because **CARBON MONOXIDE** may remain under the cover. Remove cover to ventilate the area.
  - Follow safe operating practices, the “Rules of the Road,” and the Watersports Responsibility Code.
  - Not operate the boat if under the influence of alcohol or other drugs.
  - Attach the Emergency Safety Lanyard to the boat operator when operating the boat.
  - Maintain a proper course and safe speed at all times to avoid collisions.
  - Maintain a lookout for other boats, swimmers, and obstructions in the water.
  - Continuously be aware of weather conditions, as sudden storms, wind, water conditions, lightning, etc., can unexpectedly create an unsafe boating environment.
  - Operate slowly in congested areas such as marinas and mooring areas.
  - Keep a safe distance from other boats, swimmers, personal watercraft, docks, and fixed objects.

## **Precautions While Underway**

## **⚠ DANGER**

**Failure to follow these precautions will result in severe injury or death to you and/or others.**

### *The operator shall:*

- Look before turning/maneuvering the boat so as to avoid potential collisions with oncoming or overtaking vessels.
- Be aware that the boat is a high-performance watercraft capable of quick, tight turns and changes in direction. Familiarize yourself with the boat's unique handling characteristics. It is the operator's responsibility to operate the boat in a manner that ensures the safety of all passengers. Abrupt maneuvers may result in the ejection of unsecured, unseated, or improperly positioned passengers. Verbally warn passengers before executing quick, tight turns so they may have time to grasp a handrail, handhold, or portion of the boat.
- Be aware that the boat will handle differently depending on loading and onboard weight distribution.
- Ensure that all passengers are properly and securely seated in appropriate seating locations to avoid falling, or falling overboard.
- Instruct and ensure that passengers remain properly seated at all times while the boat is in motion above idle speed.
- Not allow passengers to sit on the transom, seat backs, engine cover or sides of the boat while the engine is running, and the boat is in motion, to avoid falling overboard.
- Not allow passengers to sit in a position that obstructs the operator's view.
- **NEVER** leave children unattended and in the boat without adult supervision.
- Ensure children riding in the bow of the boat are accompanied by an adult in the bow and that all remain seated when the boat is in motion.
- Not let passengers occupy seats which may be in the path of the tow line.
- Slow down when crossing waves or wakes in order to minimize the impact on passengers and the boat. Crossing waves or wakes at an angle (such as 45 degrees) rather than perpendicularly will reduce the severity of the impact. Avoid rough water, large waves and large wakes from other boats when at high speed. Jumping waves/wakes or slamming the bow will cause large vertical impacts which may cause injury to occupants or cause ejections.
- For safe towing (water skiing, tubing, wakeboarding, wake surfing, knee boarding, etc.), be experienced and have an observer (an observer or "spotter" is required by law in most states). A rear-view mirror is helpful if you are allowed to tow without an observer in your state.
- Avoid letting tow lines or mooring lines wrap around anyone's body parts/limbs. Doing so could allow body parts/limbs to become entangled in the line and could

cause significant injury, such as amputations.

- Keep track of tow lines and dock lines so that they do not become entangled in the propeller. A tow line will wrap quickly around a spinning propeller and is capable of immobilizing the boat and dragging a person entangled in the tow line underwater or causing amputations. Shut off the engine if a tow line has potential for wrapping in the propeller.
- Use the wakeboard tower only as designed. The tower is designed to pull a single individual. Please consult the remainder of this manual and/or warning labels on the tower for details. **DO NOT** climb, sit on, stand on or jump/dive off of the tower. Tow line may loop on inverted tricks. **DO NOT** sit behind the pulling point of the tower.
- **NEVER** allow any type of spark or open flame on board. It may result in fire or explosion.
- Avoid grounding the boat: Be familiar with local conditions and water depth. If you are uncertain, then proceed slowly with caution. Sudden groundings from planing speeds may cause rapid decelerations and cause occupants to impact the boat and/or to be ejected from the boat. Boat damage may also occur.
- Always watch for low obstacles such as tree limbs, bridges or power lines, especially in boats with tow towers.
- Seek shelter from open water if there is threat of lightning or severe weather.
- **NEVER** dive from the boat without being absolutely sure of the depth of the water. Severe injury or death may occur from striking the bottom or submerged objects. Striking the bottom or a submerged object while diving headfirst can cause paralysis, head injury or death.
- Provide assistance to other boaters in distress while ensuring the safety of your own passengers.
- When you leave the boat, take the keys with you. This will keep untrained and unauthorized persons from operating the boat. (This will not be applicable on some keyless ignition systems.)

## Safety While Maintaining the Vessel

### **WARNING**

Failure to follow these precautions may result in severe injury or death to you and/or others.

*The operator shall:*



- Visually inspect the engine compartment and ventilate after refueling.
- Inspect fuel system regularly. Examine fuel tanks, hoses and fittings for leaks or corrosion at least annually because leaking fuel is a fire and explosion hazard.
- Never remove or modify components of the fuel system in any way except for maintenance by qualified personnel. Tampering with fuel components may cause a hazardous condition which could lead to a fire or explosion.
- Never override or modify the engine neutral starting safety switch in any way. Your boat engine should not start in gear. If it does, do not use the boat until this safety feature is fixed by an authorized dealer.
- Be aware that batteries generate small amounts of dangerous hydrogen gas when charging. This gas is highly explosive. Keep all sparks, flames and smoking well away from the area. Failure to follow instructions when charging a battery may cause an explosion of the battery or the atmosphere near the battery, which could result in death or serious injury.
- Keep the engine off whenever the engine box/cover/hatch is open. The engine box/cover/hatch serves as a machinery guard. Clothing or body parts can get caught in moving parts, causing death or serious injury. Keep away from moving parts.
- Not replace the boat's marine parts with automotive parts or parts that were not designed for the boat.
- Be aware that battery electrolyte fluid is dangerous. It contains sulfuric acid, which is poisonous, corrosive and caustic. If electrolyte fluid is spilled or placed on any part of the human body, immediately flush the area with large amounts of clean water and immediately seek medical attention.
- Check the tightness of the tower bolts **BEFORE** each use. If a tower collapses, it may result in injury to boat occupants or towed persons.
- Not modify the tow bar. The tow pylon/bar is not designed for vertical extensions. Any modifications to the tow pylon/bar or its mountings may result in damage to the boat and injury to the user.
- Only lift the boat from approved lift points, which are identified in later parts of this owner's manual.

## OWNER RESPONSIBILITY AND BOATING EDUCATION

### Important Safety Information

The safety of you, your passengers, and other boaters depends on how you operate and maintain your boat. As operator or owner of this boat, you are responsible for the safety of those with and around you while boating.

### Responsibilities of Boat Owner and Operators

It is the owner's responsibility to ensure that the operator of the boat has been properly instructed in the lawful and safe operation of this vessel. Therefore, before operating the boat, thoroughly read this owner/operator manual. Be sure you understand each item before operating it. Improper operation or trailering of the boat could lead to severe personal injury or death. Improper operation or trailering of the boat may also damage the boat.

The operator and the boat owner assume all risks for themselves, their guests, and anyone in proximity to their boat, and ensure that all passengers understand the risks and responsibilities associated with boating.

This manual is not intended to provide complete training on all aspects of boat operation. We strongly recommend that all operators of the boat seek additional training on boat handling and safety. Have all operators become familiar with the handling characteristics, and proper steering and control system usage before attempting high-speed operation.

**At the time of delivery, the owner/operator is responsible for:**

- Understanding the warranty terms and conditions of your boat, your engine, and your trailer.
- Obtaining insurance.
- Examining the boat to ensure the proper operation of all systems.

**Before operating the boat, the owner/operator is responsible for:**

- Registering the boat as required in the jurisdiction where the boat is being operated.
- Providing the proper (USCG) safety equipment, and checking local, state and federal agencies as to laws and regulations (USCG carriage requirements).
- Carefully reading and understanding safety information and proper operating procedures within this manual.
- Obtaining other boating education if lacking experience.

- Familiarizing yourself with the navigable waters where you intend to operate the boat.
- Following the proper break-in procedure for the engine.

## Registration

Federal Law requires that all motorboats be registered and that all motorcraft not documented by the U.S. Coast Guard display registration numbers. In nearly all states, this means registration with the designated state agency. In a few jurisdictions, the Coast Guard retains registration authority. Your dealer will either supply registration forms or tell you where they may be obtained. The agency will supply you with a certificate which must be carried with you when the boat is in operation. International laws may vary as to required registration.

## Insurance

The boat owner may be legally responsible for damages or injuries caused by whomever is operating the boat, even if that person is not the owner. Common sense dictates that you carry adequate personal liability and property damage insurance on your boat, just as you would on your automobile. Many states have laws detailing minimum insurance needs. Your insurance agent or your dealer may be able to supply you with more information. You should also protect your boat from physical damage or theft.

## Boating Safety Education Opportunities

It is recommended that the boat owner/operator obtain boater safety education. If you have never owned a boat before, you can get an excellent introduction to boat handling from organizations such as the U.S. Coast Guard, American Red Cross, United States Coast Guard Auxiliary, or your local boating authority. Even if you are a veteran boater, these courses will help sharpen your boating skills as well as bring you up to date on current rules and regulations. See your local boating agency or dealer for information on classes in your area.

Some states require youths, 16 years of age and younger, to complete a boating safety course before operating any watercraft. Many others require operators under the age of 18 to be licensed in small boat operation.

Boat smart from the start: Take a boating safety course and get a free vessel safety check annually for your boat. For more information, contact: United States Coast Guard Auxiliary, [www.cgaux.org](http://www.cgaux.org); United States Power Squadrons, 1-888-FOR-USPS, [www.usps.org](http://www.usps.org).

The following is a list of some other agencies and organizations that offer Water Safety, First Aid and CPR

courses or information. To find boating safety courses in your area, call your state's local boating agency or the USCG boating safety course line at 1-800-336-2628 (1-800-245-2628 in Virginia).

- USCG Office of Boating ([www.uscgboating.org](http://www.uscgboating.org))
- American Red Cross ([www.redcross.org](http://www.redcross.org))
- U.S. Coast Guard Auxiliary ([www.cgaux.org](http://www.cgaux.org))
- U.S. Power Squadrons ([www.usps.org](http://www.usps.org))
- State Boating Offices
- Canadian Power and Sail Squadrons ([www.cps-ecp.ca](http://www.cps-ecp.ca))
- Boat Owners Association of the United States ([www.boatus.com](http://www.boatus.com))
- National Safe Boating Council ([www.safeboatingcouncil.org](http://www.safeboatingcouncil.org))
- Water Sports Industry Association ([www.wsia.net](http://www.wsia.net))
- European or international organizations

## Operation by Minors and Licensing

If your boat will be operated by a minor, remember to have an adult present at all times. Many states have laws regarding minimum age and licensing requirements for minors.

Some states require boat training courses, certification, or licensing for minors and/or adults. Contact state and local authorities for requirements that apply in your area.

Your boat and equipment must be in compliance with federal, state and local safety equipment regulations. USCG regulations require certain safety equipment be present on your boat during operation. For a detailed description, obtain "Federal Requirements for Recreational Boats" published by the U.S. Coast Guard and available online at:

<https://www.uscgboating.org/assets/1/AssetManager/Boaters-Guide-to-Federal-Requirements-for-Recreational-Boats-20231108.pdf>

In addition to the USCG regulations, other local and/or international law enforcement agencies may have similar requirements. You should check with your local marine law enforcement agency regarding any such requirements before boating.

## SAFETY AND REQUIRED EQUIPMENT

Equipment requirements for coastal and inland waters differ. Check with local authorities and/or the USCG for further information about coastal water requirements.

The Federal Boat Safety Act of 1971 (FBSA/71) and



the National Recreation Boating Safety Program have established minimum safety standards for boats and associated equipment, specified by the USCG. In addition, the American Boat and Yacht Council (ABYC) and the National Marine Manufacturers Association (NMMA) work with boat builders to develop voluntary standards that exceed the USCG requirements. The included safety equipment on your boat meets or exceeds the standards of the USCG, ABYC and the NMMA.

## NOTICE

Many states' equipment requirements go beyond USCG requirements. Contact your state boating office for further information.

Some required safety equipment, such as life jackets (PFDs) are not included with the boat. An authorized Malibu dealer can help you choose the appropriate equipment.

## Navigation Lights



Your boat is equipped with navigational lights. Recreational boats are required to display navigational lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.). Navigation lights are provided to inform other boats of your presence and course. It is up to you to ensure they are operational, displayed correctly, and turned on when required.

## Emergency Safety Lanyard



The boat is equipped with an Emergency Safety Lanyard (cutoff switch). It is required by law that the lanyard be secured to the operator, and the lock plate attached to the Emergency Safety Lanyard, prior to starting the engine and

anytime the engine is operating. The Emergency Safety Lanyard is designed to turn off the engine whenever the operator moves far enough away from the helm to activate the switch. The purpose is to stop the engine, propeller, and boat in the event the operator leaves the helm location, falls overboard, or is ejected from the boat. If the engine is stopped, it will prevent the boat from becoming a run-away, unmanned boat, which may cause injury or death to boat occupants who have fallen overboard or been ejected, or to other nearby people. If the engine stops, it will minimize the subsequent opportunity for propeller contact with the operator or other persons in the water. If the engine and boat stop, it will allow for the operator or other persons who have fallen overboard to safely re-board the boat.

## ⚠ WARNING

It is required by law that you use the Emergency Safety Lanyard system as failure to do so can cause death or serious injury. **DO NOT** operate the boat if the Emergency Safety Lanyard system does not function properly.

- Attach the Emergency Safety Lanyard to a secure place on your clothing, your arm or your leg while operating.
- **DO NOT** attach the lanyard to clothing that could tear loose.
- **DO NOT** route the lanyard where it could become entangled, preventing it from functioning.
- Avoid accidentally pulling the lanyard during normal operation.
- Loss of engine power means loss of most steering control.
- Without engine power, the boat will decelerate rapidly. This could cause people in the boat to be thrown forward or ejected overboard if they are not properly seated in the boat.

There are practical limitations to what the Emergency Safety Lanyard can do. It can take several seconds for the engine and propeller to stop turning. The boat can continue to coast for several hundred feet depending on the boat speed at the time the switch is activated. While the boat is coasting, it can cause injury to anyone in its path. Accidental loss of power can be hazardous particularly when docking or in heavy seas, strong current, or high winds.

While at the dock or when the boat is not moving, periodically disconnect/pull the Emergency Safety Lanyard out of the switch while the engine is running to test for proper operation. The engine should shut off when the lanyard is disconnected/pulled from the switch. You should not be able to restart the engine until the lanyard is back in place.

## Personal Flotation Devices

Federal law requires that you have at least one wearable Personal Flotation Device (PFD) of the proper size (Type I, II, III or V), for each person on board or being towed, and at least one throwable PFD (Type IV) in the boat. PFDs must be Coast Guard approved, in good and serviceable condition and the appropriate size for the user. To meet requirements, each lifesaving device must have a current, legible USCG approval stamp permanently affixed. At the beginning of each season, inspect life jackets (PFDs) for damage and test for proper flotation. Refer to the life jacket (PFD) manufacturer's information.

**REMEMBER—The best PFD is the one that is worn—that is, the one that can save your life.** PFDs are intended to save lives; it is highly recommended that you and your passengers wear them while in the boat. Learn how to use them and adjust as necessary for comfort. It is especially important that children and non-swimmers wear a life jacket (PFD) at all times. Make certain all passengers know where life jackets are located, how to put on and properly adjust their life jackets (PFDs), and that life jackets are readily accessible at all times.

Your dealer can help you select appropriate life jackets (PFDs) and throwable lifesaving devices for your area. Some PFDs are specially made for use while water skiing or wakeboarding and are not USCG-approved. Please check local law with respect to their use. Some states require children to wear a PFD at all times. There are four types of wearable PFDs (Type I, II, III or V) and one throwable type of PFD (Type IV) used for throwing in emergency situations.

Examples of these USCG-approved PFDs are shown:

### **Type I PFD—Offshore Life Jacket**



This PFD is designed for extended survival in rough, open water. It usually will turn an unconscious person face up and has over 22 pounds of buoyancy. This is the best PFD to keep you afloat in remote regions where rescue may be slow in coming.

### **Type II PFD—Near Shore Buoyant Vest**



This “classic” PFD comes in several sizes for adults and children and is for calm, inland water where there is chance of fast rescue. It is less bulky and less expensive than a Type I, and many will turn an unconscious person face-up in water.

### **Type III PFD—Flotation Aid**



These life jackets are generally considered the most comfortable, with styles for different boating activities and sports. They are for use in calm water where there is good chance of fast rescue since they will generally not turn an unconscious person face up. Flotation aids come in many sizes and styles.

### **Type IV—Throwable Device**



These are designed to be thrown to a person in the water. Throwable devices include boat cushions, ring buoys, and horseshoe buoys. They are not designed to be worn and must be supplemented by wearable PFD. It is important to keep these devices immediately available for emergencies.

### **Type V PFD—Special Use Device**



Special use PFDs include work vests, deck suits, and hybrids for restricted use. Hybrid vests contain some internal buoyancy and are inflatable to provide additional flotation. These PFDs may be used instead of a Type I, II, or III PFD with non-towed participants if used in accordance with the approval conditions on the label and if worn when the boat is underway. Some Type V PFDs provide increased protection against hypothermia.

## NOTICE

A Type V PFD must be *worn* to be counted toward the minimum carriage requirements.

## NOTICE

Special life jackets are available for skiing and other watersports, but are not approved by the Coast Guard and do not count as PFDs.




---

## Life Rafts

In certain non-US locales, boats are legally required to be equipped with a life raft; consult local authorities for specific laws and requirements.

On most models, life rafts may be stowed on the midship (center of the boat) floor. Refer to the *Quick Reference Guide* chapter of this manual for model-specific location.

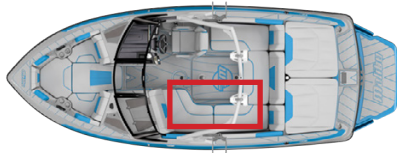

*Generic life raft stowage location.*

---

## Fire Extinguisher System



The boat is equipped with a fixed manual/automatic fire extinguisher system. The system is designed to release fire-suppressing material if its sensors detect abnormally high temperatures in the engine compartment.

As part of routine safety checks as the boat powers up, always verify that the extinguisher system indicator—an LED light located adjacent to the throttle-shifter at the driver helm—is active.

The fixed fire extinguisher system is required to be capable of protecting the cubic volume of the engine compartment—this volume may be found on a label affixed to the interior of the engine compartment (see *Warning Labels* section of this chapter).

### In case of fire:

1. Do not wait for automatic actuation.
2. Close all engine hatches.
3. Turn off the boat.
4. Remove the safety pin from the red “FIRE” T-handle located next to the helm seat (near the helm circuit breaker panel) and pull firmly. There will be both an audible and visual (indicator light) alarm when the system discharges.

In the event of a fire, do not wait for automatic actuation

of the suppression system. Use the manual release handle located next to the helm seat (near the helm circuit breaker panel)—refer to the *How It Works* chapter of this manual for operating instructions.

All fire extinguishers, whether fixed or portable, have an expiration date (usually affixed to the canister). Expired fire extinguishers must be replaced before operating the boat.

**Service and re-installation of the fixed fire extinguisher system must be performed by an authorized Malibu dealer.**

## ⚠ CAUTION

Do NOT breathe fumes and/or vapors caused by a fire and/or the suppression agent, as they are toxic and hazardous.

## ⚠ WARNING

Whenever fire extinguishers or suppression units have been used in fighting an onboard fire, a careful determination should be made whether it is safe to operate the boat. In most instances, it is advisable to have the boat towed to shore rather than risk additional fire or permanent damage to the drivetrain. The boat should be thoroughly serviced by an authorized Malibu dealer prior to operation again. Operation prior to service could result in additional damage to the boat and may result in serious injury or death.

---

## Fire Extinguisher Requirements

Although the boat is equipped with a fixed manual/automatic fire extinguishing system, boats operating in the United States must also meet the following requirements:

- Boats between 16–26 feet in length must be equipped with at least one (1) fully charged and date-stamped 5-B or 10-B rated portable fire extinguisher.
- Boats between 26–40 feet in length (such as the 26 LSV) must be equipped with at least two (2) fully charged and date-stamped 5-B or 10-B rated portable extinguishers.

Portable fire extinguishers are not included in the boat's standard equipment. The operator is responsible for ensuring the boat is equipped with the correct number and type of fire extinguisher(s). All onboard portable fire extinguishers must be properly mounted—refer to the *How It Works* chapter of this manual for portable fire extinguisher mounting locations and instructions.

Approved portable fire extinguishers are classified by a letter symbol, either 5-B or 10-B, with the B designating that the material will extinguish flammable liquids such as gasoline, oil, etc. Malibu recommends either the Kidde Mariner 5 (5-B:C rated) or the Kidde Mariner 110 (1-A:10-B:C rated)—

both are suitable USCG-approved models.

Check periodically to ensure that all extinguishers are in proper operating condition and fully charged. Check local, state and federal agencies as to laws and regulations.

---

## Horn or Whistle

All boats over 16 feet (4.8 meters) in length must be equipped with an operable horn or whistle. Test the operation of the horn periodically, so as to make sure it will sound when you actually need to alert someone or another boat. The following are standard signals when using a whistle or a horn:

- **One prolonged blast:** Warning.
- **One short blast:** Pass on my port (left) side.
- **Two short blasts:** Pass on my starboard (right) side.
- **Three short blasts:** My engines are in reverse.
- **Five or more blasts:** Danger!

---

## Bilge Pump(s)

Bilge pump(s) are installed in your boat to remove water that may accumulate in the bilge. Know the location of the pump(s), where they discharge, and where switches are located. Typically, there are manual switch and/or an automatic switch position(s). The bilge pumps may be manually operated via the 8" display—see the *Dash and Displays* chapter of this manual for more information.

It is best to leave the bilge pump switches in automatic mode, so as to not allow excess water to unknowingly accumulate in the bilge. If one or more bilge pumps are activating too frequently or continuously, investigate the source of leaking water (check for hull damage, hose or piping leaks, missing drain plug, exhaust system or ballast system failures, etc.), and/or return to shore. Excess water in the bilge can cause loss of engine power, sinking, and/or capsizing.

Periodically test the operation of all bilge pumps by activating them via the dash and observing the resulting water discharge. If one or more bilge pumps are not functioning correctly, please refer to the *Troubleshooting* chapter of this manual.

---

## Bilge Pump Filters (Where Equipped)

In certain locales, the boat's bilge pump(s) may also be equipped with bilge pump filters, which, if equipped, require the following additional maintenance steps:

- *Every 30 Engine Hours:* Inspect all bilge pump filters for debris buildup, which can lead to decreased performance. Replace as needed.
- *After Operation In Water With Moderate Debris:* Inspect the bilge pump filters for debris buildup, which can lead

to decreased performance. Replace as needed.

- *Annually:* Replace all bilge pump filters.
- *During Winterization:* Remove all bilge pump filters and store them in a clean, dry location.



---

## Visual Distress Signals

All vessels used on coastal waters, the Great Lakes, territorial seas, and those waters connected directly to them up to a point where a body of water is greater than two miles wide, must be equipped with USCG-approved visual distress signals. Your dealer or local authorities can help you select appropriate visual distress signals for your area.

If you are required to carry distress signals, you must have three USCG-approved pyrotechnic devices. Be sure they are in serviceable condition, not exceeding the expiration date and stored in a cool, dry location in a red or orange waterproof container.

### **WARNING**

Pyrotechnic signaling devices can cause fire and/or explosion, death, serious injury, and property damage if improperly handled. Follow the pyrotechnic manufacturer's directions.

---

## Recommended Safety Equipment

As a precaution, a prudent boater will avoid potential problems on an outing by having additional equipment on board. Normally, this equipment is dependent on the size and type of the body of water and the length of the trip. Your dealer can assist you in acquiring this additional equipment.

We recommend the following equipment:

- First aid kit and manual
- Anchor with at least 75 feet (23 meters) of line
- Mooring lines and fenders
- Bailing device (bucket, hand pump)
- Combination paddle/boat hook
- Local charts and compass
- Day/night distress signals
- Waterproof flashlight and spare batteries



- Cellular phone
- Waterproof container for cell phone
- GPS Global Positioning System
- Binoculars
- Portable AM/FM radio with weather band
- A non-electric horn or whistle
- Extra engine oil
- Tool kit
- Spare propeller and mounting hardware
- Spare fuses
- Spare keys
- Sunglasses and sunblock lotion

## GENERAL BOATING SAFETY TOPICS

### Safe Speed

Navigation rules state that a boat be operated at a safe speed at all times. Determination of a safe speed involves consideration of many factors, such as, but not limited to:

- Boating activity (tubing, water skiing, wakeboarding, wake surfing, etc.)
- Boat traffic congestion
- Water conditions
- Environmental conditions (shoreline, docks, and depth of water)
- Weather
- Visibility

The boat should not be driven at a rate of speed faster than will allow it to be brought to a full stop within the operator's field of view given the environmental conditions at the time. Safe speed for the conditions and driver attention (lookout) are important factors in avoiding collisions which may cause injury or death. When in doubt it is prudent to slow down within adequate time and distance so as to be able to assess the conditions and paths of other boats.

It is important to know the Rules of the Road, although do not assume that all boaters also know the rules or that they will abide by them. Avoid collisions by constantly assessing the ever-changing situation and be sure to make appropriate speed and course changes early.

## Passenger Safety

The operator of the boat is responsible for the safety of the passengers, all skiers/riders, as well as his/her own safety. Ensure that you and your passengers adhere to these safety recommendations:

- Any time you take your boat out, make sure that there is at least one other passenger aboard who is familiar with the operation of your boat.
- Ensure that all passengers are properly and securely seated in appropriate seating locations to avoid falling or falling overboard.
- While the engine is running, and while the boat is maneuvering, all occupants should be properly seated. **DO NOT** stand while the boat is moving.
- **DO NOT** sit on the engine box, seat backs, transom seating, sun pad, boarding platform or gunwales while the boat is underway. You could fall overboard and be hit by the propeller, or another boat.
- **DO NOT** allow objects, arms or legs, or any other body parts to hang over the bow or gunwales. Stay within the boat.
- Passengers should not sit in locations that obstruct the operator's visibility.
- Persons and gear should be stowed in a way that distributes weight appropriately and in a manner that trims the boat properly (pitch angle). Excessive weight at either the bow or the stern relative to one another can cause trim problems leading to reduced driver visibility, erratic steering, loss of control, or bow submergence and flooding/swamping.
- Passengers should be well aware of emergency equipment and instructed in its use.
- Passengers should assist with lookout duties and notify the operator of any approaching watercraft or potentially unsafe conditions to provide assistance with collision avoidance.

## Carbon Monoxide Safety

Carbon Monoxide (CO) is a deadly, colorless and odorless gas produced by all engines and fuel-burning appliances. Even with the best boat design and construction, plus the utmost care in inspection, operation and maintenance, hazardous levels of carbon monoxide may be present in or near the boat under certain conditions. The boat owner, operator, as well as all boat occupants, must understand the dangers of carbon monoxide and must comply with all safety recommendations/requirements.

## ⚠ DANGER

Carbon monoxide (CO) can cause brain damage or death. Engine and generator exhaust contains odorless and colorless carbon monoxide gas. Carbon monoxide will be around the back of the boat when engines or generators are running. Move to fresh air if you feel nausea, headache, dizziness, or drowsiness.


- **DO NOT** allow people to be on or near the swim platform or in the water near the swim platform while the engine is running. Carbon monoxide will exist around the back of the boat when engines are running.
- **DO NOT** operate the engine in a confined space or while the boat is tethered to another vessel.
- **DO NOT** go under the boat cover while the engine is running or shortly after the engine has been running. Carbon monoxide may be trapped under the cover. It is important to remove the cover and/or ventilate the area before going under the boat cover.
- **DO NOT** “platform/teak” surf or platform drag. Carbon monoxide will exist in high concentrations in the vicinity of the swim platform near the water while the engine is running. The USCG has deemed platform dragging as a dangerous and hazardous activity which should be prohibited, as it can result in injury or death.
- In the event that someone exhibits the symptoms of carbon monoxide exposure (nausea, headache, dizziness, or drowsiness), have them breathe fresh air and, if necessary, immediately seek medical attention.

**Hazardous boating situations involving carbon monoxide include:**




*Operating with high bow angle.*

*Blockage of boat exhaust by obstruction.*

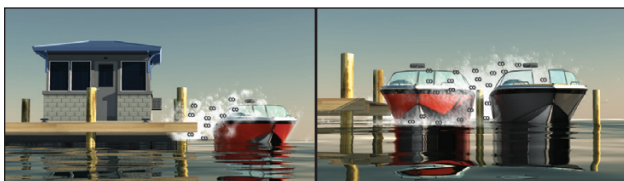

*Exhaust traveling along obstruction.*

*Exhaust(s) from other vessels in confined areas.*

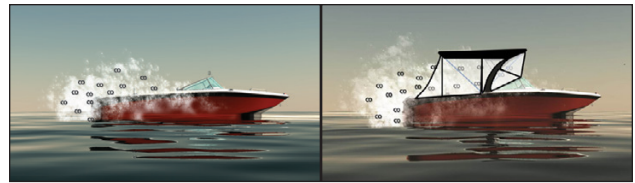

*Operating at slow speed or while dead in the water.*

*Operating with canvas top and side curtains without ventilation.*

For the most current information on carbon monoxide, either call, write or visit online any of the following:

### **United States Coast Guard**

Office of Boating Safety (CG-5422)

2100 Second Street SW STOP 7581

Washington, DC 20593-7581

[www.uscgboating.org/safety/carbon\\_monoxide.aspx](http://www.uscgboating.org/safety/carbon_monoxide.aspx)

### **NMMA**

601 Pennsylvania Avenue NW, Suite 320 North

Washington, DC 20004

312-946-6200

[www.nmma.org](http://www.nmma.org)

### **American Boat & Yacht Council, Inc.**

613 Third Street, Suite 10

Annapolis, MD 21403

410-956-4460

[www.abycinc.org](http://www.abycinc.org)

## Proper Loading

## ⚠ WARNING

**DO NOT** overload your boat. Overloading or uneven loading can cause loss of control, capsizing, or swamping, which may lead to death or serious injury. Adhere to the load capacity plate restrictions, and always account for persons, gear, and all non-factory-installed ballast or other equipment.

Your boat is equipped with a maximum load capacity plate indicating the maximum acceptable load as determined by the manufacturer following certain Federal guidelines. In addition to following these weight guidelines, it is critical that you properly distribute this weight throughout the boat. If too much weight is placed in one area it can have serious impact on the boat's handling and control, which has the potential to lead to injury or death.

The load capacity plate is used by boat manufacturers participating in the National Marine Manufacturers Association (NMMA) certification program. Your manufacturer has submitted your model for inspection and compliance with their guidelines. The maximum number

of persons allowed on the boat has been determined by the manufacturer and displayed on the capacity plate. (Additional information regarding weight distribution appears in the *Get Ready* section of this owner's manual.) This information on the capacity plate applies under normal conditions, and special care must be used in any abnormal conditions. Check the capacity plate on your boat and abide by these limits.

The capacity plate has the following information permanently printed on it:

- *The total weight of persons, gear and other items which the boat is capable of carrying under normal conditions.*
- *NOTE: This weight must include any added ballast above and beyond boat manufacturer's factory-installed ballast system(s), such as the manufacturer's-approved, optional Plug 'n Play (which has been factored into the maximum capacity) or any other added, but unapproved ballast.*

## ⚠ WARNING

Any non-factory-installed ballast must be properly secured to prevent injury.

## ⚠ WARNING

**DO NOT** fill the bilge area with water. Excessive water in the bilge can cause changes in boat trim and reduce boat stability which may lead to submergence or capsizing.

## Weighting The Boat During Watersport Activities

Although water intrusion and waves spilling inside a boat are obvious boating hazard, such hazards can be increased when weighting your boat for water sports such as wakeboarding or wake surfing. As wakeboarding has evolved, ballast systems have been developed to add weight and increase the size of the wake. The simplest ballast system on the market is the water ballast type, such as the "FAT SAC." The quest for the largest wake has caused some boat operators to excessively overload their boats. It is not uncommon to see operators use aftermarket ballast systems and then put additional people and gear in their boat. Be advised that this practice can lead to overloading your boat which may lead to any of the following: changes in handling and performance; capsizing, flooding, and sinking; boat occupants going overboard. **DO NOT** overload your boat.

Always be aware of the load in your boat and do not load the boat in excess of the listed capacity. Each boat has a maximum capacity label displaying the maximum weight of people, gear and ballast that can be placed in the boat.

When loading your boat, give attention to the effect that the load distribution has on the boat's trim angle. Trim angle is the technical term for the up or down pitch angle of your boat (also known as the "bow up" or "bow down" angle). The fore and aft load distribution of weight, passenger, and gear can affect the running trim angle of the boat.

- Excessive weight placed in the stern of the boat can cause the inability to get on plane, high bow-up angles, and can lead to steering difficulties. High bow-up angles can be dangerous due to the reduction in the operator's forward visibility which can lead to collisions and groundings. High bow-up angles cause longer transition times from displacement mode (slow velocity, 0 to 5 mph) to planing speeds (18 to 20 mph and above). During transition, it is important that the boat operator pays attention so that they are able to see forward and that the time in transition (or in the "hump" speed region) is minimized.
- Excessive weight placed in the bow of the boat can lead to very flat planing trim angles which may lead the boat to turn aggressively, unpredictably, and without steering input. The phenomenon of yaw instability is caused by heavy bow weights and running very flat (bow down or flat trim angles). This can occur with excessive weight in the bow compared to weight in the stern of the boat. Another ill effect of too much bow weight in comparison to stern weight is that with extremely heavy bow loads, the boat's bow may dive or submerge when coming off plane (decelerating rapidly or encountering waves/wakes at slow speed). If the bow submerges, then water will enter and flood your boat.
- When encountering conditions which may lead to bow diving or bow submergence, it is recommended to accelerate the boat before the wave/wake in order to help raise the bow and get over the wave/wake.
- If the bow submerges, the recommended action is to reduce throttle to stop forward speed, get passengers to move aft, and turn on the bilge pump.

It is the boat operator's responsibility to tell passengers to move to other seats on the boat, so as to not overload the stern or bow of the boat, nor restrict the boat operator's forward visibility. (See the *Get Ready* chapter of this manual for additional information.) There is no single recommended seating or load distribution for all conditions. Experience with your boat will allow you to determine where to properly allow passengers and gear to be placed.



## **⚠ WARNING**

Excess and improper loading of bow area forward of windshield may cause water influx, operating instability, and loss of control resulting in injury or death. Bow Capacity Limit - X persons or XXX lbs. person, gear and ballast. This is posted separately on your boat but still included in overall capacity. Use good judgment when weighting your boat for any towed water sports.

## **Visibility of the Operator**

The operator of the boat is responsible, by law, to “maintain a proper lookout by sight and hearing.” The operator must ensure that they have appropriate visibility for safe operation. No passengers or equipment should block the operator’s view, including the view of other boats, skier(s), rider(s), swimmer(s), or anyone or anything else in the water. Even momentary interference can result in the driver’s inability to respond to a situation that requires avoidance of another vessel or submerged or partially submerged object(s).

## **⚠ WARNING**

Visibility from the seated position at the helm station is limited. Operation from a standing position may be necessary.

Look carefully before turning, especially when you are turning around to pick up a fallen skier/rider. Other boats in your vicinity may not necessarily be following the Rules of the Road. Be alert and keep a visual check for other boats in and around your intended path. Do not turn or maneuver your boat without first checking that it is clear to do so. Failure to look before turning can result in an encounter with another boat where neither boat has enough time to avoid a collision. This situation can develop very quickly if you fail to look first and turn in front of another oncoming boat.

## **⚠ WARNING**

Obstructed visibility can cause death or serious injury. The operator must maintain clear visibility at all times while operating the boat. Arrange passengers and equipment appropriately or designate a passenger to assist when visibility is limited.

## **Boating Under the Influence**

## **⚠ WARNING**

Operating the boat or boating under the influence of alcohol and/or drugs can cause serious injury or death. Alcohol and drugs slow your reaction time and impair your judgment. Do not operate a boat or allow passengers to boat while under the influence of alcohol and/or drugs.

Boating under the influence of alcohol or drugs can be deadly. Alcohol and/or drug use is the leading contributing factor to all recreational boating fatalities. Alcohol and drugs can increase your reaction time and impair your judgment. Combined with the sun, wind, waves, and noise of other watercraft, the effects of drugs and alcohol can be increased and can significantly increase your reaction time. As the owner/operator, you are responsible for the alcohol/drug use and onboard behavior of your passengers. Additionally, civil lawsuits in cases of property damage or injury/death to others can result in significantly higher verdicts when alcohol or drugs are allowed.

## **⚠ WARNING**

Impaired operation may result in severe personal injury or death. Federal and state laws prohibit operating a boat under the influence of alcohol and other drugs. If the operator’s blood alcohol content is above the legal limit, violators are subject to fines and may go to jail. Violators may also lose automobile driving privileges.

## **Product Misuse**

Misuse of the product or use of it in a manner for which it was never intended can create dangerous situations. The boat operator and passengers are responsible for using the product safely and as intended. The driver must operate the boat in a manner that ensures the safety of all passengers. If you or your passengers are unsure about the proper use of the product, unsure about performing certain boating maneuvers or are unsure about a particular water activity, refer to this owner’s manual or contact a knowledgeable source, such as your local dealer, the US Coast Guard, or your local boating authority.

## **Reporting Accidents**

Boat operators may be required by law to file a Boating Accident Report with their state boating law enforcement agency or local authority, the USCG, or their country’s

boating law enforcement agency when their boat is involved in certain boating accidents. A boating accident must be reported if there is a loss or probable loss of life or a personal injury requiring medical attention beyond first aid. In these situations, a formal report must generally be filed within 48 hours of the accident. Also, a boating accident must be reported for accidents when damage exceeding \$500 is incurred, or there is a complete loss of the boat. In these situations, a formal report must generally be filed within 10 days. If any of these events occur, seek further assistance from local law enforcement personnel. Please note that the submittal of a report is the responsibility of the boat owner. This requirement is different than laws associated with the reporting of automobile accidents.

---

## Rendering Assistance

If you see a distress signal or suspect a boat is in trouble, you must assume it is a real emergency and render assistance immediately. By law, the operator in charge of the craft is obligated to provide assistance to any individual in danger, presuming assistance can be safely provided. Failure to render assistance can result in a fine and/or imprisonment.

The 1971 Boating Safety Act grants protection to a “Good Samaritan” boater providing good faith assistance and absolves a boater from any civil liability arising from such assistance.

---

## Hazardous Conditions

Every waterway poses hazards that should be avoided. You will be best prepared to avoid these hazards if you are familiar with the waterway where you are boating. Whenever possible, familiarize yourself with navigation charts, depth charts, and waterway maps before boating.

The following information outlines some of the most common hazards which may be encountered:

---

### **Shallow Water Operation**

Shallow water brings on obvious hazards such as sand bars, stumps, rocks, etc. Know the area in which you will be operating the boat. Grounding the vessel or striking submerged objects can result in serious injury or death and can cause severe damage to your watercraft. At high speed, this can cause rapid deceleration or stop your boat abruptly, which may cause occupants to impact the interior of the boat or be ejected. Stick to deeper water whenever possible, and if you must travel in shallow water, proceed at low speed and post a lookout.

Know the minimal depth your boat can safely travel.

---

### **Warning Markers**

Learn to recognize the different buoys and day markers; they are used as the signposts of the waterways identifying navigable routes and water hazards. It is a good idea to ask local authorities about hazard areas and if they are marked. Stay within boundaries and clear of hazards.

---

### **Weeds**

Weeds can generally be a threat to a boat’s engine and other components on the boat. If weeds wrap around the propeller, they can create vibration in the engine. They also can restrict water intakes or clog the water filter, causing the engine to overheat. Learn to recognize the typical normal operating temperature range for your engine. If temperature rises high above normal, then check for blockage of the engine cooling water system.

## NOTICE

Weeds can sometimes be removed by shifting to NEUTRAL, pausing for a moment, then shifting to REVERSE to unwind the weeds from the propeller.

---

### **Dam Spillways**

The area around dam spillways is very hazardous and conditions can change rapidly. Keep clear of the spillways and areas below dams. Currents created by spillways can draw in objects, including your boat.

---

### **Restricted Areas**

Before boating, check with Local, State, and Federal authorities to identify restricted areas. Be aware that the U.S. Coast Guard enforces strict limits on watercraft near U.S. military vessels and sites.

---

### **Weather/Seas**

Learn and understand weather patterns and signs of change. Bad weather can cause an uncomfortable and unsafe situation. If a storm approaches, seek a safe harbor. Check forecasts before getting underway and continue to monitor conditions while on the water.

---

## Environmental Concerns

As a boater, you already appreciate nature’s beauty and the peace of the great outdoors. It is a boater’s responsibility to protect the natural environment by keeping waterways clean.

---

### **Foreign Species**

If you trailer your boat from lake to lake, you have the potential of unknowingly introducing a foreign aquatic species from one lake to the next. It is important to thoroughly clean the

bottom of the boat below the water line, remove all weeds and algae, and drain the bilge and all ballast tanks before launching the boat in a new body of water. Check local, state, country agencies as to laws and regulations.

The boat may be equipped with a specialized flush kit designed to streamline the cleaning of the bilge and ballast system after outings—refer to the *How It Works* chapter of this manual for more information.

---

## Fuel/Oil Spillage

The spilling of fuel or oil into our waterways contaminates the environment and is dangerous to wildlife. **DO NOT EVER** discharge or dispose of fuel, oil or other chemicals into the water; it is prohibited and can result in fines. These are three common, accidental types of discharge:

- During initial fueling of a nearly empty tank
- Overfilling the fuel tanks
- Pumping contaminated bilge water

## WARNING

Fumes from rags can collect in the bilge and pose an extremely hazardous fire and explosion risk, which can result in injury or death. Never store rags used to wipe up fuel or solvent spills in the boat. Dispose of rags properly ashore.

---

## Discharge/Disposal of Waste

Waste means all forms of garbage, plastics, recyclables, food, wood, detergents, sewage and even fish parts in certain waters – in short, nearly everything. We recommend you bring back everything you take out with you for proper disposal ashore.

---

## Excessive Noise

Noise means engine noise, radio noise, loud conversation, or even yelling. Many bodies of water have adopted noise limits. Noise can carry a considerable distance on water, especially at night. Be sure to follow regulations and be courteous.

---

## Speed/Wake/Wash

Be alert for **NO WAKE** zones. You are responsible for any damage or injury caused by your wake/wash. Prior to entering a **NO WAKE** zone, reduce throttle, come off plane to the slowest steerable speed. Use caution when operating around smaller crafts, in channels and marinas, and in congested areas.

Some states and boating areas have imposed speed limits for the operation of boats, including, but not limited to, no-wake zones. Check local, state, and federal agencies as to laws and regulations. The U.S. Coast Guard and local boating authorities are excellent sources for this information, which can include penalties for failure to observe the requirements.

---

## Exhaust Emissions

Increased exhaust (hydrocarbon) emissions pollute our water and air. Keep your engine tuned and boat hull clean for peak performance. Consult your Malibu dealer for information.

---

## Paints

If your boat is kept in water where marine growth is a problem, the use of anti-fouling paint may reduce the growth rate. Be aware of environmental regulations that may govern your paint choice. Contact your local boating authorities for information.

---

## Cleaning Agents

Household cleaners should be used sparingly and not discharged into waterways. Never mix cleaners and be sure to use plenty of ventilation in enclosed areas while cleaning your boat. **DO NOT** use products which contain phosphates, chlorine, solvents, non-biodegradable or petroleum-based products. Refer to the Care and Maintenance section in this manual for more information.

---

## MARPOL Treaty

The USCG enforces the International Convention for the Prevention of Pollution from ships, commonly referred to as the MARPOL Treaty (Marine Pollution). This treaty prohibits the overboard dumping of all ship-generated plastics, chemicals, garbage and oil.



# ON-PRODUCT WARNING DECALS

Warning decals are placed at specific locations on your Malibu boat at the time of manufacture to alert you to potential hazards that may not be obvious. These decals also indicate how to avoid these hazards. Warning decals should never be removed and must remain legible. If you suspect a decal is missing, or if a decal becomes damaged or becomes unreadable (damaged, faded, or sun bleached), contact your dealer for replacement.



It is the responsibility of the boat owner and occupants of the boat to understand and comply with all warning decals and safety recommendations/requirements. The driver of the boat and the boat owner are responsible for the proper operation of the boat and the safety of the occupants of the boat. Failure to adhere to and comply with the on-product warning decals and safety statements decal as dangers, warnings, and cautions that appear in this manual can lead to serious injury, or death, as well as property damage. **READ AND ADHERE TO ALL WARNING PLATES AND DECALS** from bow to stern, including those installed inside the engine compartment, lockers, and under seating.

## Warning Decals – Response TXi

### 1. Windshield




### 2. Walk-Thru and Lounge

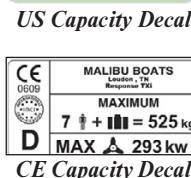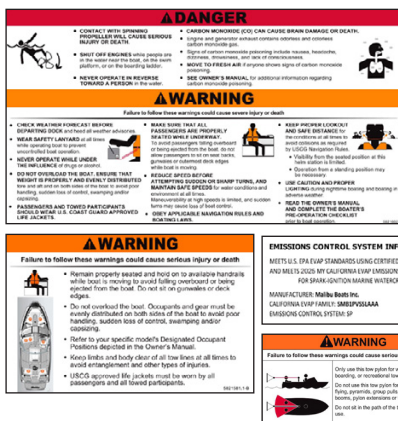

### 2a. Observer Area




(Canada Only)

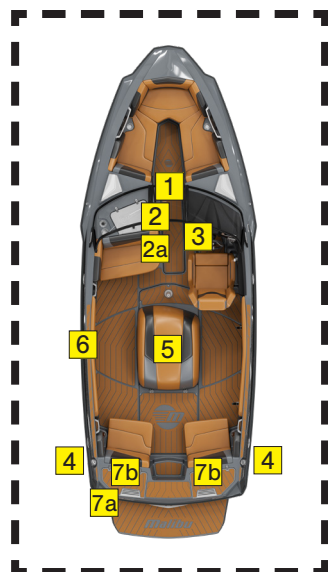

### 2a. Portable Fire Extinguisher



 
### 3. Helm




(Canada Only)

### 4. Fuel Fill(s)

 

(Canada Only)

### 5. Engine Compartment

 

(Canada Only)

### 6. Ski Tower (if equipped)



### 7. Transom



#### 7a. Transom (Port)



#### 7b. Transom Seating



# Warning Decals — Wakesetter and M-Series (US & CE)

## 1. Windshield

(model-specific)

### ▲ WARNING

Failure to follow these warnings could cause serious injury or death



REMAIN PROPERLY SEATED AND HOLD ON TO AVAILABLE HANDRAILS while boat is moving to avoid falling overboard or being ejected from the boat. Do not sit on gunwales or deck edges. USCG APPROVED LIFE JACKETS must be worn by all passengers and on all towed participants. ENSURE WINDSHIELD DOOR IS CLOSED WHILE UNDERWAY.



DO NOT EXCEED THE BOW CAPACITY of 3 persons or 500 pounds. Overloading the bow of the boat can cause loss of control, swamping and/or capsizing. DO NOT OBSTRUCT OPERATOR VISIBILITY. Operators must have a clear view in front of them to avoid collisions.

5821582.1-A

## 2. Walk-Thru

### ▲ DANGER

- CONTACT WITH SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH.
- SHUT OFF ENGINES while people are in the water near the boat, on the swim platform, or on the boarding ladder.
- NEVER OPERATE IN REVERSE TOWARD A PERSON in the water.
- CARBON MONOXIDE (CO) CAN CAUSE BRAIN DAMAGE OR DEATH.
- Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
- Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.
- MOVE TO FRESH AIR if anyone shows signs of carbon monoxide poisoning.
- SEE OWNER'S MANUAL for additional information regarding carbon monoxide poisoning.



### ▲ WARNING

Failure to follow these warnings could cause severe injury or death

- CHECK WEATHER FORECAST BEFORE DEPARTING DOCK and heed all weather advisories.
- WEAR SAFETY LANYARD at all times while operating boat to prevent uncontrolled boat operation.
- NEVER OPERATE WHILE UNDER THE INFLUENCE of drugs or alcohol.
- DO NOT OVERLOAD THE BOAT. ENSURE THAT WEIGHT IS PROPERLY AND EVENLY DISTRIBUTED fore and aft and on both sides of the boat to avoid poor handling, sudden loss of control, swamping and/or capsizing.
- PASSENGERS AND TOWED PARTICIPANTS SHOULD WEAR U.S. COAST GUARD APPROVED LIFE JACKETS.
- MAKE SURE THAT ALL PASSENGERS ARE PROPERLY SEATED WHILE UNDERWAY. To avoid passengers falling overboard or being ejected from the boat, do not allow passengers to sit on seat backs, gunwales or outermost deck edges while boat is moving.
- REDUCE SPEED BEFORE ATTEMPTING SUDDEN OR SHARP TURNS. AND MAINTAIN SAFE SPEEDS for water conditions and environment at all times. Maneuverability at high speeds is limited, and sudden turns may cause loss of boat control.
- OBEY APPLICABLE NAVIGATION RULES AND BOATING LAWS.
- KEEP PROPER LOOKOUT AND SAFE DISTANCE for the conditions at all times to avoid collisions as required by USCG Navigation Rules.
- Visibility from the seated position at this helm station is limited.
- Operation from a standing position may be necessary.
- USE CAUTION AND PROPER LIGHTING during nighttime boating and boating in adverse weather.
- READ THE OWNER'S MANUAL AND COMPLETE THE BOATER'S PRE-OPERATION CHECKLIST prior to boat operation.



EMISSIONS CONTROL SYSTEM INFORMATION  
MEETS U.S. EPA EMISSION STANDARDS USING CERTIFIED COMPONENTS  
AND MEETS 2020 MCA CALIFORNIA EMISSION REGULATIONS  
FOR SPARK-IGNITION MARINE WATERCRAFT  
MANUFACTURER: Malibu Boats Inc.  
CALIFORNIA EMISSIONS: TIER 3 EMISSIONS  
EMISSIONS CONTROL SYSTEM: SP

### ▲ WARNING

Failure to follow these warnings could cause severe injury or death  
DO NOT USE THIS TOW POINT FOR ACTIVITIES SUCH AS KITE FLYING, PARASAILING, KITE SURFING, OR TOWABLE TOYS, such as water skis.

MAXIMUM CAPACITIES  
18 PERSONS OR 2538 LBS.  
2538 POUNDS PERSON, GEAR

MANUFACTURER: MALIBU BOATS, LLC  
MODEL: Wakesetter 26 LSV  
LOUISON, TN  
DESIGN COMPLIANT WITH NMEA REQUIREMENTS BELOW AT  
WEIGHTED, WIND, RESISTANCE & FUEL CONSUMPTION CORRECTIONS  
NMEA INTERNATIONAL ASSOCIATION 5821582.1-B

US Capacity Decal  
(model-specific)

GROUP	CATEGORY	C	D
	NUMBER OF PERSONS	9	18
	MAX (lbs)	775	1450
	MAX POWER	477 kw	

CE Capacity Decal  
(model-specific)

### ▲ WARNING

Failure to follow these warnings could cause serious injury or death

- Remain properly seated and hold on to available handrails while boat is moving to avoid falling overboard or being ejected from the boat. Do not sit on gunwales or deck edges.
- Do not overload the boat. Occupants and gear must be evenly distributed on both sides of the boat to avoid poor handling, sudden loss of control, swamping and/or capsizing.
- Refer to your specific model's Designated Occupant Positions depicted in the Owner's Manual.
- Keep limbs and body clear of all tow lines at all times to avoid entanglement and other types of injuries.
- USCG approved life jackets must be worn by all passengers and all towed participants.

### ▲ WARNING

Failure to follow these warnings could cause serious injury or death

- Remain properly seated and hold on to available handrails while boat is moving to avoid falling overboard or being ejected from the boat. Do not sit on gunwales or deck edges.
- Do not overload the boat. Occupants and gear must be evenly distributed on both sides of the boat to avoid poor handling, sudden loss of control, swamping and/or capsizing.
- Refer to your specific model's Designated Occupant Positions depicted in the Owner's Manual.
- Keep limbs and body clear of all tow lines at all times to avoid entanglement and other types of injuries.
- USCG approved life jackets must be worn by all passengers and all towed participants.



US Seating Guide (model-specific)

CE Seating Guide (model-specific)

## 2a, 2b. Portable Fire Extinguisher



- 2a. All Models — Observer Seat
- 2b. 26 LSV Only — Additional On Bow Seat

## 3. Helm

### ▲ WARNING

GASOLINE VAPORS CAN EXPLODE BEFORE STARTING ENGINE.  
- OPERATE BLOWER for 4 minutes.  
- CHECK THE ENGINE COMPARTMENT for gasoline vapors by sight and smell.  
- OPERATE BLOWER to clear gasoline vapors from engine compartment when engine is idling, while below cruising speed and after stopping engines.

## 4. Engine Compartment

### ▲ CAUTION

The engine compartment is protected by a fire extinguishing system. Avoid inhalation of potentially toxic combustion byproducts. If a fire extinguishing system discharge occurs, ventilate space before entering.

### ▲ WARNING

Leaking fuel is a fire and explosion hazard. Inspect system regularly. Examine fuel tanks for leaks or corrosion at least annually.

Fixed fire extinguishing system should be suitable for compartment volume of 72 cu ft. This is based on gross compartment volume less permanently installed tankage in this compartment.

### ▲ WARNING

Engine compartment may contain combustible vapors. To avoid serious injury or death from fire or explosion, ensure engine closelocks and engine strainer access plate (if equipped) are in place before starting engine. Use caution when opening and accessing components when engine is hot.

## 5. Fuel Fill(s)

### ▲ WARNING

Contents can be under pressure. Avoid serious injury or death from fire or explosion. Open slowly in well-ventilated area. No smoking or open flames. The use of E-15 fuel in this vessel is prohibited by law. See Owner's Manual for complete explanation.

### ▲ CAUTION

To avoid injury or boat damage: Do not exceed max load capacity of 300 LBS uniformly distributed in board locker. Do not climb in, sit in, stand on, or jump into or out of the board locker. Space not intended for ballast.

5974301.1

## 4a. Board Locker (if equipped)

## 6. Transom

### ▲ DANGER

CONTACT WITH A SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH. STAY CLEAR OF BOAT AND STAY OFF SWIM PLATFORM WHILE ENGINE IS RUNNING.

CARBON MONOXIDE (CO) CAN CAUSE BRAIN DAMAGE OR DEATH. Engine exhaust contains odorless and colorless carbon monoxide gas.

Carbon monoxide will be around the back of the boat while engines or generators are running. MOVE TO FRESH AIR, if you feel nausea, headache, dizziness, or drowsiness.

## 6a. Transom, Port

### NOTICE

ENGINE FLUSH INLET. ENSURE CAP IS TIGHT FOR PROPER COOLING SYSTEM PERFORMANCE.

## 6b. Transom, Starboard (if equipped)

### NOTICE

AQUATIC INVASIVE SPECIES BALLAST FLUSH INLET. ENSURE CAP IS TIGHT.

## 6c. Transom Seating

### ▲ WARNING

To avoid serious injury or death seat location not intended for use while engine is running.

### ▲ CAUTION

Seat not intended as a step. To reduce risk of falling/injury use center entry step pads.

(26 LSV Only)

## 7. Powered Swim Step (if equipped)

### ▲ WARNING


Prior to operating the swim step, the user needs to confirm that all hands and feet are clear of the swim step mechanical components.

## 8a. Ascend Pro Tower (if equipped)

▲ CAUTION  
PINCH POINT



## 8b. Ascend Tower (if equipped)

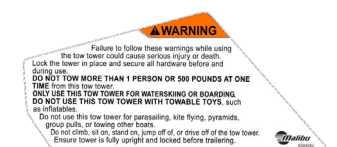

## 8c. Ski Tower (if equipped)





# Warning Decals — Wakesetter and M-Series (Canada)

## 1. Windshield

(model-specific)

### ▲ WARNING

Failure to follow these warnings could cause serious injury or death



**REMAIN PROPERLY SEATED AND HOLD ON TO AVAILABLE HANDRAILS** while boat is moving to avoid falling overboard or being ejected from the boat. Do not sit on gunwales or deck edges. **USCG APPROVED LIFE JACKETS** must be worn by all passengers and on all towed participants. **ENSURE WINDSHIELD DOOR IS CLOSED WHILE UNDERWAY.**



**DO NOT EXCEED THE BOW CAPACITY** of 3 persons or 500 pounds. Overloading the bow of the boat can cause loss of control, swamping and/or capsizing. **DO NOT OBSTRUCT OPERATOR VISIBILITY.** Operators must have a clear view in front of them to avoid collisions.

5821582.1-A

## 2. Walk-Thru

### ▲ DANGER

- **CONTACT WITH SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH.**
- **SHUT OFF ENGINES** while people are in the water near the boat, on the swim platform, or on the boarding ladder.
- **NEVER OPERATE IN REVERSE TOWARD A PERSON** in the water.
- **CARBON MONOXIDE (CO) CAN CAUSE BRAIN DAMAGE OR DEATH.**
- Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
- Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness, and lack of consciousness.
- **MOVE TO FRESH AIR** if anyone shows signs of carbon monoxide poisoning.
- **SEE OWNER'S MANUAL** for additional information regarding carbon monoxide poisoning.



### ▲ WARNING


Failure to follow these warnings could cause severe injury or death

- **CHECK WEATHER FORECAST BEFORE DEPARTING DOCK** and heed all weather advisories.
- **WEAR SAFETY LANYARD** at all times while operating boat to prevent uncontrolled boat operation.
- **NEVER OPERATE WHILE UNDER THE INFLUENCE** of drugs or alcohol.
- **DO NOT OVERLOAD THE BOAT. ENSURE THAT WEIGHT IS PROPERLY AND EVENLY DISTRIBUTED** fore and aft and on both sides of the boat to avoid poor handling, sudden loss of control, swamping and/or capsizing.
- **PASSENGERS AND TOWED PARTICIPANTS SHOULD WEAR U.S. COAST GUARD APPROVED LIFE JACKETS.**
- **MAKE SURE THAT ALL PASSENGERS ARE PROPERLY SEATED WHILE UNDERWAY.** To avoid passengers falling overboard or being ejected from the boat, do not allow passengers to sit on seat backs, gunwales or outmost deck edges while boat is moving.
- **REDUCE SPEED BEFORE ATTEMPTING SUDDEN OR SHARP TURNS, AND MAINTAIN SAFE SPEEDS** for water conditions and environment at all times. Maneuvering at high speeds is limited, and sudden turns may cause loss of boat control.
- **KEEP PROPER LOOKOUT AND SAFE DISTANCE** for the conditions at all times to avoid collisions as required by USCG Navigation Rules.
- **Operation from a standing position** may be necessary.
- **USE CAUTION AND PROPER LIGHTING** during nighttime boating and boating in adverse weather.
- **READ THE OWNER'S MANUAL AND COMPLETE THE BOATER'S PRE-OPERATION CHECKLIST** prior to boat operation.

5821582

CANADIAN COMPLIANCE NOTICE AVIS DE CONFORMITE CANADIEN	
MAXIMUM RECOMMENDED SAFE LIMITS LIMITES MAXIMALES DE SECURITE RECOMMANDEES	
	1850 kg 2976 lbs/lb
	1450 kg 3197 lbs/lb
THE MAXIMUM RECOMMENDED SAFE LIMITS MUST HAVE TO BE REDUCED IN ADVERSE SEA AND WEATHER CONDITIONS. LES LIMITES MAXIMALES DE SECURITE RECOMMANDEES PEUVENT DEVOIR ETRE REDUITES DANS LES CONDITIONS DE MER ET DES CONDITIONS METEOROLOGIQUES DIFFICILES.	
CAUTION: THE MAXIMUM RECOMMENDED SAFE LIMITS MUST HAVE TO BE REDUCED IN ADVERSE SEA AND WEATHER CONDITIONS. ATTENTION: LES LIMITES MAXIMALES DE SECURITE RECOMMANDEES PEUVENT DEVOIR ETRE REDUITES DANS LES CONDITIONS DE MER ET DES CONDITIONS METEOROLOGIQUES DIFFICILES.	
MALIBU BOATS (MB2) LOUDBOAT, TN, USA MODEL/MODELE	
Wakesetter 26 LSV	

### Canada Capacity Decal (model-specific)

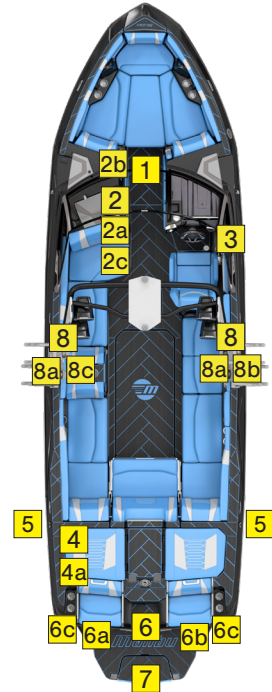

## 2a, 2b. Portable Fire Extinguisher



- 2a. All Models — Observer Seat
- 2b. 26 LSV Only — Additional On Bow Seat

## 2c. Observer Area

### ▲ WARNING

NOT FOR GASOLINE TANK STORAGE

### ▲ MISE EN GARDE

NE PAS ENTREPOSER DE RESERVOIR A ESSENCE DANS CET ESPACE

## 3. Helm

### ▲ WARNING

**GASOLINE VAPORS CAN EXPLODE, IF BEFORE EXTINGUISHING:**  
• OPERATE BLOWER for 5 minutes.  
• CHECK THE ENGINE COMPARTMENT for gasoline vapor.  
• OPERATE BLOWER for 5 minutes.  
• OPERATE BLOWER for 5 minutes.  
• OPERATE BLOWER for 5 minutes.

### ▲ MISE EN GARDE

**LES VAPEURS D'ESSENCE PEUVENT EXPLODER, ASSURANT DES BLESSURES OU LA MORT AVANT DE S'EXTINGUER:**  
• Allumez le ventilateur pendant 5 minutes.  
• Vérifiez la présence de vapeurs d'essence dans le compartiment moteur.  
• Allumez le ventilateur pendant 5 minutes.  
• Allumez le ventilateur pendant 5 minutes.

## 4. Engine Compartment

Fixed fire extinguishing system should be suitable for compartment volume of 72 cu ft. This is based on gross compartment volume less permanently installed equipment in this compartment.

### ▲ WARNING

Engine compartment may contain combustible vapors. To avoid serious injury or death from fire or explosion, ensure engine compartments and engine strainer access (if equipped) are in place before starting engine. Use caution when opening and accessing components when engine is hot.

### ▲ CAUTION

The engine compartment is protected by a fire extinguishing system. Avoid inhalation of potentially toxic combustion byproducts. If a fire extinguishing system discharge occurs, ventilate space before entering.

### ▲ WARNING

Leaking fuel is a fire and explosion hazard. Inspect system regularly, examine fuel tanks for leaks or corrosion at least annually.

### ▲ MISE EN GARDE

DANGER DE BLESSURE GRAVE OU DE MORT RESULTANT D'UNE EXPLOSION OU D'UN INCENDIE PROVOQUE PAR UNE FUITE DE CARBURANT. Inspecter le système régulièrement pour s'assurer qu'il n'y a aucune fuite.

## 4a. Board Locker (if equipped)

### ▲ CAUTION

To avoid injury or boat damage: Do not exceed max load capacity of 300 LBS uniformly distributed in board locker. Do not climb in, sit in, stand on, or jump into or out of the board locker. Space not intended for ballast.

## 5. Fuel Fill(s)

### ▲ WARNING

Contents can be under pressure. Avoid serious injury or death from fire or explosion. Open slowly in well-ventilated area. No smoking or open flames.

The use of E-15 fuel in this vessel is prohibited by law. See Owners Manual for complete explanation.

### ▲ MISE EN GARDE

Contenu peut être sous pression. Prévenez les blessures graves ou la mort par le feu ou une explosion. Ouvrir lentement dans une zone bien aérée, ne pas fumer, aucune présence de flammes.

## 6. Transom

### ▲ DANGER

**CONTACT WITH A SPINNING PROPELLER WILL CAUSE SERIOUS INJURY OR DEATH. STAY CLEAR OF BOAT AND STAY OFF SWIM PLATFORM WHILE ENGINE IS RUNNING.**

**CARBON MONOXIDE (CO) CAN CAUSE BRAIN DAMAGE OR DEATH.** Engine exhaust contains odorless and colorless carbon monoxide gas.

Carbon monoxide will be around the back of the boat while engines or generators are running. **MOVE TO FRESH AIR** if you feel nausea, headache, dizziness, or drowsiness.

## 6a. Transom, Port

### NOTICE

ENGINE FLUSH INLET: ENSURE CAP IS TIGHT FOR PROPER COOLING SYSTEM PERFORMANCE

## 6b. Transom, Starboard (if equipped)

### NOTICE

AQUATIC INVASIVE SPECIES BALLAST FLUSH INLET: ENSURE CAP IS TIGHT

## 6c. Transom Seating

### ▲ WARNING

To avoid serious injury or death seat location not intended for use while engine is running.

### ▲ CAUTION

Seat not intended as a step. To reduce risk of falling/injury use center entry step pads (26 LSV Only)

## 7. Powered Swim Step (if equipped)

### ▲ WARNING

Prior to operating the swim step, the user needs to confirm that all hands and feet are clear of the swim step mechanical components

## 8a. Ascend Pro Tower (if equipped)

### ▲ CAUTION

PINCH POINT



## 8b. Ascend Tower (if equipped)

### ▲ WARNING

Failure to follow these warnings while using the tower could cause serious injury or death. Lock the tower in place and secure all hardware before and during use. Do not use the tower for parasailing, kite flying, pyrotechnics, group pulls, or towing other boats. Do not use the tower for water skiing or boarding. Do not use the tower with towable toys, such as inflatables. Do not use the tower for parasailing, kite flying, pyrotechnics, group pulls, or towing other boats. Do not use the tower for water skiing or boarding. Do not use the tower with towable toys, such as inflatables. Do not use the tower for parasailing, kite flying, pyrotechnics, group pulls, or towing other boats. Do not use the tower for water skiing or boarding. Do not use the tower with towable toys, such as inflatables.

## 8c. Ski Tower (if equipped)

### ▲ WARNING

Failure to follow these warnings while using the tower could cause serious injury or death. Lock the tower in place and secure all hardware before and during use. Do not use the tower for parasailing, kite flying, pyrotechnics, group pulls, or towing other boats. Do not use the tower for water skiing or boarding. Do not use the tower with towable toys, such as inflatables. Do not use the tower for parasailing, kite flying, pyrotechnics, group pulls, or towing other boats. Do not use the tower for water skiing or boarding. Do not use the tower with towable toys, such as inflatables.



## BASIC RULES OF THE ROAD

### Boating Regulations

The U.S. Coast Guard (USCG) is the governing authority of the United States waterways and serves to help the boating public. State boating regulations are enforced by local authorities. Owners and users outside of the United States must be cognizant of that country's laws and regulations. You are subject to marine traffic laws and Rules of the Road for both federal and state waterways; you must stop if signaled to do so by enforcement officers and permit them to board if asked.

Review and understand all local, state, federal, and country boating laws.

Increasingly, governmental bodies are establishing new laws, rules and regulations regarding specific water activities. Because of the widespread interest in wakeboarding and wake surfing, the state in which you are wakeboarding/wake surfing may:

- Require operators to stay a specific distance from all shorelines, docks, piers or other structures. That means the channel or body of water will need to be of a defined width to be considered acceptable.
- Require riders engaging in towed watersports to wear a U.S. Coast Guard-approved life jacket.
- Prohibit wakeboarding/wake surfing during the hours between sunset and sunrise.
- Prohibit wake surfing behind a boat with an exposed propeller that extends beyond the boarding platform.
- Prohibit wakeboarding/wake surfing on small bodies of water, i.e., less than fifty (50) acres.
- Even in areas not governed by similar laws, these kinds of requirements and limitations represent a common-sense approach to recreation.

There are many USCG pamphlets available to you. These pamphlets go beyond the contents of this manual and explain Rules of the Road, signal lights, buoys, safety, international and inland regulations. An example is the Ultimate Watersports Handbook you should have received with your new boat, or which can be ordered by contacting WSIA; go to: [www.WSIA.net](http://www.WSIA.net). For more information, contact your local USCG Unit or visit <http://www.uscgboating.org>.

You should be aware of these rules and follow them whenever you encounter another vessel on the water. The rules presented in this manual outline only the most basic of the nautical Rules of the Road and have been provided as a convenience only. Consult your local U.S. Coast Guard Auxiliary (USCGA), Department of Motor Vehicles (DMV)

or local maritime authority for a complete set of rules governing the waters in which you will be using your boat. If you plan to travel—even for a short trip—you would be well-served to contact the regional USCGA or DMV in the area where you will be boating.

The nautical Rules of the Road must be followed to prevent collisions between vessels. Like traffic laws for automobiles, the operator is legally required to follow the rules.

### ⚠ WARNING

Collisions between boats can cause death or serious injury. Keep a proper lookout, safe speed, and follow the nautical Rules of the Road.

### Encountering Another Vessel

Any time two vessels on the water meet one another, one vessel has the right-of-way. It is called the “stand-on” or “privileged vessel.” The vessel which does NOT have the right-of-way is called the “give-way” or “burdened vessel.” These rules determine which vessel has the right-of-way, and accordingly, what each vessel should do.

#### Privileged Vessel

The privileged vessel has the right-of-way and has the duty to continue its course and speed, except to avoid an immediate collision. When you maintain your direction and speed, the other vessel will be able to determine how best to avoid you.


### NOTICE

In general, boats with less maneuverability have right of way over more-agile crafts. You must stay clear of the vessel with right-of-way and pass to their stern.

Sailboats and boats paddled or rowed have the right-of-way over motorboats. Sailboats under power are considered motorboats. Small pleasure craft must yield to large commercial boats in narrow channels.

---

## Burdened Vessel

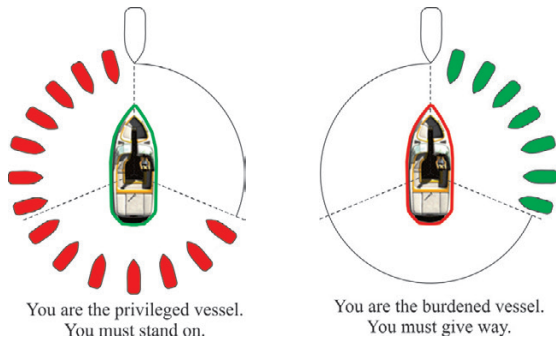


The burdened vessel does not have the right-of-way and has the duty to take positive and timely action to stay out of the way of the privileged vessel. Normally, the burdened vessel should not cross in front of the privileged vessel. The burdened vessel should slow down or change directions and pass behind the other vessel. The burdened vessel operator should always move in such a way that the privileged vessel operator can see what you are doing in ample time to avoid a collision.

---

## Crossing

In crossing situations, the boat to the right from the 12 o'clock to the 4 o'clock position has the right-of-way, and it must hold course and speed. The burdened boat passes behind the privileged boat. Boats going up and down a river have the privilege over boats crossing the river. The illustration depicts a situation in which you are the boat in the center, and you are the privileged vessel. You must hold course and speed. All vessels approaching your vessel from the directions depicted by the red vessels must yield to your boat.

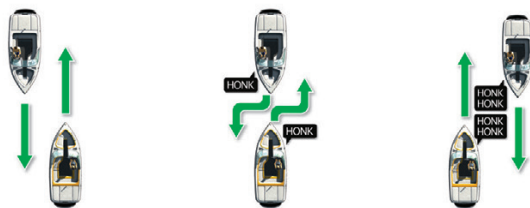

Conversely, the illustration depicts a situation in which you are the boat in the center, and you are the burdened vessel. You must give right-of-way to all vessels coming towards you from the directions shown in green.

---


## Meeting Head-On



When meeting head-on, neither vessel has the right-of-way. Both boats should decrease speed, turn towards their right (starboard side) and pass on their left sides (port-to-port). However, if both boats are clearly on each other's right (starboard) side then, each vessel should sound two short blasts and pass on their right sides (starboard-to-starboard).

---

## Overtaking

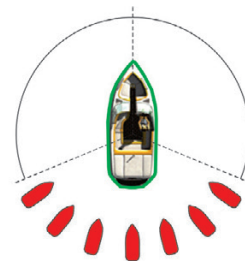

You are the privileged vessel being overtaken.  
Red boats are burdened vessels overtaking.

The boat that is overtaking one ahead of it is the burdened boat and must make any adjustments necessary to keep out of the way of the privileged boat, until the burdened boat is well ahead and clear of the vessel being overtaken.

---

## The General Prudential Rule

The General Prudential Rule regarding right-of-way, is that if a collision appears unavoidable, neither boat has right-of-way. As prescribed in the Rules of the Road, both boats must act to avoid collision.

**Rule 2 in the International Rules says, "In construing and complying with these Rules due regard shall be had to all dangers of navigation and collision and to any special circumstances, including the limitations of the vessels involved, which may make a departure from these Rules necessary to avoid immediate danger."**

---

## Other Rules of the Road

When navigating in narrow channels, you should keep to the right when it is safe and practical to do so. If the operator of a power-driven vessel is preparing to go around a bend that may obstruct the view of other water vessels, the operator


should sound a prolonged blast on the whistle or horn—four to six seconds.

If another vessel is around the bend, it too should sound the whistle or horn. Even if no reply is heard, however, the vessel should still proceed around the bend with caution.

If you navigate this type of waters, you should carry a portable air horn, which is available from local marine supply stores.

---

## Aids to Navigation

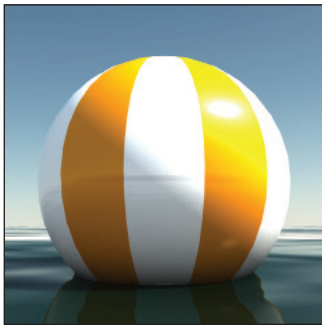

*Spherical Safe Marker Buoy*

Learn to recognize the different buoys and day markers; they are the signposts of the waterways. The United States Aids to Navigation System (USATONS) is the primary marking system used on inland waters, coastal waters and rivers in the United States. This system is maintained by the U.S. Coast Guard (USCG).

There are two primary marking systems in use in the U.S.: the Uniform State Waterway Marking System (USWMS), used on inland waters and maintained by each state, and the Federal Waterway Marking System (FWMS), used on coastal waters and rivers and maintained by the USCG. In addition, the FWMS has two modified systems: the Western River Buoyage, and the Intracoastal Waterway Buoyage. Be sure to check with local authorities on the buoyage system in use in your boating region.

---

## USWMS System

In the USWMS Lateral System, well-defined channels are marked with red and black buoys, and the boat should pass between them.

The USWMS Cardinal System is used when there is no well-defined channel or where an obstruction may be approached from more than one direction. With the cardinal system:

- Pass north or east of **BLACK-TOPPED WHITE** buoy.
- Pass south or west of **RED-TOPPED WHITE** buoy.
- **RED and WHITE VERTICALLY STRIPED** buoy indicates boat should pass outside of the buoy (away from shore).

---

## FWMS System

The FWMS Lateral System is for use on navigable waters except Western Rivers and Intracoastal Waterways. The markings on these buoys are oriented from the perspective of being entered from seaward (the boater is going toward the port). This means that red buoys are passed on the starboard (right) side of the vessel when proceeding from open water into port, and green buoys to the port (left) side.

The right side (starboard) of the channel is marked with **RED**, even numbered buoys.

The left (port) side of the channel is marked with **GREEN**, odd numbered buoys.

The middle of the channel is marked with **RED and WHITE** vertically striped buoys; pass close to these buoys.

Obstructions, channel junctions, etc. are marked with **RED and GREEN** horizontally striped buoys.

A **RED** band at the top means the preferred channel is to the left of the buoy; a **GREEN** top band means the preferred channel is to the right of the buoy.

Day markers are colored and numbered the same as buoys. **RED**, triangular day markers with even numbers mark the starboard side of the channel. **GREEN**, square day markers with odd numbers mark the port side of the channel.

Lights, bells and horns are used on buoys for night or poor visibility conditions. Buoys with unique light flashing characteristics are identified on nautical charts with the specific flashing pattern.

---

## Types of Buoys

There are several types and shapes of buoys. Buoys may be unlighted, lighted, with sound or may have both an audible and a visual signal. Lights, bells and horns are used on buoys for night or poor visibility conditions. Different shapes of buoys are shown following.




*Unlighted Bell Buoy*

*Spar Buoy*

*Nun Buoy*



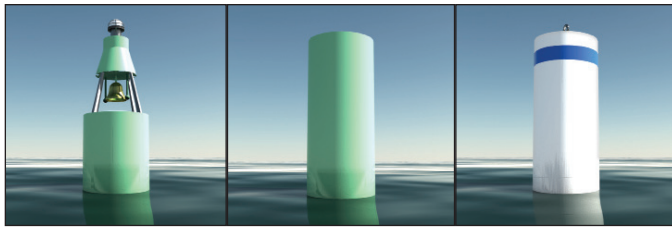

*Lighted Bell Buoy*

*Can Buoy*

*Mooring Buoy*

Buoys with unique light flashing characteristics are identified on nautical charts with the specific flashing pattern.

## Mooring Buoys

The only buoys from which you are permitted to moor are mooring buoys. Mooring buoys are white with a blue horizontal stripe. Mooring to a navigation buoy, regulatory markers or lateral markers is illegal.

## Uniform State Regulatory Markers



*Controlled Area*



*Danger*



*Boats Keep Out*



*Information*

Regulatory markers indicate dangerous or restricted controlled areas. These markers are used to indicate speed zones, areas set aside for particular use, general information and directions.

Regulatory markers are white with orange geometric shapes and also have orange bands near the top and at the water line of the buoy. You must obey regulatory markers.

## Uniform State Waterway Marking System (USWMS)

### Diver's Flag



Used by recreational divers—indicates position. Stay far away from diver flags—someone is underwater in the vicinity.

### Alpha Flag



Worldwide vessels engaged in diving operations—does not indicate diver's position.

### Distress Flag



Indicates fellow boater is in need of assistance.

## Warning Markers



*Skin Diver Warning Flag*

*Swim Area Warning Buoy*

It is a good idea to ask local authorities if there are hazardous areas and how they are marked. Boaters must also recognize the flag designs, which indicate that skin divers are present and keep well clear of the area. Divers underwater cannot be seen. Stay well away from boats or floats displaying Diver Flags.

Watch for swimmers. Swimming areas may not be marked. Steer clear from the area and remain alert.

Navigation markers serve as a means of identifying navigable routes and indicate water hazards. Boaters should become familiar with navigation markers and stay within marked boundaries and clear of hazards.

## Night Running

Operation of your Malibu boat between sunset and sunrise in some locations may be restricted or not allowed at all. It is the responsibility of boat owners and boat operators to verify the laws, rules and regulations regarding nighttime operation for the body of water upon which you are running.

Boats operating between sunset and sunrise (hours vary by state) must use navigational lights. Nighttime operation, especially during bad weather or fog can be dangerous. All Rules of the Road apply at night, but it is best to slow down

and stay clear of all boats, regardless of who has right-of-way. Protect your night vision by avoiding bright lights and have a passenger, if possible, help keep watch for other boats, water hazards and aids to navigation. It is best to proceed slowly at night, as there is always the possibility of unlit boats, floating objects, and fixed objects which will be very difficult to see in time to avoid if you are at planing speeds or above.

There are many light patterns on different types of boats and for boats performing various functions while underway or at anchor. For most applications on recreational boats the following navigation light patterns are applicable.

(NOTE: Information is included here that does not apply to Malibu boats. However, the information is included here to assist Malibu operators in being aware of the navigational lights that may appear on other vessels you may encounter.)

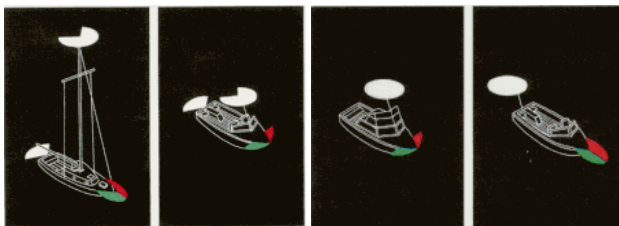


Figure 1

Figure 2

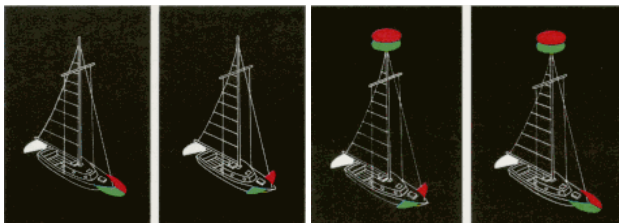


Figure 3

Figure 4

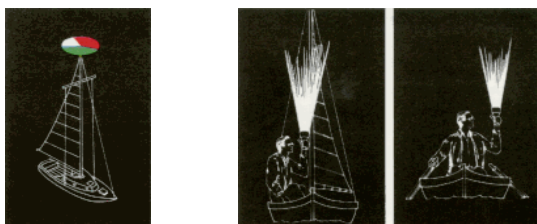


Figure 5

Figure 6

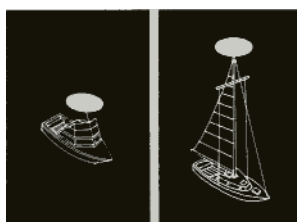


Figure 7

## Figure 1

Motorboats less than 20 meters (65.62 feet) shall exhibit navigation lights as shown in Figure 1. (Note: Two masthead lights are optional for boats under 50 meters. Boats over 50 meters [164 feet] will display two masthead lights.)

## Figure 2

Motorboats of less than 12 meters (39 feet, 4 inches) in length, may show the lights in either Figure 1 or Figure 2. Boats of less than 7 meters (23 feet) whose maximum speed cannot exceed seven (7) knots may exhibit an all-around white light, and, if practicable, sidelights instead of the lights prescribed above, in international waters only.

## Figures 3 & 4

Sailboats and watercraft under oars: Sailboats less than 20 meters (65.62 feet) may exhibit the navigation lights shown in Figures 3 or 4.

## Figure 5

Another option for sailboats is to use a single combination lantern at the top of the mast as shown in Figure 5.

## Figure 6

Sailboats less than 7 meters (22.96 feet) may carry an electric torch or lighted lantern showing a white light to be displayed in sufficient time to prevent collision (see Figure 6). If practicable the lights prescribed for sailboats less than 20 meters should be displayed. Watercraft under oars (such as a canoe) may display the lights prescribed for sailboats, but if not, must have ready at hand an electric torch or lighted lantern (flashlight) showing a white light to be displayed in sufficient time to prevent collision (see Figure 6).

## Figure 7

Anchored boats: Motorboats and sailboats at anchor must display anchor lights. An anchor light for a watercraft less than 50 meters (164 feet) in length is an all-around white light, visible for two (2) miles exhibited where it can best be seen (see Figure 7).

Sailboats operating under machinery, or under sail and machinery, are considered power-driven and must display the lights prescribed for a power-driven boat.

## WATERSPORTS SAFETY

Skiers or riders are obligated to be aware of the same fundamental safety rules as boat operators. If you are new to water skiing, wakeboarding, wake surfing, and other towed watersports, seek certified training before starting. You will find it especially helpful to join a local ski club, World Wakeboard Association, and/or USA Water Ski, when possible.

Always remember that the majority of injuries occurring while water skiing/wakeboarding and other towed watersports are the result of impacts with other objects. Always look where you are going and be aware of what is going on around you.

- When participating in towing watersports, be safe and courteous and follow these guidelines:
- Be considerate to fishermen and others who are sharing the same body of water.
- **DO NOT** perform watersports in congested areas.
- Stay away from navigation markers.
- Stay away from other boats and watersports participants.

### **⚠ DANGER**

Contact with a spinning propeller can cause injury and death. Do not enter or exit the water when the engine is running (ON) and the propeller spinning. **DO NOT** get on the swim platform when the engine is running. **DO NOT** swim towards the back of the boat if the engine is on.

### **⚠ WARNING**

Failure to adhere to these warnings may result in severe injury or death to you and/or others.

- Every towed person must always wear a USCG-approved personal flotation device.
- Always have an experienced driver and a designated observer in the boat while being towed.
- Maintain a distance of at least 100 feet from all other objects, including other boats, piers, rafts, mooring and navigational buoys, pilings, abutments, etc.
- Never water ski, wakeboard or participate in other towed watersports in shallow water, close to shore, or in water where you do not know the depth or what is beneath the surface.
- Never put your arm, head, or any other part of your body through the handle-bridle of the tow line nor wrap the line around any part of the body at any time.

- **DO NOT** participate in watersports while under the influence of alcohol and/or drugs.
- **DO NOT** participate in watersports during inclement weather or on rough water.
- Never water ski, wakeboard or participate in other towed watersports directly in front of other boats who may run over you if you fall.
- Never water ski, wakeboard or participate in other towed watersports at night.
- Never jump from a boat that is moving at any speed.
- Make sure that everyone knows and uses approved towed watersports hand signals.

## Hand Signals



Make sure that everyone knows and uses approved towed watersports hand signals, as shown.

## Towed Person Safety Responsibilities

Most injuries and fatalities that occur on high-performance recreational tow boats occur to the persons being towed (water skiing, kneeboarding, wakeboarding, wake surfing, tubing, etc.). It is the responsibility of the boat operator to pay attention to a multitude of things while utilizing the boat for water tow sports. The towed person has little or no control over their path nor do they have much in the way of protection from impact with obstacles or other boats. Therefore, it is recommended that boat operators, observers, and towed persons communicate effectively and clearly as to their intentions and their surroundings. The main responsibilities for each participant are as follow:

### **Operators should:**

- Assign a passenger to be a designated observer.
- Turn the engine off whenever a person is on the swim platform or in the water near the boat. This is especially important for the area near the back of the boat to avoid propeller injuries.
- Ensure that it is “all clear” behind the boat when starting the engine. Ask for verbal confirmation or hand signals that it is “all clear” behind the boat. Then, and only then, start the engine.



- Keep their main focus on maneuvering the boat safely while avoiding other boats, fixed objects, the shore, and shallow water.
- Use rear view mirrors to allow the driver to glance at the towed person, while still keeping their main attention on the path of the boat and the surroundings.
- Return safely to pick up towed persons or persons in the water. Keep the individual in view, approach slowly (preferably on the driver's side), and shut off the engine when close to an individual in the water. **DO NOT** back up or operate the boat in reverse to a person in the water.

#### ***Observers should:***

- Confirm for the boat operator that it is "all clear" behind the boat prior to starting the engine.
- Watch the towed person.
- Be responsible for communication of the signals and status of the towed person to the boat driver.
- Notify the boat operator of status and changing conditions with the towed person and inform the boat driver of the towed person's readiness to start, their desire to go faster or slower, or that they have fallen and are in need of retrieval.
- Deploy the fallen skier flag when the towed person falls, if needed. In some states, it is required to raise the "fallen skier" flag when the skier has fallen.
- Monitor the tow line to ensure that it does not become tangled, it does not become wrapped around anyone in the boat, and it does not become wrapped around the towed person. Also monitor the tow line so that it does not become tangled in the propeller. Notify the boat operator if any of these conditions are observed to avoid potential injury.
- Remind the boat operator to shut off the engine when persons are on the swim platform or in the water near the back of the boat.

#### ***Towed persons should:***

- Wear a PFD.
- Not approach the back of the boat if the engine is running.
- Not become entangled in a tow line or wrap a tow line around any body part.
- Know signals to communicate with the observer and boat operator.

in high energy skiing/riding to prevent abrasions, hypothermia, and injuries to orifices (rectal and vaginal) from impact with the water surface.

- Always inspect watersports equipment for wear, fraying, etc., before use. **DO NOT** use if you see signs of wear or fraying. Ropes or watersport equipment tow points may break during use, causing you to coast into obstacles or fall with the risk of being struck by another vessel.
- Always inspect all tow points for visible corrosion and/or other damage before use; if you see signs of damage, **DO NOT** use tow points until they are properly inspected and/or serviced by your authorized Malibu dealer.
- **NEVER** attach ski/wakeboard ropes to anything but approved tow points such as pylons and the wakeboard tower. Make sure all tow ropes are properly attached to their tow points.
- The skier/riding should verbally indicate that (s)he is safely clear of the boat prior to operator starting the boat engine or putting the boat into gear.
- Slowly take up slack in tow lines before accelerating to watersports speeds. Jerking the slack out of a tow line can cause high forces on the rope and towing equipment. This may cause the rope or equipment to break and the rope to snap back at occupants of your boat and at the towed person.
- Never put your arm, head or any other part of your body through the handle/bridle of the ski or wakeboarding line, nor wrap the line around any part of the body at any time. If you fall, the line will tighten and forcefully constrict around your body part and may result in amputation.
- **DO NOT** ski near swimming areas, beaches, personal watercraft, or other vessels/boats.
- **DO NOT** attempt land or dock starts—these activities will increase your risk of injury or death.
- **DO NOT** jump from a boat that is moving at any speed, nor enter or exit the water when the engine is running.
- **DO NOT** "back up" to anyone in the water; they will be in danger of hitting the spinning propeller which can cause severe injury or death.
- **DO NOT** follow directly behind another boat or skier/riding without leaving an adequate safe distance in case that towed person falls into the water. You will need ample time and distance to maneuver your boat away from that person in the water and to avoid their tow boat which will be circling back to retrieve their downed person.
- **DO NOT** participate in towed watersports at night. It is illegal and other boats will not be able to see you, nor

---

### **Additional Precautions for Towed Skier/ Rider**

- Wear wet suits or protective shorts when engaging

will they anticipate or expect your presence behind the towing boat. Furthermore, once you fall, they will not see you swimming.

- **DO NOT** tow with multiple skier/riders with different length ropes.
- **DO NOT** participate in towed watersports in limited visibility conditions.
- **DO NOT** climb, sit or stand on the wakeboard tower. The wakeboard tower is intended for towing **ONLY**.
- The wakeboard tower approved for use on your boat should be used **ONLY** for watersports activities where the tow line is held by a single rider, e.g. waterskiing or wakeboarding.
- **DO NOT** use the tower for non-approved activities such as pulling water toys (such as inflatables), parasailing, kite-flying, pyramids, group pulls, or towing other boats. Water toys (such as inflatables) may **ONLY** be towed from center pylons, rear pylons, and transom mounted grab handle (tow bar).
- Water toys (such as inflatables) may only be towed from center pylons, rear pylons, and transom-mounted grab handle (tow bar).
- The wakeboard tower is designed to pull a limited number of individual(s), and in some cases only one (1) individual. Please consult the remainder of this Owner's Manual and warning labels on the tower for details.
- Many states require the use of "skier down" flags. Check your local lake and state requirements. Having the observer raise a skier down flag when your towed watersport participant falls down or off the towed device will alert boats around you to the fact that someone is in the water nearby and that they should avoid the area.
- Many lakes have recommended tow patterns. Other boats may expect that you know the local customs and practices. It is common that the tow pattern is counterclockwise around the lake, but there are exceptions. Check for local recommendations or requirements.
- **NEVER** lift or trailer the boat with water in the bilge or in ballast tanks. Lift or trailer per manufacturer's instructions.
- Around marina docks where electrical current is present (such as shore power connections) it is unsafe to swim as stray electrical currents may exist, which can cause you to drown.

---

## Tow Line Guidelines

Tow lines come in different lengths and strengths for different activities. Make sure any line you are using is suited

for skiing or riding and that it is in good condition.

- Never use a tow line that is frayed, knotted, unraveling or discolored from use or being left in the sun. If a line breaks while in use it can recoil at the skier/rider being towed or into the watercraft where it might strike passengers. Replace tow lines with any sign of damage.
- Never use a tow line with elastic or bungee material to pull skiers or riders.
- Tow line should be attached to the watercraft in an approved fashion with hardware designed for towing. Refer to your watercraft manual for instructions on proper tow line attachment.
- Always route tow lines away from the propeller, even when idling. Shut off the engine if your boat starts to cross a floating tow line.
- If a tow line should become entangled in a propeller, shut off engine, remove the key and put it in your pocket before retrieving the line.
- Tow lines should be neatly coiled and stowed in the boat when not in use.

---

## Develop WATER SENSE

The Watersports Responsibility Code and the Watersports Safety Code have been developed by WSIA and industry equipment manufacturers. These Codes are reproduced here for your reference.

---

## Watersports Responsibility Code

Familiarize yourself with and follow The Watersports Responsibility Code.

**WATER SPORTS RESPONSIBILITY CODE**

Be aware that good judgment and personal awareness can help reduce the risks in boating and water sports. To increase your enjoyment of water sports, follow the elements of the responsibility code.

**In water sports it is your responsibility to:**

- ALWAYS familiarize yourself with applicable laws, waterways and inherent risks
- ALWAYS have a capable observer in addition to driver and agree on hand signals
- ALWAYS wear a USCG type III, ISO or other agency approved (PFD) Life Jacket
- ALWAYS read user's manual and inspect equipment before use
- ALWAYS ski or ride under control, at proper speeds and within your limits
- ALWAYS turn ignition off when anyone is near watercraft power drive unit
- ALWAYS stay clear of engine exhaust to avoid Carbon Monoxide poisoning
- ALWAYS make sure the engine cutoff lanyard is connected to the driver
- NEVER "platform drag" or touch swim platform while the engine is running
- NEVER ski or ride near swimmers, shallow water, other boats, or obstacles
- NEVER operate watercraft, ski or ride under the influence of alcohol or drugs
- NEVER accelerate until rope is clear of body parts

**wsia** **BOAT RESPONSIBILITY**

---

## WATERSPORTS SAFETY CODE

Before you get in the water: Skiing or riding instruction is recommended before use. Instruction will teach general safety guidelines and proper skiing or riding techniques, which may reduce your risk of injury. For more information on skiing or riding schools, contact your dealer, association, or local ski club.

- Know the federal, state and local laws that apply to your area.
- If you are not familiar with a waterway, ask someone who is knowledgeable to tell you about any hidden dangers or things to avoid.
- Whether you plan to be in a watercraft, or skiing/riding behind one it is important you are wearing a properly fitted life jacket (PFD) approved by your country's agency, USCG Type III, ISO, etc.
- Inspect all equipment prior to each use, check bindings, fins, tube, attachment, tow rope and flotation device. DO NOT use if damaged.

---

### Watercraft Safety

A knowledgeable and responsible driver is the most important safety device on any watercraft.

- Never operate a watercraft, ski or ride under the influence of alcohol or drugs.
- Only use water ballast and people for additional weight.
- Never exceed the passenger or weight limitations of the watercraft.
- Never allow passengers to hang outside the watercraft or towed device or sit on the gunwales or anywhere outside of the normal seating area.
- Never allow water to overflow the bow or gunwales of the watercraft.
- Uneven weight distribution or additional weight may affect the handling of the watercraft.

---

### Carbon Monoxide

The exhaust from the engine on a watercraft contains Carbon Monoxide (CO) which is a colorless, odorless and poisonous gas. Excessive exposure to CO can cause severe injury or death. Follow this advice to avoid injury.

- Never "Platform Drag" by holding onto the boarding platform or being dragged directly behind the watercraft. This is where CO will be.
- **DO NOT** sit on the watercraft transom or the boarding

platform while the engine is running.

- Make sure the engine is properly tuned and running well. An improperly tuned engine produces excessive exhaust and CO.
- If you smell engine exhaust do not stay in that position.
- Go to the United States Coast Guard's website: ([www.uscgboating.org](http://www.uscgboating.org)) for more information on how to help protect yourself and others from the dangers of CO.

---

### Tow Ropes

Tow ropes come in different lengths and strengths for different activities. Make sure any rope you are using is suited for that activity and that it is in good condition.

- Never use a rope that is frayed, knotted, unraveling or discolored from use or being left in the sun. If a rope breaks while in use it can recoil at the skier/rider being towed or into the watercraft where it might strike passengers. Replace tow ropes with any sign of damage.
- Never use a tow rope with elastic or bungee material to pull skiers or riders.
- Rope should be attached to the watercraft in an approved fashion with hardware designed for towing. Refer to your watercraft manual for instructions on proper tow rope attachment.
- Always keep people and tow ropes away from the propeller, even when idling.
- If a tow rope should become entangled in a propeller, shut off the engine, remove the key and secure it in a safe location before retrieving the rope.
- Tow ropes should be stowed in the boat when not in use.

---

### Preparing to Ski or Ride

Always have a person other than the driver act as an observer to look out for the skier/rider.

- Be sure the driver is aware of the experience and ability of the skier/rider.
- The driver, observer and skier/rider need to agree on hand signals before skiing or riding. Signals should include **READY, STOP, SPEED UP** and **SLOW DOWN**.
- Start the engine only after making sure that no one in the water is near the propeller.
- Turn the engine off when people are getting into or out of the watercraft, or in the water near the watercraft.
- Always make sure the tow rope is not wrapped around anyone's hands, arms, legs or other parts of the body.
- Start the watercraft and move slowly to remove slack



until the tow rope is tight.

- When the skier/rider signals **READY** and there is no traffic ahead, take off in a straight line. Adjust the speed according to the signals given by the skier/rider.

---

## Skiing or Riding

The watercraft and skier/rider should always maintain a sufficient distance from obstacles so a skier/rider falling or coasting and/or watercraft will not encounter any obstacle.

- Do not use in shallow water or near shore, docks, pilings, swimmers, other watercraft, or any other obstacles.
- Use only on water.
- Never attempt land or dock starts. This will increase your risk of injury or death.
- Always wear a properly fitted life jacket (PFD) approved by your country's agency, USCG Type III, ISO, etc.
- The faster you ski or ride, the greater your risk of injury.
- Never make sharp turns that may cause a slingshot effect on the skier/rider's speed.
- The skier/rider should be towed at an appropriate speed for his or her ability level.

---

## Fallen Skier or Rider

Falling and injuries are common in water skiing and other towed watersports. Keep tow speeds in a comfortable range given the rules of the activity and the skill level of participants.

- Circle a fallen skier/rider slowly to return the tow rope handle or pick up the fallen skier/rider.
- Turn off the engine when near a fallen skier/rider.
- Always keep the fallen skier/rider in view and on the driver's side of the watercraft.
- Display a red or orange skier-down flag to alert other vessels that a skier/rider is down if required by the state in which you are operating.

**IMPORTANT: The Warnings and practices in the Watersports Safety Code represent common risks encountered by users. The code does not cover all instances of risk or danger. Please use common sense and good judgment.**

---

## EMERGENCY PROCEDURES

In an emergency situation, you may have to resort to measures which are not commonly practiced. Always assess

the dangers of being in harm's way versus the protection of equipment. Keep a sound mind during an emergency and always use common sense.

---

## Explosion and Fire

Many boat fires and explosions involve flammable liquids such as gas or oil, which are used in your boat's propulsion engine(s) and generator. Carefully follow all warning labels and safety precautions while handling flammable substances. Many fires in inboard boats start in the bilge area due to gasoline vapors. Gasoline vapors are heavier than air and collect in the bilge of boats.

---

## Explosion

If explosion is imminent, put on PFDs, grab distress signals and survival gear, and immediately abandon ship.

---

## Fire

- Immediately turn off engines, generators, stoves and blowers.
- Extinguish smoking materials.
- The fixed fire suppression system has heat sensors that automatically flood the machinery space with a fire extinguishant. Allow extinguishant to "soak" the compartment for at least 15 minutes to cool the hot metals or fuel before cautiously inspecting the fire area. **DO NOT** breathe fumes or vapors caused by the fire or extinguishant.
- If it is necessary to discharge one or more portable fire extinguishers (refer to *Quick Reference Guide* chapter for extinguisher location[s]) into the engine compartment, do so only through the engine compartment access plate. **DO NOT** open the engine hatch, as this feeds oxygen to the fire.
- If you have access to the fire, direct the contents of the fire extinguishers at the base of flames, not at the top.
- Throw burning materials overboard if possible.
- Move anyone not needed for firefighting operations away from the flames.
- Signal for help.
- Put on PFDs (Personal Flotation Devices), grab distress signals and survival gear, and prepare to abandon ship.

## ⚠ WARNING

Burn hazard from gasoline floating on water which is ignited can cause death or serious injury. Gasoline will float on top of water and can burn. If the boat is abandoned, swim upwind, far enough to avoid fuel that can spread over the surface of the water.

## Swamping and Flooding

In the event that the vessel begins to take on water, turn on the bilge pump to evacuate water and slow its accumulation, and try to determine the source of the water. A collision with an underwater object can cause the hull to develop a leak. A loose-fitting hose clamp on a piece of equipment can cause a leak. Try to repair the leak if possible. If a leak is threatening the safety of you and your passengers, call or signal for assistance.

- Turn on bilge pump(s).
- Access PFDs, pass them out to everyone, and put them on.
- Identify source of leak and try to stop the leak and flooding.
- **STAY WITH THE BOAT!** A boat will usually float even if there is major hull damage. Rescuers can spot a boat much easier than a head bobbing in the water.
- Signal or call for help.
- If others were on board, try to locate them, make sure that they are conscious and that they can swim.
- Immersion in water speeds the loss of body heat and can lead to hypothermia (the abnormal lowering of internal body temperature).

## Capsizing

- If others were on board, try to locate them, make sure that they are conscious and they can swim.
- If possible, access life jackets (PFDs), pass them out to everyone, and put them on.
- **STAY WITH THE BOAT!** A boat will usually float even if there is major hull damage. Rescuers can spot a boat much easier than a head bobbing in the water.
- Signal or call for help.
- Immersion in water speeds the loss of body heat and can lead to hypothermia (the abnormal lowering of internal body temperature).

## Staying Afloat

- Remain calm. Do not thrash about or try to remove clothing or footwear. This leads to exhaustion and increases the loss of air that may keep you afloat.
- Keep your life jacket (PFD) on.
- Keep your knees bent.
- Float on your back and paddle slowly to safety.

## Collisions

- Immediately account for all passengers.
- Check for injuries.
- If any person is in the water, make sure they have proper flotation devices.
- Assess the hull for damage.
- Activate the bilge pump(s) to reduce any flooding.
- Try to operate the boat to keep the damaged area above water.
- If necessary, call or signal for assistance.
- **STAY WITH THE BOAT!**

## Grounding

In the event you run aground, assess the situation before proceeding. Your response to grounding will depend on how hard the boat hits bottom and whether the boat remains stranded, the extent of damage, and proximity to shore and help.

- If it is a simple touch, you may need only to inspect the hull.
- If you are aground, assess the situation before reacting. In some cases, throwing the boat into reverse can cause more damage.
- Check for leaks and immediately stop any water from entering the boat.
- Inspect the hull, steering system and propulsion system for damage.
- Maneuver the boat to safe water only if the hull and all operating systems are in satisfactory operating condition. Otherwise, call or signal for assistance.

## Person Overboard

- Immediately react to a person who has fallen overboard by sounding an alarm.
- Keep the victim constantly in your sight.

- If another passenger is on board, assign them to look at and keep pointing at the person in the water. They are to do nothing else but stay focused on the person in the water and to point at them.
- Throw the person a life preserver even if they are wearing a PFD. It will serve as a marker in the water and will provide additional flotation.
- Immediately slow or stop the boat and safely circle toward the victim as soon as possible.
- Keep the victim on the helm side of the vessel so as to keep the victim constantly in your sight.
- When almost alongside, shut off the engine.
- Assist the person into the boat.

## Unassisted Means of Reboarding

There are a few different ways to reboard, unassisted, onto a Malibu boat.

On some models, the manual flip-down swim step is an option. Reboarding in those instances can be done by following these steps:

- To reboard using the manual flip-down swim step, move to the transom of the boat.
- Pull the pin located beneath the water line on the starboard side of the swim step and pull back on the front of the step at the same time. It will swing toward you.
- Ensure the step is fully locked by swinging it as far as it will go.
- After it locks, climb up on the swim step, ensuring that three points of contact are maintained at all times.
- Continue onto the swim board and into the boat using grab handles as needed.
- For more information on the flip-down swim step, refer to the *Swim Board, Ladder and Flip Step* section in the *How It Works* section of this Owner's Manual.

To reboard a boat without a manual flip-down swim step or with a powered flip-down swim step, follow these steps:

- Move to the swim platform on the transom of the boat.
- Place both hands, palms down, onto the top of the platform.
- Using your legs to kick upwards, pull your body and legs up over the edge of the swim platform.
- Use the grab handle that is mounted to the transom of the boat to gain additional leverage.
- Lean into the swim platform and swing one leg up onto the swim platform. Then use the grab handle to provide

support while pulling the rest of your body onto the swim platform.

- Stand up and maintain three points of contact with the boat. Use the transom step to climb back into the boat.

## ⚠ CAUTION

Be aware that there are metal surfaces mounted on the hull beneath the swim platform. Do not allow arms, legs, or body parts to extend before the swim platform as these surfaces may cause minor-to-moderate injuries.

## Drowning

- Swim to rescue a drowning victim only as a last resort.
- **Immediate resuscitation is critical!** It may be possible to revive a drowning victim who has been under water for some time and shows no sign of life. Start CPR immediately and get the victim to a hospital as quickly as possible.
- Keep the victim warm.
- Use care in handling. Spinal injury may exist if the victim fell overboard.
- Call and signal for help.

## Medical Emergency

In an emergency, you may be far from professional medical assistance. Be prepared and know how to use your first aid kit. Be aware of any special medical conditions of your passengers.

## Operation Failure

If you experience a propulsion, electrical, steering or control failure, immediately shut off the engine. If it is safe to do so and you are qualified, then try to determine the cause of the failure and repair. Otherwise, call or signal for assistance. Anchor the boat if drifting will put you and others in danger.

## ⚠ WARNING

Towing or being towed stresses the boats, hardware and lines. Failure of any part can seriously injure people or damage the boat.



---

## Towing

A recreational boat towing another should be a last resort due to the potential for damaging one or both boats. The Coast Guard or a private salvage company is better equipped for this activity. A recreational boat may assist by standing by, and possibly by keeping the disabled boat's bow at a proper angle until help arrives. Only when conditions are ideal—that is, waters are calm, disabled boat is small, appropriate hardware is available, and one or both skippers know the correct technique—should a recreational boat tow another.

- Keep hands and feet clear of the other boat. Do not get caught or pinched between the two boats as severe injury could occur.
- Never hold a towline after it is pulled taut.

---

## Towing Vessel

- Be sure your boat will not run aground too.
- Because you are maneuverable and the grounded boat is not, you should pass the towline to the grounded boat.
- Select an appropriately strong tow line. Use double-braided or braid-on-braid line. Never use three-strand twisted nylon; it has too much elasticity and can snap back dangerously.
- Select an appropriate attachment point. If towing from the stern, it is preferable to use a bridle connected to the stern eyes. Otherwise the towing boat should have the towline attached to the grab handle located on the transom of the vessel (tow bar).
- Move slowly to prevent sudden strain on slack line.
- Proceed at slow speed.
- Avoid abrupt changes in throttle as that may cause the tow line to slacken and jerk tight. Sudden strain or jerking the line causes excessive tow line forces which may part the line. Keep slack out of the tow line, but if it occurs proceed slowly to again take up the strain on the line and avoid sudden jerks in the line.
- Be ready to cast loose or cut the line if the towing situation becomes hazardous.

---

## Vessel Being Towed

- Attach the towline to the bow eye.
- If it is necessary to be towed after being freed, keep someone at the wheel to steer.

---

## Both Vessels

- If you attach the towline to a fitting, be sure the fitting is fastened with a through bolt and is reinforced on the underside.
- Keep lines clear of propellers on both boats.

# QUICK REFERENCE GUIDE

**IMPORTANT:** Because this manual was printed in advance of the new model year, the overhead boat images in this chapter may not necessarily reflect the *exact* dimensions, configuration, etc., of actual boats manufactured in Model Year 2026. Regardless, all indicated component locations are as accurate as possible.


Similarly, all weight capacity specifications listed in this chapter reflect the best-available information at the time this manual was printed. Please check the weight capacity affixed to the boat to determine actual allowable total additional weight, including ballast, that can be added to the boat.

## **⚠ WARNING**


**DO NOT** overload the boat. Overloading or uneven loading can cause loss of control, capsizing, or swamping, which may lead to death or serious injury. Adhere to the load capacity plate restrictions and always account for persons, gear, and all non-factory-installed ballast or other equipment.

## RECOMMENDED SEATING


**Response TXi**

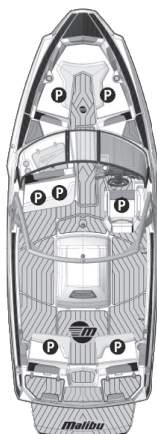


**20VTX**

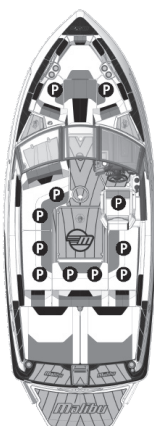


**21LX**

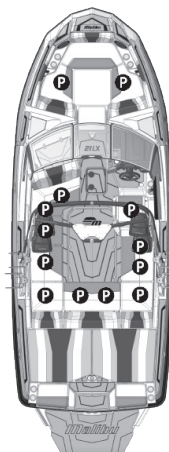


**21LX**  
Category C

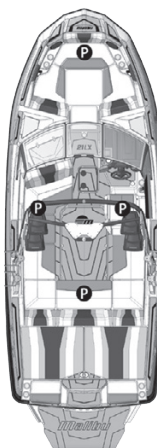


**22LSV**

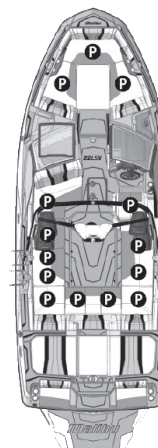


**22LSV**  
Category C

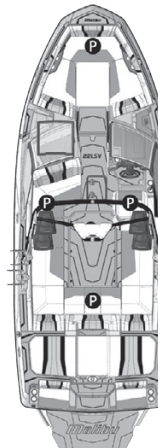


**23LSV**

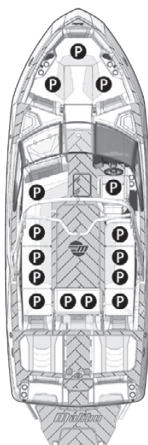

**25LSV**

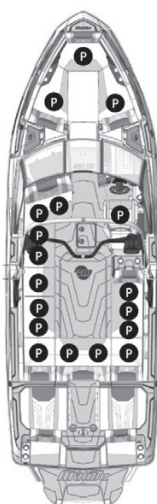

**25LSV**  
Category C

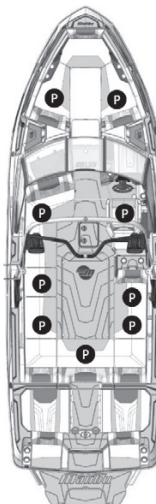

**26LSV**




**26LSV**  
Category C




## RECOMMENDED SEATING (CONT.)


**22MXZ**

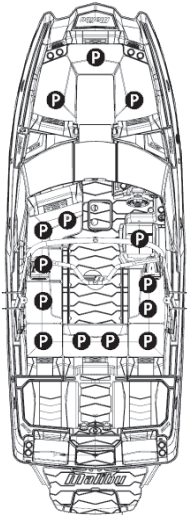


**23MXZ**

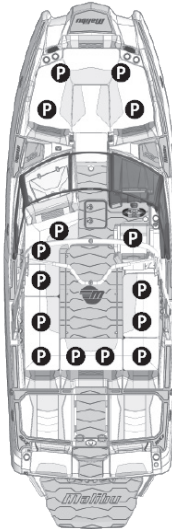


**24MXZ**

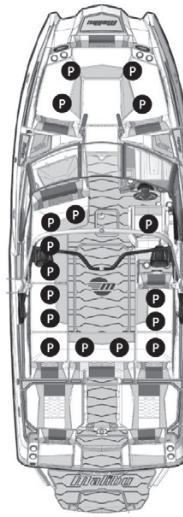


**24MXZ**  
Category C

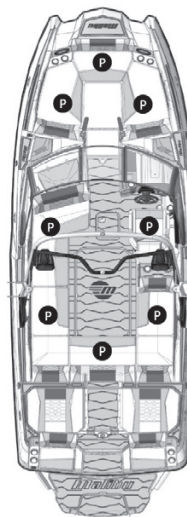


**M230**

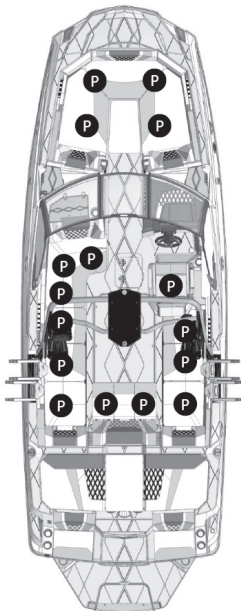


**M230**  
Category C

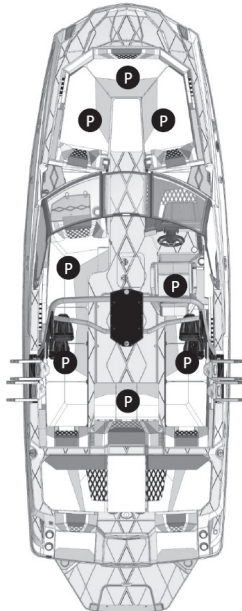

**M242**

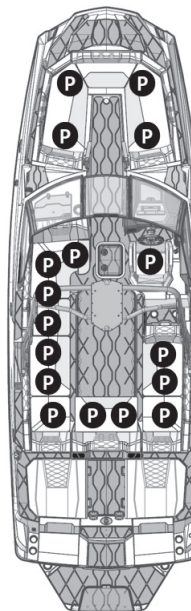

**M242**  
Category C

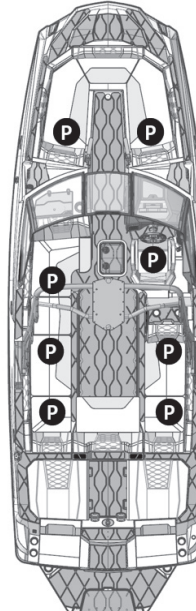




# Response TXi

## Specifications

<b>Length</b>	20'6" / 6.25 m	<b>Fuel</b>	40 gal / 151.4 L	<b>Heater Vents*</b>	2 or 3 vents; interior midship.
<b>Length w/ Platform</b>	22'3" / 6.78 m	<b>Dry Weight</b>	3,100 lbs / 1,406 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	95" / 2.41 m	<b>Capacity</b>	7 people total (2 in bow) 987 lbs / 320 kg, including people 350 lbs / 159 kg maximum in bow	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	22" / 0.56 m				
<b>Hull Type</b>	T-Cut Diamond				

## Components (\* = where equipped)

<b>AM</b>	Amplifier (component board, inside OB compartment)
<b>BA</b>	Batteries (under OB seat)
<b>BC</b>	Bilge, Center Pump (inside engine compartment)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CL</b>	Cleat*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (inside engine compartment)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, under shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>MW</b>	Mirror, Windshield*
<b>PR</b>	Ski Pylon, Removable
<b>SB</b>	Swim Board
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (inside engine compartment)
<b>ST</b>	Shifter/Throttle (side panel)
<b>TE</b>	Tow Eye, Transom
<b>WD</b>	Wedge, Auto-Set*

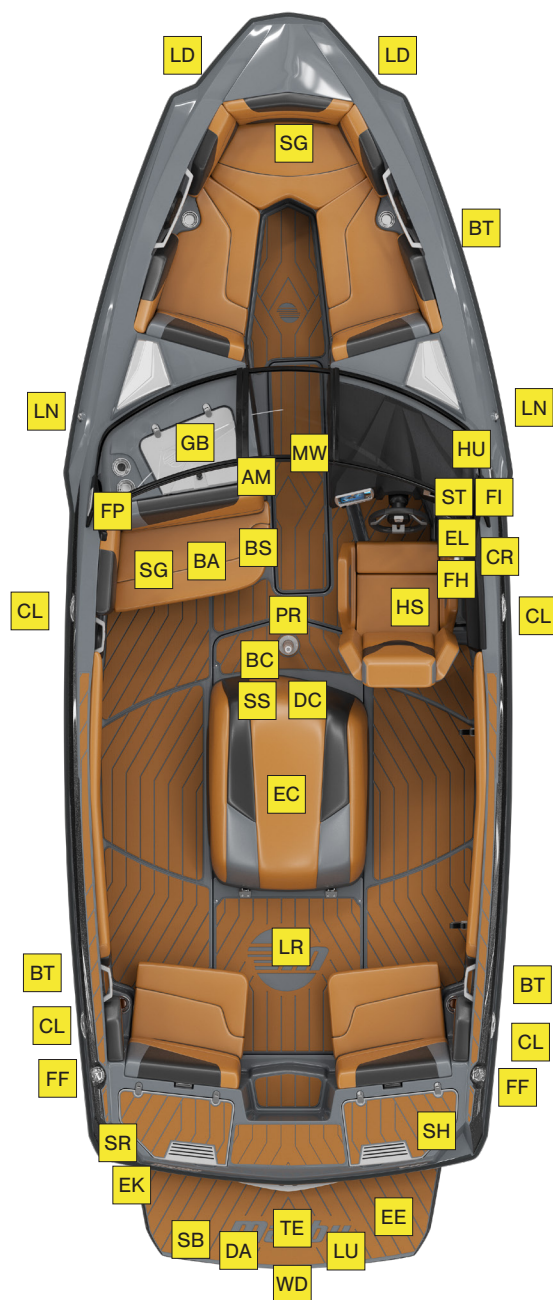


# Wakesetter 20VTX

## Specifications

<b>Length</b>	20' / 6.10 m	<b>Fuel</b>	39 gal / 147.6 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	22'3" / 6.78 m	<b>Dry Weight</b>	3,950 lbs / 1,792 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	98" / 2.49 m	<b>Capacity</b>	11 people total (2 in bow) 1,551 lbs / 704 kg, including people 350 lbs / 159 kg maximum in bow	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	27" / 0.69 m				
<b>Hull Type</b>	T-Cut Diamond				

## Components (\* = where equipped)

<b>AM</b>	Amplifier (component board, OB compartment)*
<b>BA</b>	Batteries (under bow seat)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>PR</b>	Ski Pylon, Removable*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls*
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ski)
<b>WD</b>	Wedge, Auto-Set*

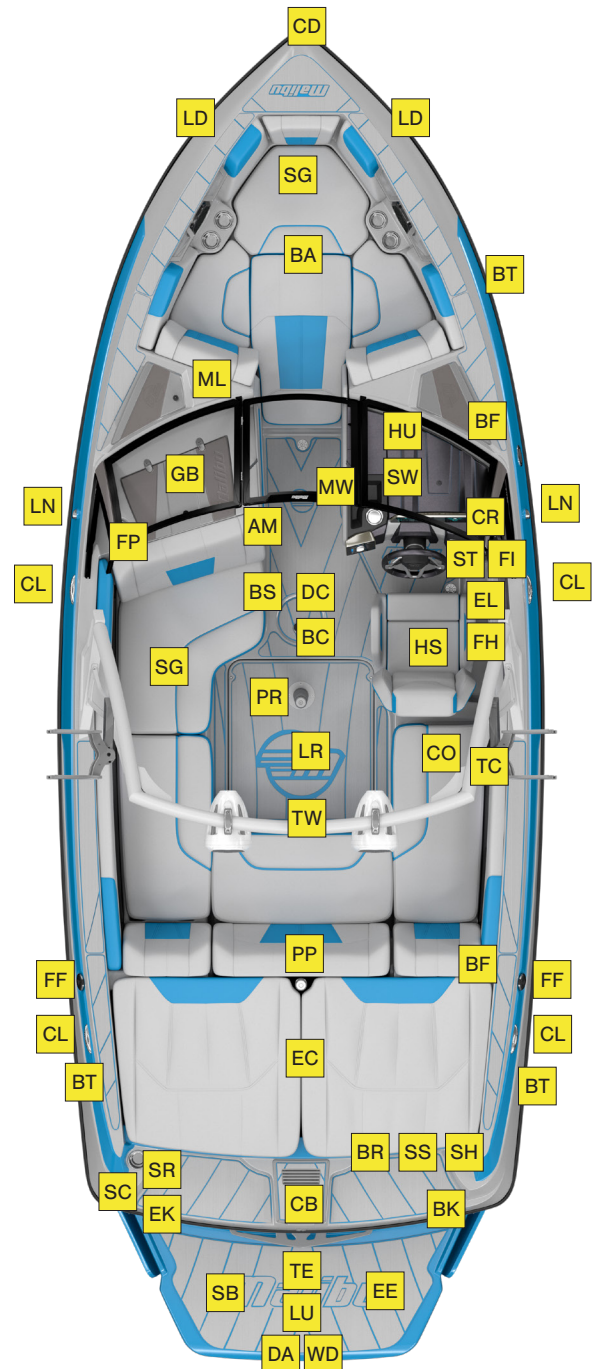


# Wakesetter 21LX

## Specifications

<b>Length</b>	21'5" / 6.65 m	<b>Fuel</b>	55 gal / 208 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	23'10" / 7.08 m	<b>Dry Weight</b>	5,000 lbs / 2,268 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	13 people total (2 in bow)	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	27" / 0.69 m		1833 lbs / 831 kg, including people		
<b>Hull Type</b>	Wake Plus or Diamond		350 lbs / 159 kg maximum in bow		

## Components (\* = where equipped)

<b>AM</b>	Amplifier (component board, OB compartment)*
<b>BA</b>	Batteries (under bow seat)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable* (under bow filler)
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend)*
<b>WD</b>	Wedge, Power*

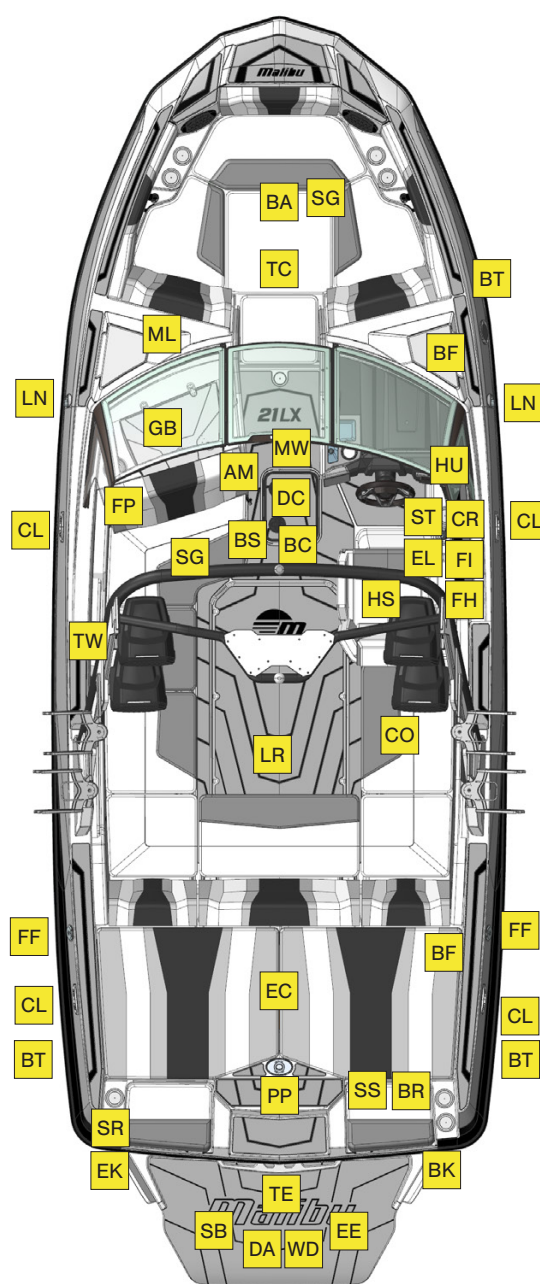




# Wakesetter 22LSV

## Specifications

<b>Length</b>	21'11" / 6.68 m	<b>Fuel</b>	58 gal / 220 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	24'3" / 7.37 m	<b>Dry Weight</b>	5,400 lbs / 2,449 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	14 people total (3 in bow)	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m		1,974 lbs / 895 kg, including people		
<b>Hull Type</b>	Wake Plus or Diamond		500 lbs / 227 kg maximum in bow		

## Components (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)*
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (inside OB compartment)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend)*
<b>WD</b>	Wedge, Power*

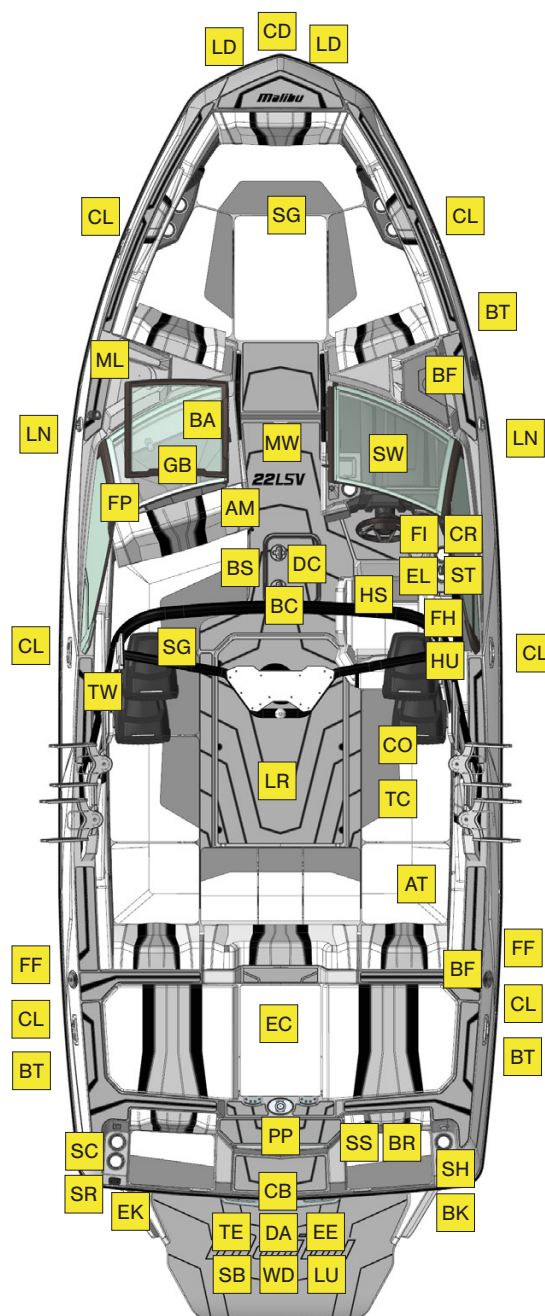

# Wakesetter 23LSV

## Specifications

<b>Length</b>	23" / 7.01 m	<b>Fuel</b>	65 gal / 246 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	25'3" / 7.69 m	<b>Dry Weight</b>	5,700 lbs / 2,586 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	15 people total (3 in bow)	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m		2,115 lbs / 959 kg, including people		
<b>Hull Type</b>	Wake Plus or Diamond		500 lbs / 227 kg maximum in bow		

## Components (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)*
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (inside OB compartment)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls*
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend, Ascend Pro)*
<b>WD</b>	Wedge, Power*




# Wakesetter 25LSV

## Specifications

<b>Length</b>	25' / 7.62 m	<b>Fuel</b>	96 gal / 363.4 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	27'3" / 8.30 m	<b>Dry Weight</b>	6,450 lbs / 2,926 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	18 people total (3 in bow)	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m		2,538 lbs / 1,151 kg, including people		
<b>Hull Type</b>	Wake Plus		500 lbs / 227 kg maximum in bow		

## Components (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)*
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (midship sub-floor)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls*
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend, Ascend Pro)*
<b>WD</b>	Wedge, Power*

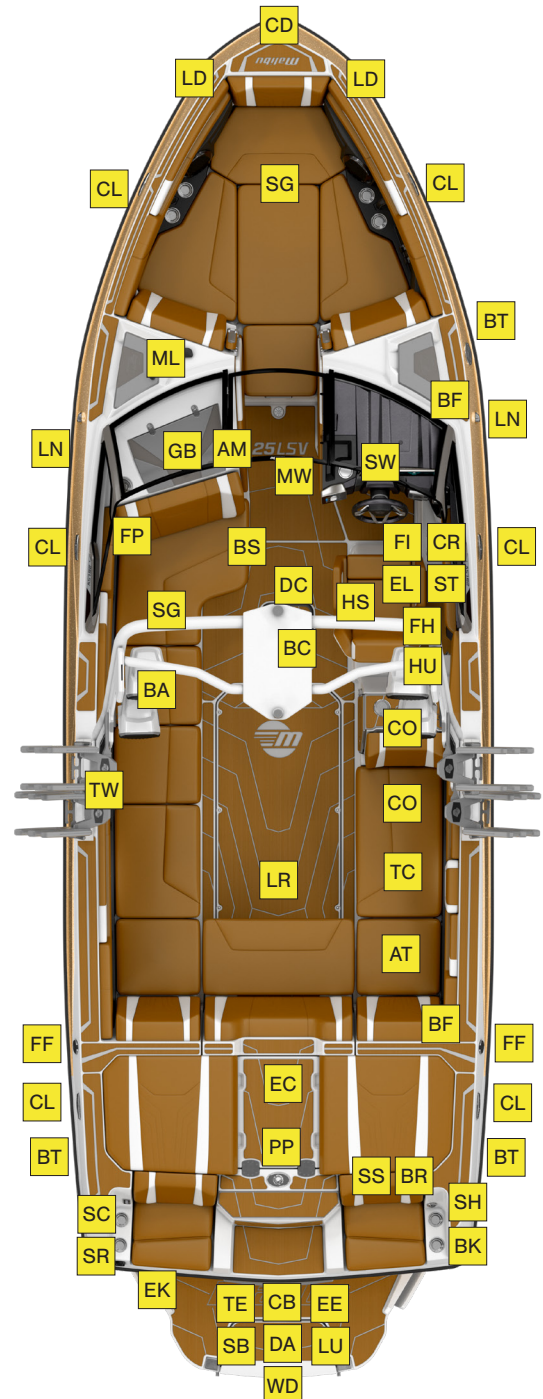




# Wakesetter 26LSV

## Specifications

<b>Length</b>	26'5" / 8.05 m	<b>Fuel</b>	115 gal / 453.3 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	28'8" / 8.74 m	<b>Dry Weight</b>	7,000 lbs / 3,175 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	18 people total (3 in bow)	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m		2,538 lbs / 1,151 kg, including people		
<b>Hull Type</b>	Wake Plus		500 lbs / 227 kg maximum in bow		

## Components (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)*
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (inside OB compartment)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment, port bow seat)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls*
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend, Ascend Pro)*
<b>WD</b>	Wedge, Power*

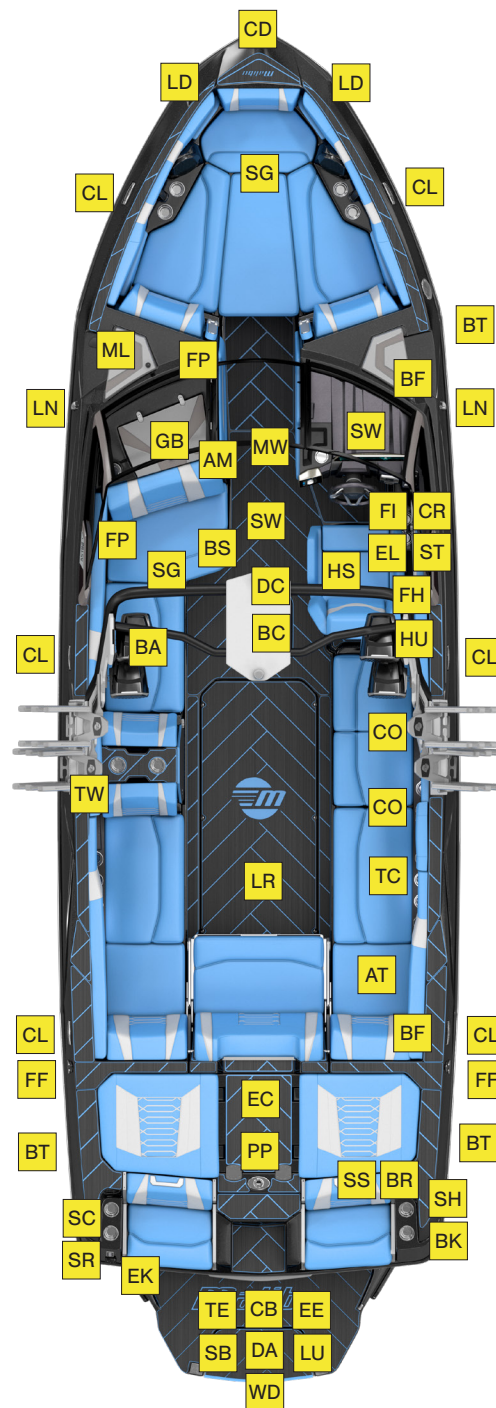


# Wakesetter 22MXZ

## Specifications

<b>Length</b>	21'11" / 6.68 m	<b>Fuel</b>	58 gal / 219.5 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	24'2" / 7.37 m	<b>Dry Weight</b>	5,600 lbs / 2,540 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	14 people total (3 in bow)	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m		1,974 lbs / 895 kg, including people		
<b>Hull Type</b>	Wake Plus		420 lbs / 190 kg maximum in bow		

## Components (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)*
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (inside OB compartment)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls*
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend, Ascend Pro)*
<b>WD</b>	Wedge, Power*

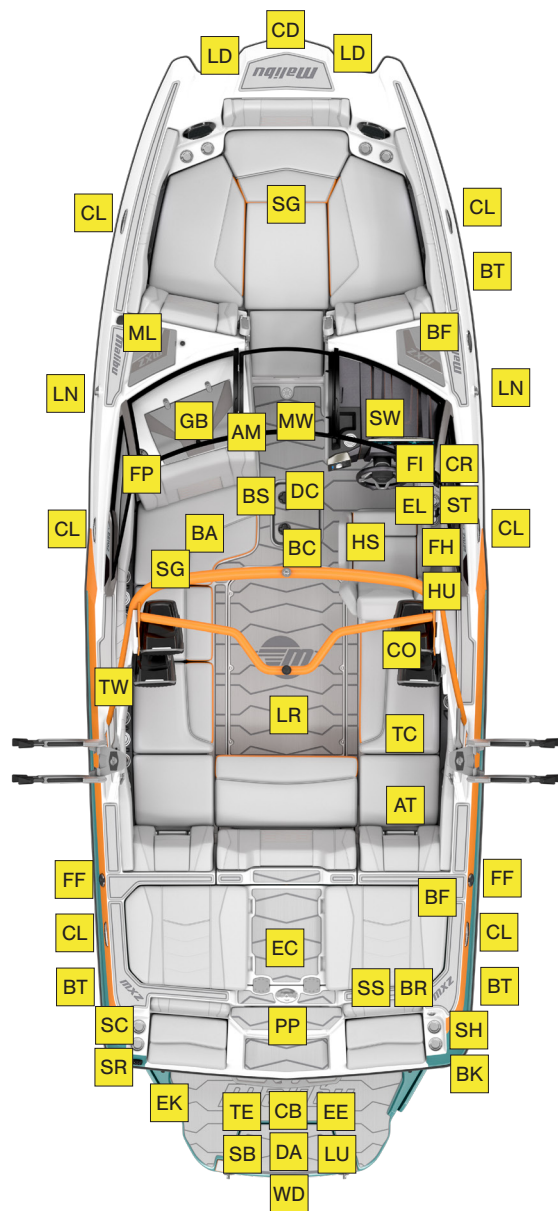


# Wakesetter 23MXZ

Specifications
----------------

<b>Length</b>	23' / 7.01 m	<b>Fuel</b>	65 gal / 246 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	25'3" / 7.69 m	<b>Dry Weight</b>	5,900 lbs / 2,676 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	15 people total (3 in bow)	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m		2,115 lbs / 959 kg, including people		
<b>Hull Type</b>	Wake Plus		500 lbs / 227 kg maximum in bow		

**Components** (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)*
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (inside OB compartment)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls*
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend, Ascend Pro)*
<b>WD</b>	Wedge, Power*

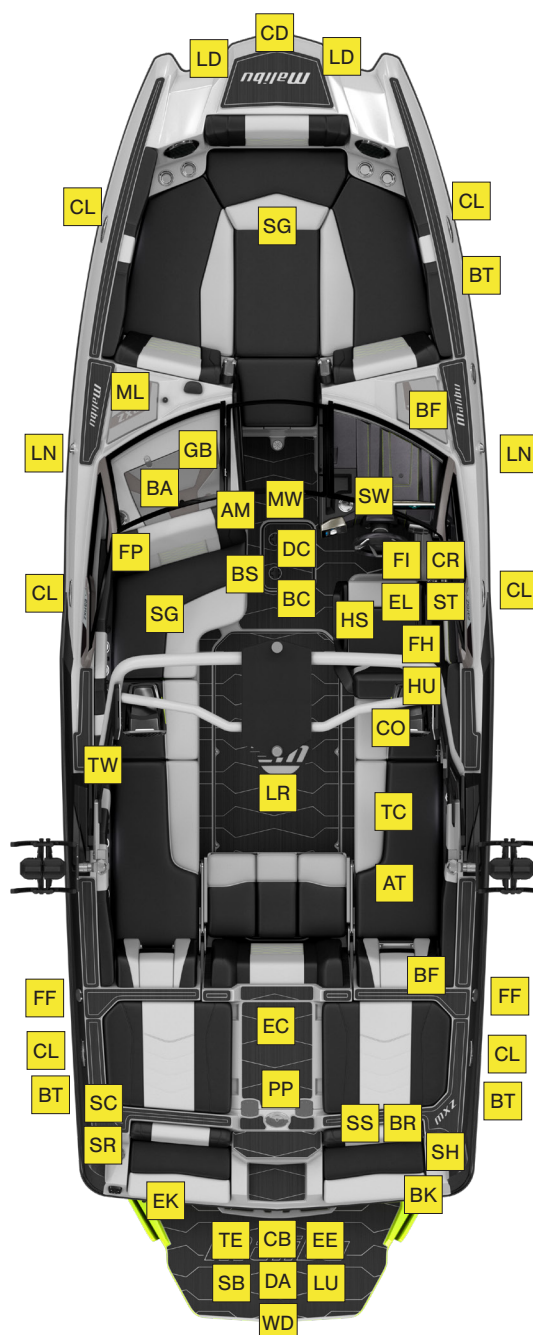




# Wakesetter 24MXZ

## Specifications

<b>Length</b>	24'5" / 7.45 m	<b>Fuel</b>	83 gal / 314 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	26'8" / 8.12 m	<b>Dry Weight</b>	6,600 lbs / 2,994 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	17 people total (4 in bow) 2,397 lbs / 1,087 kg, including people 600 lbs / 272 kg maximum in bow	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m				
<b>Hull Type</b>	Wake Plus				

## Components (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)*
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (inside OB compartment)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls*
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend, Ascend Pro)*
<b>WD</b>	Wedge, Power*

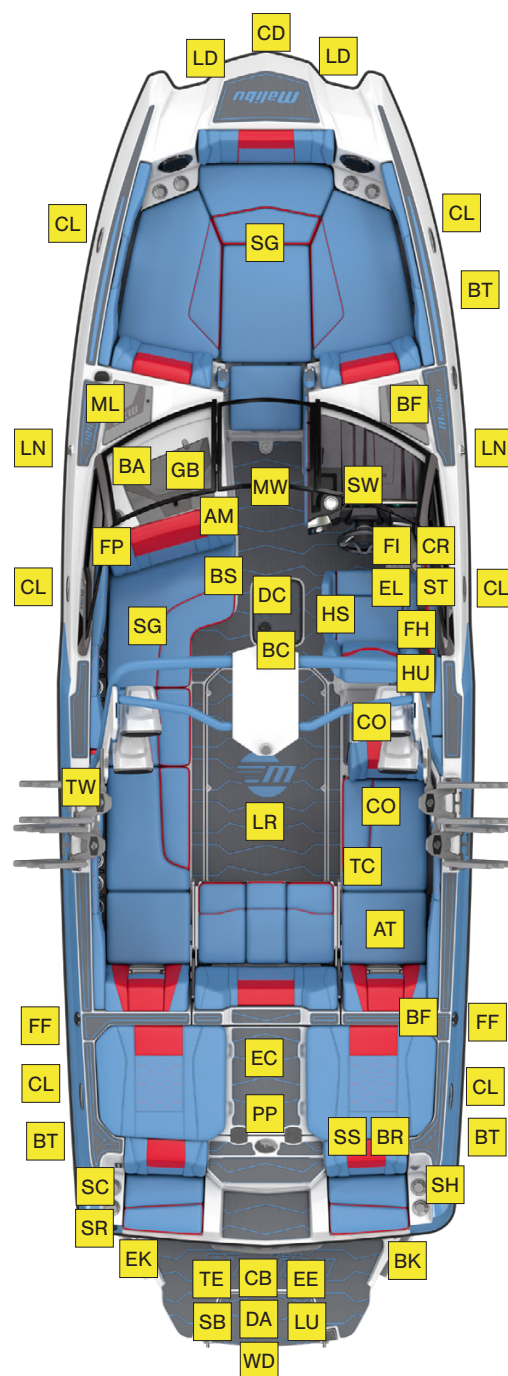


# M230

## Specifications

<b>Length</b>	23' / 7.01 m	<b>Fuel</b>	74 gal / 280 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	25'3" / 7.71 m	<b>Dry Weight</b>	6,750 lbs / 3,062 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	16 people total (4 in bow) 2,256 lbs / 1,023 kg, including people 600 lbs / 272 kg maximum in bow	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m				
<b>Hull Type</b>	Wake Plus				

## Components (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)*
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (midship sub-floor)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up*
<b>CD</b>	Camera, Docking*
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)*
<b>LD</b>	Light, Docking*
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module*
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up*
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls*
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend, Ascend Pro)*
<b>WD</b>	Wedge, Power*

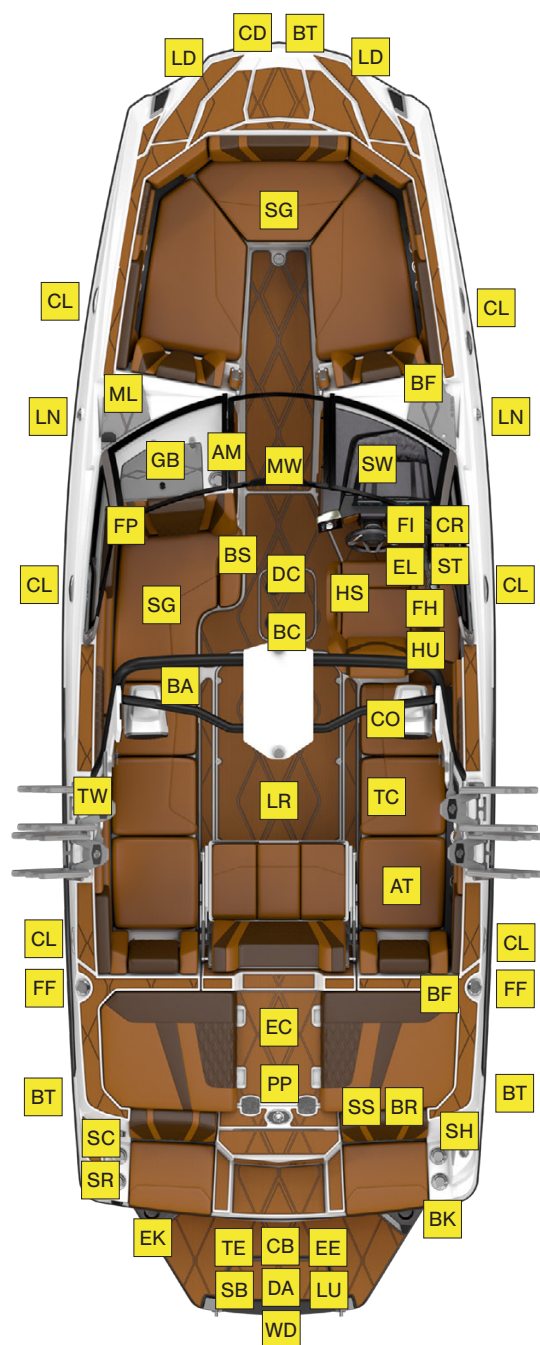


# M242

## Specifications

<b>Length</b>	24'2" / 7.37 m	<b>Fuel</b>	94 gal / 355.8 L	<b>Heater Vents*</b>	Various interior locations.
<b>Length w/ Platform</b>	26'5" / 8.05 m	<b>Dry Weight</b>	7,500 lbs / 3,402 kg	<b>Lights</b>	Various interior locations.
<b>Beam</b>	102" / 2.59 m	<b>Capacity</b>	17 people total (4 in bow) 2,397 lbs / 1,087 kg, including people 600 lbs / 272 kg maximum in bow	<b>Storage</b>	Under bow seating; under interior seating; watertight box on shifter panel.
<b>Draft</b>	32" / 0.81 m				
<b>Hull Type</b>	Wake Plus				

## Components (\* = where equipped)

<b>AM</b>	Amplifier (inside OB compartment, component board)
<b>AT</b>	ATMOS Tube Inflator*
<b>BA</b>	Batteries (midship sub-floor)
<b>BC</b>	Bilge, Center Pump (under floor, accessed via center pie plate)
<b>BF</b>	Bilge, Filter* (forward and aft)
<b>BK</b>	Ballast Flush Kit, AIS Decontamination* (transom, stbd)
<b>BR</b>	Bilge, Rear Pump (accessed via pie plate on stbd rear engine closeout)
<b>BS</b>	Battery Isolator Switch (beneath OB seat)
<b>BT</b>	Bilge and Ballast, Thru-Hull Outlets
<b>CB</b>	Camera, Back-Up
<b>CD</b>	Camera, Docking
<b>CL</b>	Cleat*
<b>CO</b>	Cooler, Removable*
<b>CR</b>	Circuit Breaker Panel (side panel, below shifter/throttle)
<b>DA</b>	Drain Plug, Aft (under swim board)
<b>DC</b>	Drain Plug, Center (under floor, accessed via center pie plate)
<b>EC</b>	Engine Compartment
<b>EE</b>	Engine Exhaust (under swim board)
<b>EK</b>	Engine Flush Kit Connection
<b>EL</b>	Emergency Safety Lanyard (side panel)
<b>FF</b>	Fuel Fills (port and starboard)
<b>FH</b>	Fire Extinguisher, Fixed System Manual Release Handle (next to helm)
<b>FI</b>	Fire Extinguisher Indicator (side panel, below shifter/throttle)
<b>FP</b>	Fire Extinguisher, Portable, Mounting Location (OB compartment)
<b>GB</b>	Glove Box (includes 12V charger, USB audio-only port, and auxiliary audio port)
<b>HS</b>	Helm Seat
<b>HU</b>	Heater Unit (adjacent to helm)
<b>LD</b>	Light, Docking
<b>LN</b>	Light, Navigation (port and starboard)
<b>LR</b>	Life Raft Stowage (floor)
<b>LU</b>	Light, Underwater*
<b>ML</b>	M-Link Module
<b>MW</b>	Mirror, Windshield*
<b>PP</b>	Ski Pylon, Pop-Up
<b>SB</b>	Swim Board
<b>SC</b>	Swim Step, Powered, Controls
<b>SG</b>	Storage (OB compartment and under bow cushion)
<b>SH</b>	Shower*
<b>SR</b>	Transom Stereo Remote*
<b>SS</b>	Sea Strainer (accessed via pie plate on stbd rear engine closeout)
<b>ST</b>	Shifter/Throttle (side panel)
<b>SW</b>	Subwoofer* (beneath instrument panel)
<b>TC</b>	Trash Can, Removable*
<b>TE</b>	Tow Eye, Transom
<b>TW</b>	Tower (Ascend, Ascend Pro)*
<b>WD</b>	Wedge, Power*

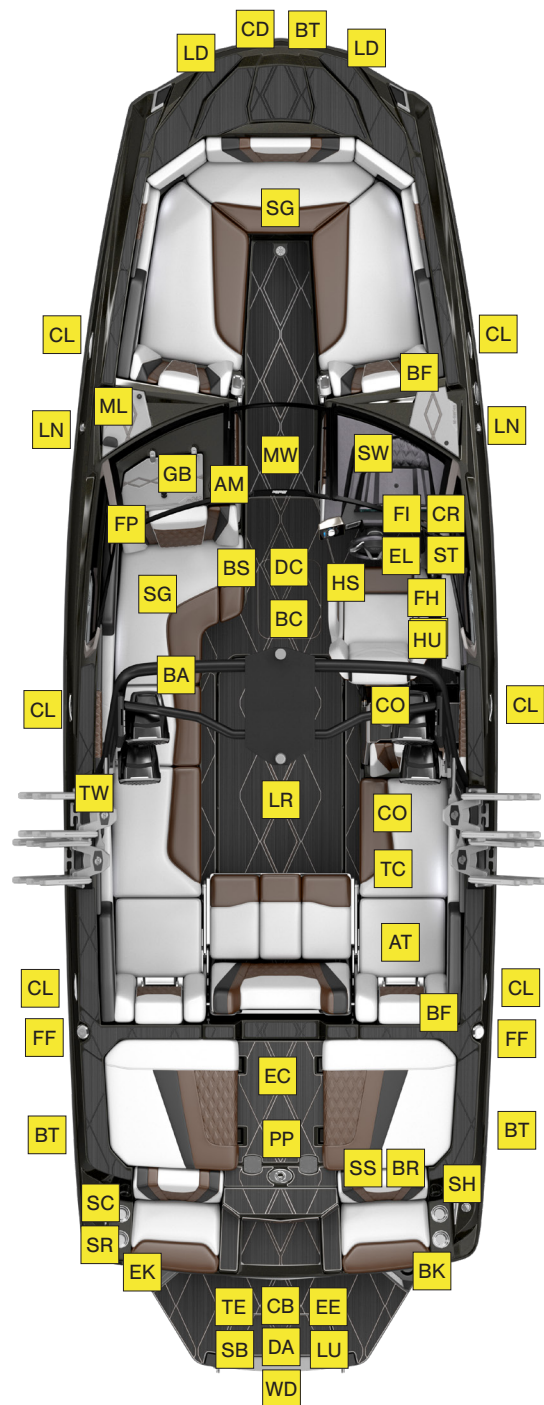



# DASH AND DISPLAYS

## MALIBU DASH AND DISPLAYS



The Malibu Dash features two touchscreen displays through which nearly all functionality of the boat is controlled:

- a 15" screen above the steering wheel, and
- an 8" screen to the left of the steering wheel.

Some models may also be optionally equipped with a 4" auxiliary screen—see the *Auxiliary Screen* section of this chapter for operating instructions.

To the right of the steering wheel is either the standard storage box or the optional Sport Dash components.




Dash buttons (from left to right): Horn, Power, START/STOP.

### Engine Start Code

Upon startup by pressing the *Start/Stop Button*, the 15" screen will display the *Engine Start Code* screen.

The *Engine Start Code* feature, designed to prevent unauthorized access to the boat, allows the operator to set a 4-digit code that must be entered in order for the engine to start. Upon successful entry of the engine code, press the *START/STOP Button* again to start the engine.

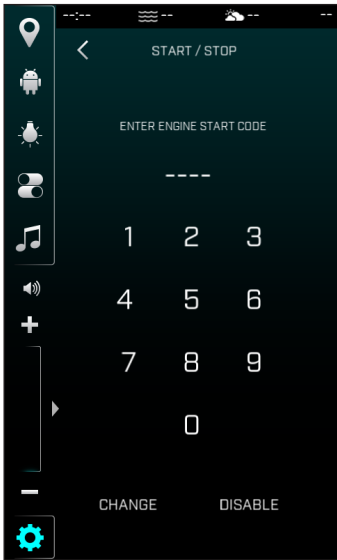

To change or disable the Engine Start Code, select *Change* or *Disable* or navigate to the *Start/Stop Settings* screen (*Settings > System Settings > Start/Stop Settings*).

### 15" DISPLAY



The 15" display's *Main View* is divided into two areas (from left to right): the *Instruments Area* and the *Active Area*.

INSTRUMENTS AREA			
1	DEPTH	7	FUEL GAUGE
2	STERN TURN INDICATOR*	8	BATTERY VOLTAGE GAUGE
3	RUDDER POSITION INDICATOR*	9	OIL PRESSURE GAUGE
4	SPEEDOMETER	10	ENGINE TEMPERATURE GAUGE
5	TACHOMETER	11	CRUISE CONTROL
6	PADDLE WHEEL	12	ENGINE HOURS
ACTIVE AREA			
13	DROP-DOWN MENU	16	BALLAST CONTROLS
14	RIDER PROFILES	17	VIDEO CONTROLS
15	SURF CONTROLS		*IF EQUIPPED

# 15" DISPLAY – INSTRUMENTS

## Depth

Displays the current water depth.

## Stern Turn Indicator

If the boat is equipped with Stern Turn, this icon provides a visual representation of the current Stern Turn thruster direction.

## Rudder Position Indicator

If the boat is equipped with a rudder position sensor, the *Rudder Position* indicator shows the current active direction of the rudder, which is helpful when loading the boat on the trailer or when pulling a rider out of the hole to ensure the boat tracks in a straight direction.

**NOTE:** The indicator is visible only below seven (7) mph.

## Speedometer

The *Speedometer* displays the boat's current speed. Units may be configured on the *Units* screen (*Settings > Configuration > Units*).

## Tachometer

The *Tachometer* displays the current RPM of the boat's engine.

## Fuel Gauge

The *Fuel Gauge* displays current amount of fuel in the boat's fuel tank as a percentage.

## Battery Voltage Gauge

The *Battery Voltage Gauge* displays the current voltage level of the boat's battery (or batteries) in volts (v).

## Oil Pressure Gauge

The *Oil Pressure Gauge* displays the boat engine's current oil pressure. Units may be configured on the *Units* screen (*Settings > Configuration > Units*).

## Engine Temperature Gauge

The *Engine Temperature Gauge* displays the boat engine's current temperature. Units may be configured on the *Units* screen (*Settings > Configuration > Units*).

## Engine Hours

Displays the total number of running hours recorded by the engine, similar to mileage on an automobile.

# Cruise Control

To engage cruise control:

1. Select the *Cruise Control* icon while the engine is running

and in neutral. The icon will turn blue and additional controls will appear. Select the icon again to disengage.



1	CRUISE SET SPEED	4	SET SPEED KEYPAD
2	SPEED INCREASE	5	CANCEL/EXIT
3	SPEED DECREASE	6	CONFIRM INPUT

2. Press the UP or DOWN arrow to adjust the cruise set speed in 0.1 unit increments; press and HOLD to adjust in 1.0 unit increments. Alternately, use the set speed keypad to input an exact set speed amount, or, if equipped, use the Surf Band or Sport Dash rotary knob to adjust set speed.



1	THROTTLE POSITION INDICATOR
2	THROTTLE WINDOW

3. Pay attention to the *Throttle Window* next to the speed adjust arrows. Once the throttle has been advanced forward, and the boat is close to the cruise set speed, the engine will automatically maintain the set speed. The throttle window will turn green when cruise control is active and locked on. It may be necessary to increase or decrease the throttle to maintain cruise set speed if

the conditions of the boat change (ballast levels, Power Wedge position, turning, etc.).


- 4. If the *Throttle Position Indicator* drops above or below the target window, the *Throttle Window* will turn red.
- 5. Moving the throttle back to the neutral position will disengage the cruise control.

## 15" DISPLAY – ACTIVE AREA


Select an icon from the *Active Area's* navigation sidebar to open the corresponding menu item in the *Active Area*. To close it, select the icon again. Either one or two menu items may be viewed in the Active Area—opening a third will replace the first.




Surf Controls Only

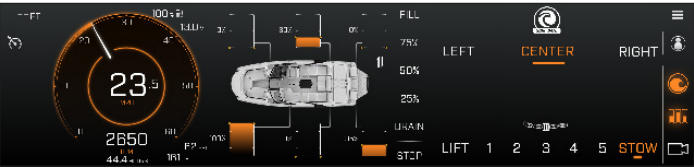


Surf Controls + Ballast Controls

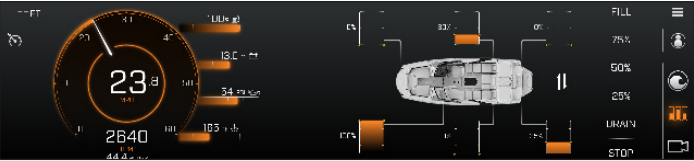


Ballast Controls Only

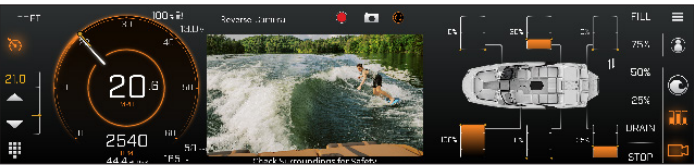

Ballast Controls + Video

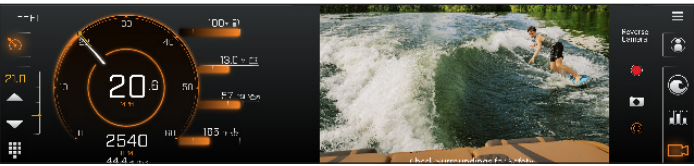

Video Only

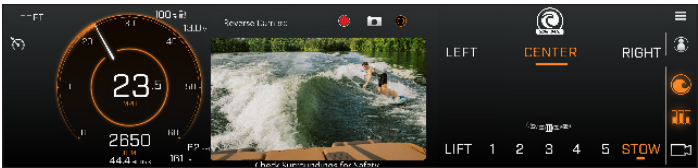


Surf Controls + Video

## Surf Controls

Select *Surf Controls* to open the *Surf Controls* screen in the *Active Area*. The *Surf Controls* screen allows the operator to adjust the position(s) of the Surf Gates and Power Wedge.

### Surf Gate

To change the position of the Surf Gates, select the *Surf Control* icon from the *Active Area* sidebar, then select one of the Surf Gate position options (Left, Center, or Right).

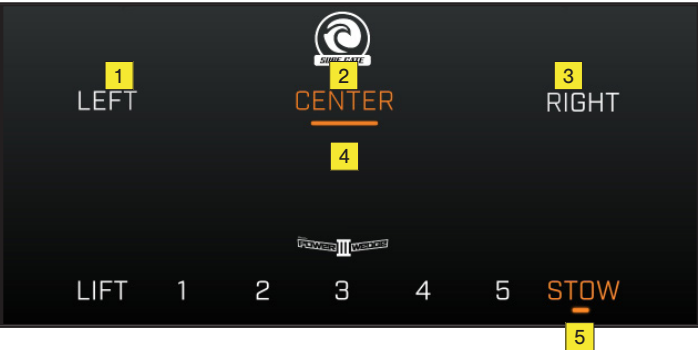

1	SURF LEFT
2	SURF CENTER
3	SURF RIGHT
4	SURF GATE POSITION BAR
5	POWER WEDGE POSITION BAR

When the Surf Gates are in motion, the *Surf Gate Position Bar* will pulse yellow and move to the selected position. Once the Surf Gate reaches the selected position, the *Surf Gate Position Bar* will remain under that position option.

**NOTE:** The boat must be moving between 9–15 mph before the Surf Gates will begin to extend to the selected position. If the boat moves outside that range, the Surf Gates will retract to the center position. If the boat's speed returns to the surf speed range, the Surf Gates will deploy again.

To alert the operator and rider of Surf Gate position change from left to right or right to left, the tower lights will flash and audible beeps will sound. (These alerts can be disabled in *Settings > Power Wedge/Surf Gates*).



Power Wedge

⚠ WARNING

Ensure all passengers are in the boat before changing the Power Wedge position. Stay clear of the Power Wedge while it is in motion. Failure to avoid the Power Wedge while it is in motion could result in serious injury.

*NOTE: The Power Wedge is not intended for use at speeds greater than 26 mph. An alarm will sound, and a warning will be displayed if the Power Wedge is in a deployed position at speeds exceeding 26 mph. Boat speed must be below 26 mph to dismiss the alarm.*

*Ensure all passengers are in the boat before changing the Power Wedge position. Stay clear of the Power Wedge while it is in motion.*

Power Wedge position adjustment is permitted ONLY when boat speed and Power Wedge position are within safe operational range.

To deploy the Power Wedge from and to the Stow position, the boat will need to be moving between one (1.0) and ten (10.0) mph. This is to ensure that the area around the Power Wedge is clear of any hazards. The yellow *Power Wedge Position Bar* will move to the selected position icon once the Power Wedge has moved into place.


Auto Wedge

Auto-Wedge is the automatic control of the Power Wedge to help the boat reduce drag and get on plane. When cruise control is on, and the cruise control set speed is greater than 16 mph, the power wedge will move to the lift position. When the boat speed gets close to the set speed, the Power Wedge will move to the selected position. When the boat begins to slow down and come off plane, the Power Wedge will move back to the Lift position.

Auto-Wedge can be toggled between ON/OFF in the *Settings* screen (*Settings > Configuration > Power Wedge/Surf Gates*). The factory default setting is ON.

Ballast Controls

Select *Ballast Controls* to open the *Ballast Controls* screen in the *Active Area*. The *Ballast Controls* screen allows the operator to control the fill level of each of the boat’s ballast tanks.

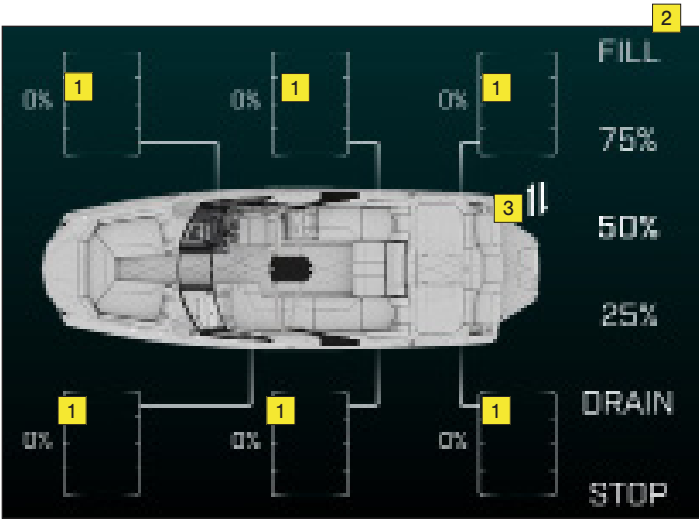

1	BALLAST TANK SELECT
2	FILL LEVEL
3	BALLAST BALANCE


Adjusting Ballast Tank Fill Level

1. Select the tank(s) to adjust. The indicator will turn white on each selected tank.
2. Select one of the five (5) fill levels (Drain, 25%, 50%, 75%, or Fill). The tank indicator will turn blue and continue to display the actual fill level. A progress indicator will report whether the tank(s) is/are filling or draining.
3. Once the selected fill level is reached, the pump and progress indicator will automatically stop. The fill/drain process may also be manually stopped by selecting one or more tanks and selecting *Stop*.

**NOTE:** Tank indicators display the actual level in the tank(s) whether resting, filling, or draining. Optional ballast bags can only be filled/drained by selecting *Fill All* or *Drain All*.

Balance Ballast

Quickly transfer weight from one side of the boat to another using the *Balance Ballast* feature, which can automatically fill the ballast of the selected side to match the selected weight.

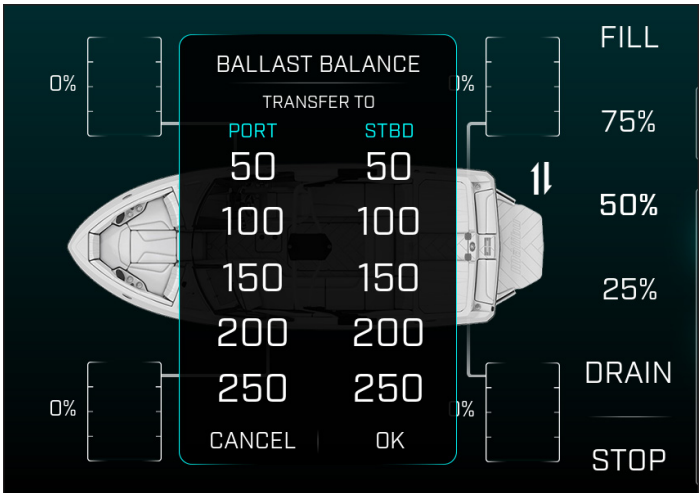

To balance ballast:

1. Select the *Balance Ballast* icon to open the Balance Ballast menu.
2. Select the desired weight offset from either the port or starboard side of the boat, then select *OK* to confirm or *Cancel* to close the menu.
3. Once a weight offset is selected, the ballast will automatically fill to offset the selected weight from the chosen side.

## Video Controls

Select the *Video Controls* icon to open the *Video Controls* screen in the *Active Area*. The *Video Controls* screen allows the operator to view live video output from the Docking Camera, Reverse Camera, and/or the 360° Multi-Camera System (if equipped), as well as capture video clips and images.



1	CURRENT CAMERA VIEW	4	SWITCH CAMERA
2	RECORD VIDEO	5	SCREEN MODE (360)
3	TAKE SNAPSHOT	6	CAMERA MODE (360)

The current active camera is indicated by the *Current Camera View* in the top-right corner of the screen.

### Record Video

Select the red *Record Video* icon to start recording video from the active camera. Video files are automatically stored in the Videos folder.

### Take Snapshot

Select the *Take Snapshot* camera icon to capture a single-frame image from the active camera. Snapshots are automatically stored in the Photos folder.

### Switch Camera


Select the *Switch Camera* icon to toggle the view from the current active camera to one of the other equipped camera systems.

## 360° Multi-Camera System

The 360° Multi-Camera System (if equipped) allows the operator to view video output from multiple view points

around the boat. Six (6) cameras installed around the boat provide four (4) directional views (front, rear, port, starboard) as well as an overhead view and a 360° 3D view.

The controls for the 360° Multi-Camera System are two (2) icons at the bottom of the *Video Controls* screen that change depending on which screen and camera modes are selected.

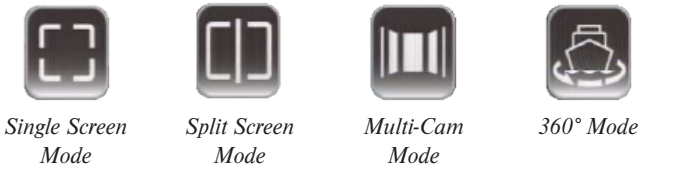

### Single Screen Mode



Select the *Single Screen Mode* icon to display a single camera view. Swipe left or right on the screen to change camera views.

### Multi-Cam Mode




Select the *Multi-Cam Mode* icon to display an overhead view of the boat. Select one of four (4) directional viewpoints from the overhead view on the left to change the camera view on the right.

Select the *Split Screen Mode* icon to display multiple cameras views simultaneously. Swipe left or right on the screen to change camera views.

*Split Screen Mode* can be used in conjunction with the *Multi-Cam Mode* by selecting the camera view itself and then selecting the desired camera in the overhead view.

Split Screen Mode

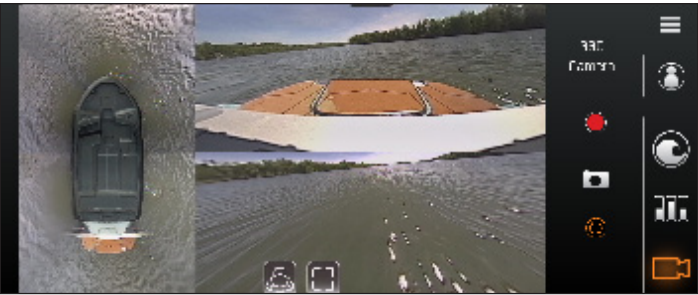

Select the *Split Screen Mode* icon to display multiple cameras views simultaneously. Swipe left or right on the screen to change camera views.


*Split Screen Mode* can be used in conjunction with the *Multi-Cam Mode* by selecting the camera view itself and then selecting the desired camera in the overhead view.

360° Mode




Select the *360° Mode* icon to display a 3D model of the boat and the surrounding area. Select and drag to adjust the viewing angle (tilt, turn)

Drop-Down Menu

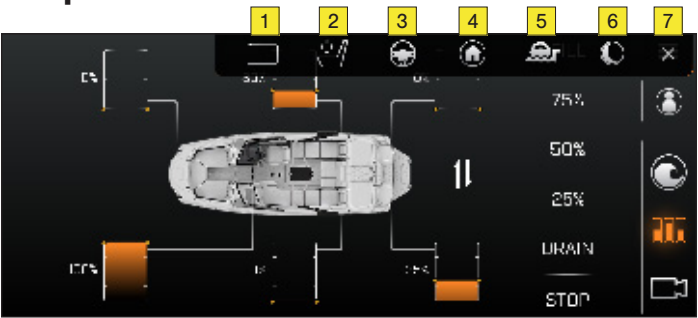

1	FILE MANAGEMENT	5	DOCKING MODE
2	SMART HELM SEAT	6	DAY/NIGHT MODE
3	DRIVER PROFILES	7	COLLAPSE MENU
4	GO HOME MODE		

File Management

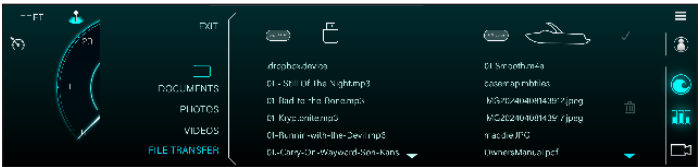

The *File Management* screen allows the operator to view PDFs and play video/image files from the internal storage or an inserted USB drive.

Video Playback

Video playback resolution is 1280x720px. Videos recorded at higher resolutions are automatically downsampled before viewing. The following media formats are supported for playback:

- **VIDEO:** .divx / .dv / .flv / .h263 / .h264 / intel-h263 / .jpeg / .mpeg / .msmpeg / .msvideocodec / .wmv / .xvid
- **IMAGE:** .gif / .jpeg / .png / .tiff

**NOTE: Playback buttons are only available when the engine is idle or off.**


File Transfer

To transfer files from a USB drive, select the file to be copied (filename will be highlighted), then select *Copy*. Please allow a sufficient amount of time for the file to transfer.

The following media formats are supported for file transfer:

- **AUDIO:** .mp3
- **VIDEO:** .mp4 / .avi / .flv / .jpeg / .mov / .png / .wmv
- **IMAGE:** .pdf

Smart Helm Seat

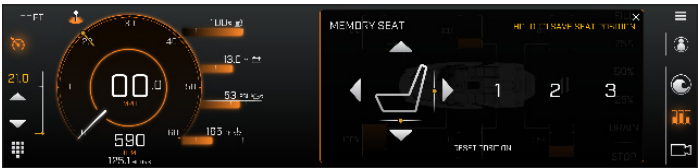

The *Smart Helm Seat* menu allows the operator to adjust the position of the Smart Helm Seat. Multiple “memory seat” positions may be saved, edited, and loaded.

Use the arrow buttons to adjust the seat forward/back and up/down. To reset the seat’s position (all the way back and down), select *Reset Position*.

To save the current seat position, press and hold a numbered save slot next to the seat controls for five (5) seconds. This will overwrite a previously saved position in that save slot.

To load a saved seat position, press one of the numbered save slots.



When finished, select the X icon to collapse the menu.

## Driver Profiles



1	CREATE NEW DRIVER
2	EDIT PROFILE
3	DELETE PROFILE

The Driver Profiles feature allows the operator(s) to customize and save their preferred driving setup for easy access. Each profile consists of a name, display theme, and info layout preferences.

### Create New Driver

1. Select *New Driver* to create a new driver profile.
2. Use the on-screen keyboard to enter the new driver's name, then select *Next* to edit.



3. Select *Display Theme* to choose between color options.



4. Select *Display Info* to choose between single- or dual-screen mode. The dual-screen option can simultaneously display two of the three info systems (surf controls, ballast, and video).



5. Select *Memory Seat* to set the preferred position of the Smart Helm Seat. Use the arrow buttons to adjust the seat forward/back and up/down, then select *Next* to exit.



6. Select *Save* to store the new profile.

### Edit Profile

Select a Driver Profile and select *Edit Profile* to edit the Driver Profile's name, display theme, and info layout preferences.

### Delete Profile

Select a Driver Profile and select *Delete Profile* to permanently delete the Driver Profile.

## Go Home Mode

Select *Go Home Mode* to automatically perform the following functions in preparation for docking the boat:

- turn off cruise control,
- drain all ballast tanks,
- center the Surf Gate, and
- stow the Power Wedge.

NOTE: *Go Home Mode* functions ONLY when the boat is moving between 1-10 mph.

## Docking Mode

Select *Docking Mode* to change the throttle sensitivity and switch the view to the docking camera (if equipped) for more controlled docking. Return to normal throttle sensitivity by selecting *Docking Mode* a second time.

## Day/Night Mode


Select Day/Night Mode to toggle between touchscreen brightness presets. Presets may be edited on the Backlighting Settings screen (Settings > System Settings > Backlighting).

## Collapse Menu

Select Collapse Menu to close the Drop-Down Menu and return to the Main View.

## Rider Profiles

A Rider Profile is a named collection of presets for set speed, Surf Gate positions, Power Wedge positions, and ballast adjustments. Select Rider Profiles from the Main View to open the Rider Profiles screen, which allows the operator to create, edit, and delete Rider Profiles.

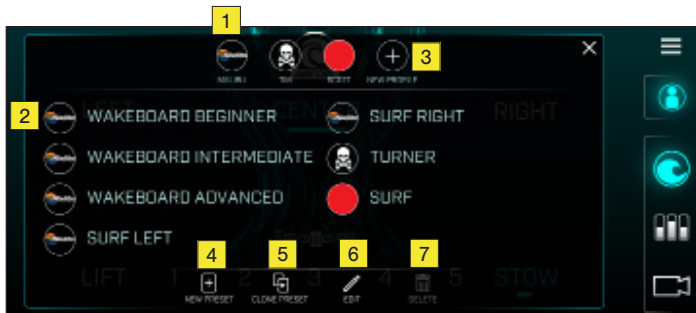

1	RIDER PROFILES	5	CLONE PRESET
2	RIDER PRESETS	6	EDIT PRESET
3	CREATE NEW PROFILE	7	DELETE PRESET
4	CREATE NEW PRESET		

**Create New Profile**

1. Select **Create New Profile** to create a new Rider Profile.
2. Use the on-screen keyboard to enter a profile name, then select **Next**.




3. Create an icon for the Rider Profile by selecting a built-in icon, uploaded photo, or color swatch.



4. Select Next to save the Rider Profile.

**Create New Preset**


1. Select **Create New Preset** to create a new preset.
2. Select an existing **Rider Profile** to attach the preset to, then select **Next**.

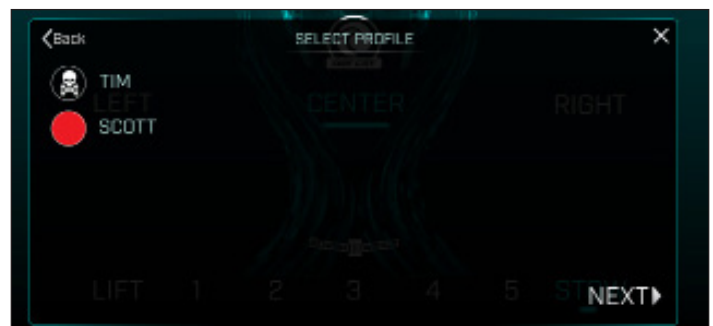


3. Use the on-screen keyboard to enter a name for the preset, then select Next.




4. Use the on-screen keypad to input the desired set speed.

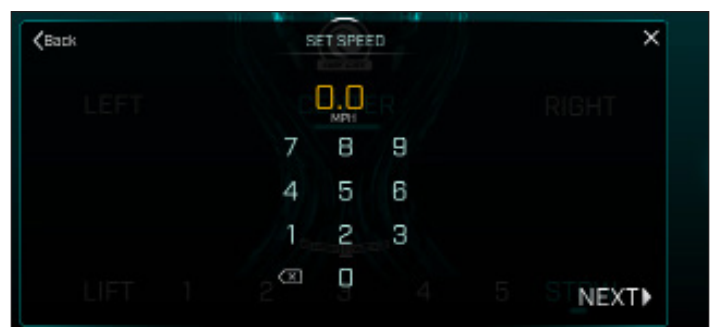


5. Select desired Surf Gate and Power Wedge positions, then select Next.

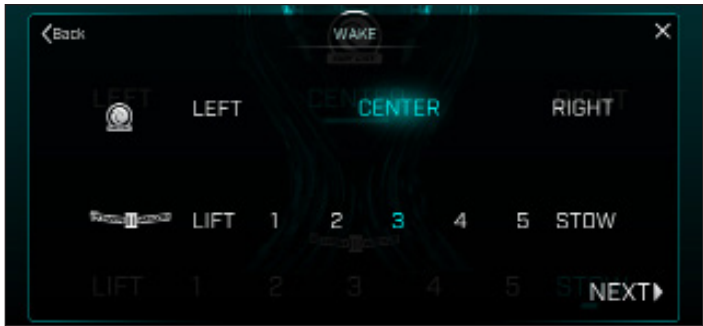


6. Adjust ballast to desired levels, then select Next.

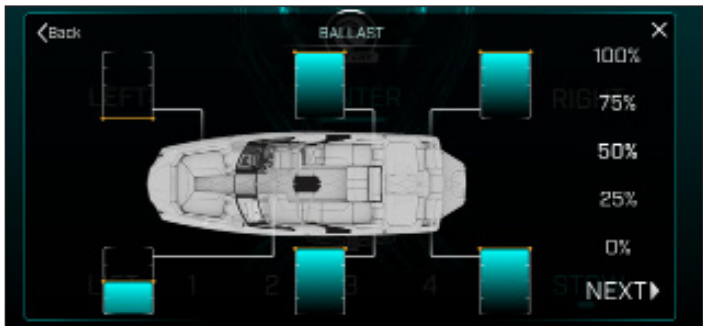

7. Review the preset customization summary. Select Cancel to cancel the entire preset, or select individual sections to edit.

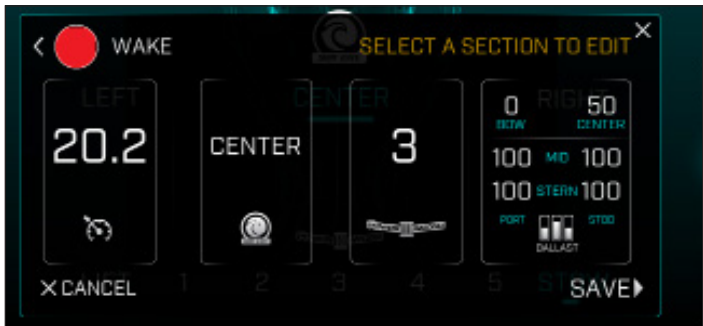

8. Select Save to save the preset. Once saved, the preset can be activated or further edited when selected.

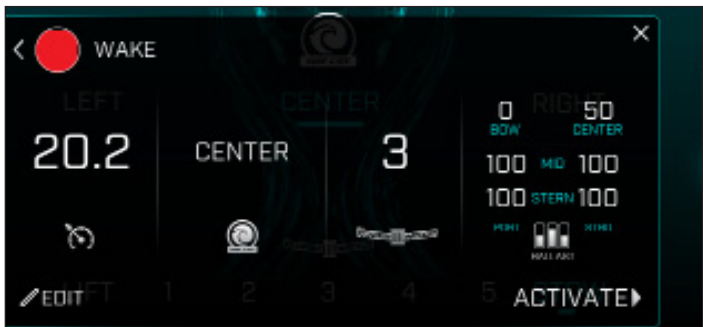

### Clone Preset

With a preset selected, select Clone Preset to create a copy of the selected preset.


### Edit Preset

With a preset selected, select Edit Preset to configure the selected preset.

### Delete Preset

With a preset selected, select Delete Preset to remove a preset from the selected Rider Profile.

## 8" DISPLAY — CONTROLS

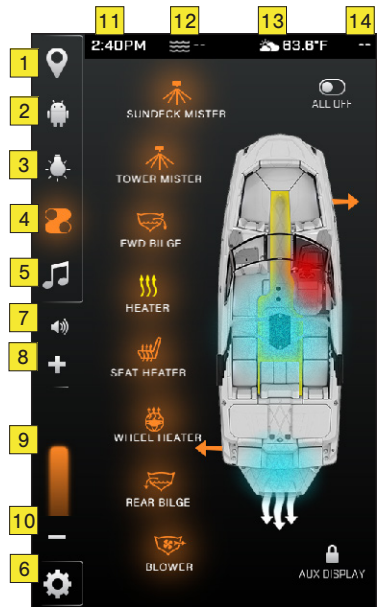


CONTROL GROUPS			
1	NAVIGATION	4	CONTROLS
2	ANDROID APPS	5	AUDIO
3	LIGHTING	6	SETTINGS
AUDIO			
7	MUTE/UNMUTE	9	VOLUME MIXER
8	VOLUME INCREASE (+)	10	VOLUME DECREASE (-)
INFORMATION			
11	TIME	13	AIR TEMPERATURE
12	WATER TEMPERATURE	14	HEADING

## Navigation

Select *Navigation* to display the GPS navigation app on the 8" display.



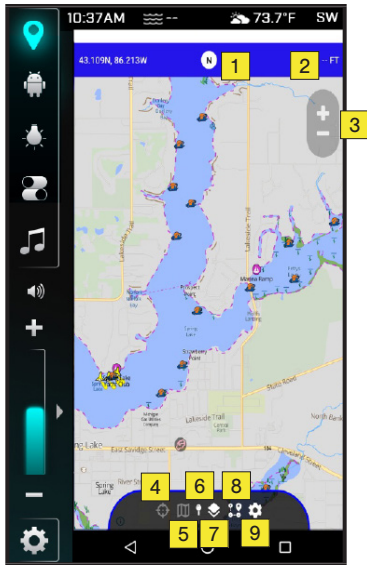

1	DIRECTION	6	CREATE WAYPOINT
2	DEPTH	7	SELECT LAYERS
3	ZOOM IN/OUT	8	MANAGE GPX TRACKS
4	RECENTER	9	SETTINGS
5	TOGGLE MAP/SATELLITE VIEW		

#### **Direction**

Displays the current compass direction of the boat.

#### **Depth**

Displays the current water depth.

#### **Zoom In/Out**

Select the (+) icon to zoom in; select the (-) icon to zoom out.


#### **Recenter**

Select to recenter the view on the boat's current position.

#### **Map/Satellite View Toggle**


Select to toggle between *Map View* and *Satellite View*. **NOTE:** Satellite data must be downloaded for this feature to function.

#### **Create Waypoint**

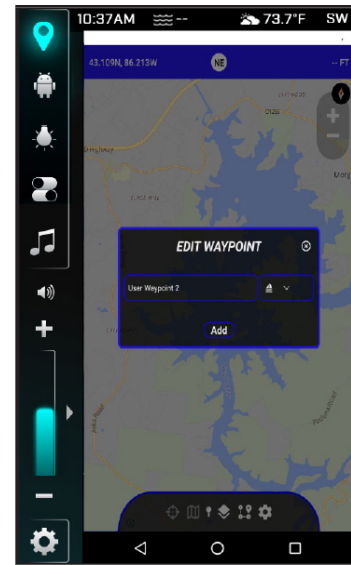

Select *Create Waypoint*, then tap a position on the map to create a new waypoint, choose a name and symbol for the waypoint, then select *Add* to add the waypoint.


#### **Manage Layers**

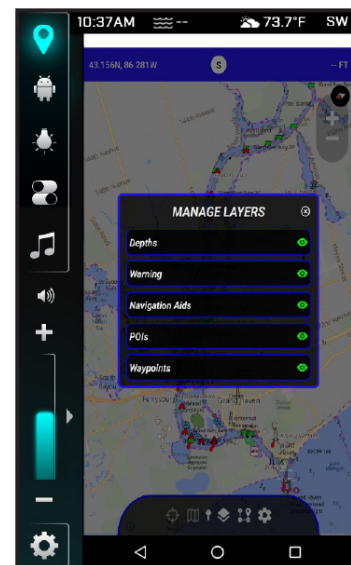

Select *Manage Layers* to display the *Manage Layers Menu*, which allows the operator to toggle the visibility of various map layers. All layers, depths, warnings, navigation aids, points of interest (POIs), and waypoints are set to visible by default.

**NOTE:** Certain layers may require the installation of navigation charts via USB.


Create GPX Track

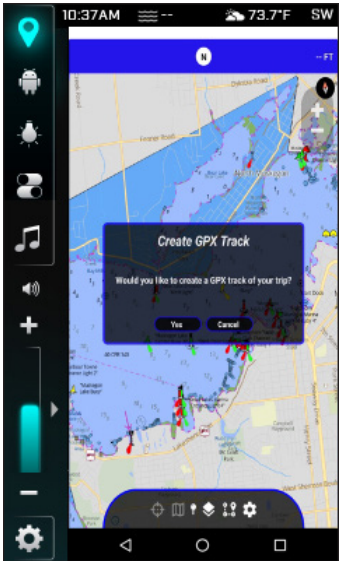

Select *Create GPX Track* to create, update, and save the navigational track of a trip.

Tap a position on the map to begin recording the track. To update, save, or cancel the track, tap again.

Navigation Settings

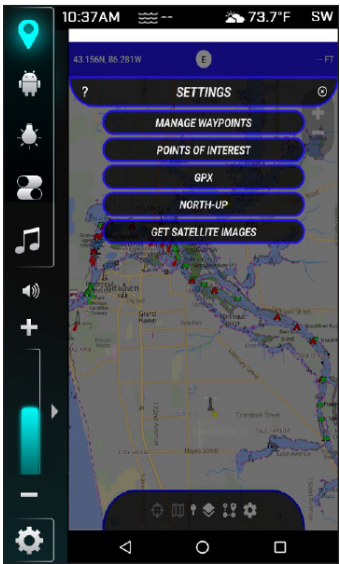

Software Version

Select the question mark icon (?) to view the current navigation software version.

Manage Waypoints

Select *Manage Waypoints* to view, edit, and delete waypoints.

Points of Interest

Select *Points of Interest* to view the database of Points of Interest. When selected, a Point of Interest will automatically generate an editable waypoint.

Manage GPX Tracks


Select *Manage GPX Tracks* to view all saved GPX tracks. Select a saved GPX track to rename, delete, or edit it.

Get Satellite Images

Select *Get Satellite Images* to download satellite image overlays for enhanced navigation (enables *Satellite View*).

**NOTE:** Downloads require Wi-Fi and a stable Internet connection. Download may take some time to complete.

Controls

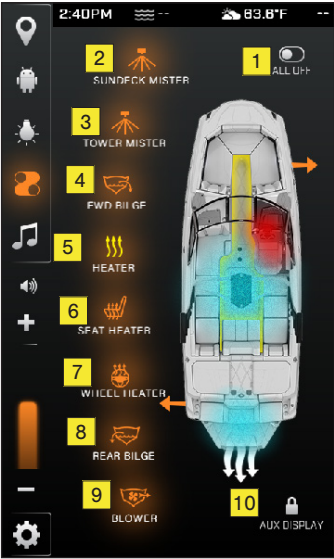

1	ALL OFF	6	SEAT HEATER ON/OFF
2	SUNDECK MISTER	7	WHEEL HEATER
3	TOWER MISTER	8	REAR BILGE ON/OFF
4	FORWARD BILGE ON/OFF	9	BLOWER ON/OFF
5	HEATER LOW/ON/OFF	10	AUXILIARY DISPLAY LOCK

- Select *All Off* to turn off any devices that are running on the *Controls* screen.
- Select *Sundeck Mister* to toggle the Tower Mister ON/OFF.
- Select *Tower Mister* to toggle the Tower Mister ON/OFF.
- Select *Forward Bilge* to toggle the forward bilge pump ON/OFF.
- Select *Heater* to toggle the heater LOW/ON/OFF.
- Select *Seat Heater* to toggle the seat heater ON/OFF.
- Select *Wheel Heater* to toggle the steering wheel heater ON/OFF.
- Select *Rear Bilge* to toggle the rear bilge pump ON/OFF. If an *Auto-Bilge Alert* occurs, navigate to the *Controls Screen* to see which bilge pump is running.
- Select *Blower* to toggle the blower ON/OFF. When the

boat is initially powered on, the blower will start and run for four (4) minutes.

- Select *Auxiliary Display Lock* to lock/unlock the auxiliary display (if equipped). When locked, the auxiliary display cannot be operated.


## Lighting



1	ALL OFF	6	INTERIOR LIGHT ON/OFF
2	DOCKING LIGHT ON/OFF	7	STORAGE LIGHT ON/OFF
3	TOWER LIGHT ON/OFF	8	OVERHEAD LIGHT ON/OFF
4	NAVIGATION LIGHT ON/OFF	9	UNDERWATER LIGHT ON/OFF
5	ANCHOR LIGHT ON/OFF	10	RGB LIGHTING MENU

- Select *All Off* to turn off any lights that are on.
- Select *Docking* to toggle Docking Lights LOW/HIGH/OFF.
- Select *Tower* to toggle Tower Lights FWD/AFT/COMBINED/OFF.
- Select *Nav* to toggle Navigation Lights ON/OFF.
- Select *Anchor* to toggle Anchor Light ON/OFF.
- Select *Interior* to toggle Interior Lights ON/OFF.
- Select *Storage* to toggle Storage Lights ON/OFF.
- Select *Overhead* to turn Overhead Lights ON/OFF.
- Select *Underwater* to toggle Underwater Lights ON/OFF.
- Select *RGB* to access the *RGB Lighting Menu*, which allows individual or group control of the lighting zones on the boat.

## RGB Lighting Menu

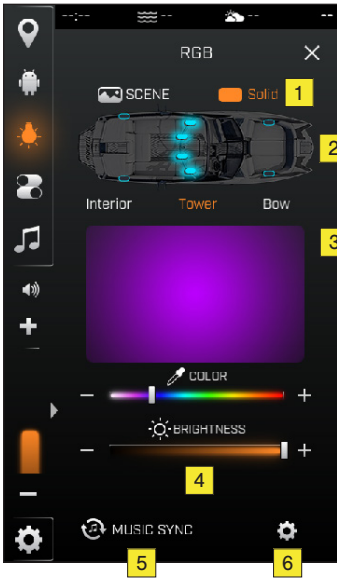

1	COLOR MODE	4	BRIGHTNESS
2	ZONE BACKLIGHTING	5	MUSIC SYNC
3	COLOR SELECTION	6	MUSIC SYNC SETTINGS

### Color Mode

Toggle *Color Mode* between *Solid* and *Scene*. *Color Scenes* are preselected groupings of colors that automatically cycle.

### Zone Backlighting

Select a backlighting zone (*Interior/Tower/Bow*) to apply the selected color and mode.

### Color Selection

Use the *Color* slider or the (+/-) icons to select a color for the selected zone.

### Brightness


Use the *Brightness* slider or the (+/-) icons to adjust the brightness of the RGB lighting in the selected zone. Move the slider all the way left to turn off the zone's lights.

### Music Sync

Select *Music Sync* to have the lighting effects react to the music playing through the MYOS display stereo system. Select *Music Sync Settings* to open the *Music Sync Settings Menu* and customize the *Music Sync Mode*.



Audio

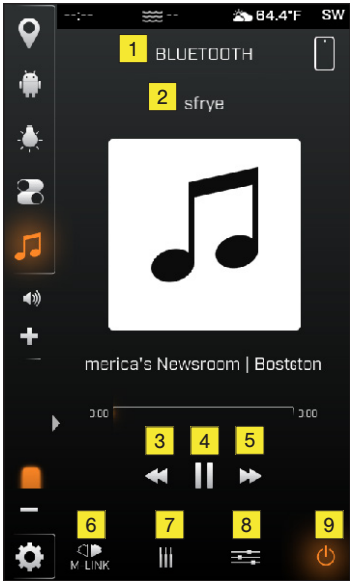

1	SOURCE SELECT	6	M-LINK
2	CONNECTED DEVICE	7	EQUALIZER
3	TRACK BACK	8	AUDIO MIXER
4	PLAY/PAUSE	9	AUDIO POWER ON/OFF
5	TRACK FORWARD		

Source Select

Select the *Audio Source* name at the top of the screen to display the *Audio Source* selection menu, then select the desired *Audio Source*.


If the boat is equipped with an M-Link antenna, the auxiliary input source will be replaced by an M-Link button.



Audio Source Screen  
(With M-Link)

Audio Source Selection Menu  
(No M-Link)

Bluetooth

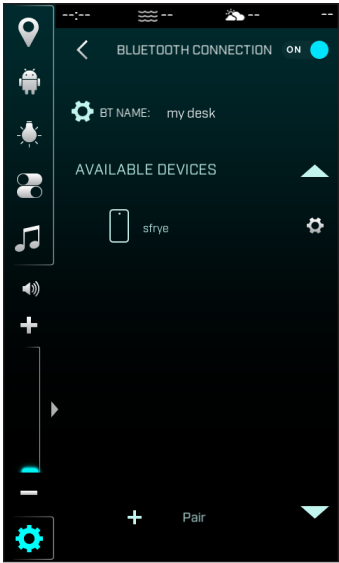

Wirelessly play music from a connected Bluetooth-enabled device in range of the boat by selecting from a list of paired devices. If the desired device has been paired and is within range, connect to the device from the 8” display screen.

To pair a Bluetooth device, select *Pair*.

To change the name of the Bluetooth device, navigate to the *Bluetooth Connect* screen (*Settings > Connection Settings > Bluetooth Connect*).

AM/FM/Weather

Select *AM* or *FM* or *Weather* for AM/FM stereo channels/ weather bands.

USB

Select *USB* to access a device plugged into the dash USB port. If a USB input device is plugged in that has music stored on it, the *Audio Source* will automatically switch to USB.

For audio playback, the following media formats are supported:

- *ac3 (Dolby digital) / .hdcd / .lpcm / .mpeg / .mpeg 2.5 / .pcm / .wmv*

Android Apps

Touch *App* to play music from the *Embedded Android Application*, where the user can download various Apps. Download a favorite music app and save a playlist to listen to music at any time.

AUX

Select *AUX* to access the *Auxiliary Input Port* that is located in the glovebox.

M-Link (if equipped)

Select *M-Link* to access the M-Link stereo control screen.

Equalizer Settings and Mixer



Select *Equalizer Settings* to display the *Equalizer Settings* screen. Then, select either Presets or Custom.

EQ - Presets

Select from one of the seven (7) built-in EQ Presets to tune the sound balance for certain music genres or styles:


ACOUSTIC	CLASSIC	DANCE
ELECTRONIC	FLAT	HIP-HOP
ROCK		

EQ - Custom

Fine-tune the balance between the stereo system’s treble, mid-range, and bass levels. To increase a level, drag the slider to the right or select the (+) icon; to decrease a level, drag the slider to the left or select the (-) icon.

Mixer

Select *Mixer* to display the Mixer screen, which allows the operator to adjust the volume level of individual speakers. Use the sliders or (+/-) icons to adjust the volume for the bow, interior, tower, and subwoofer(s).

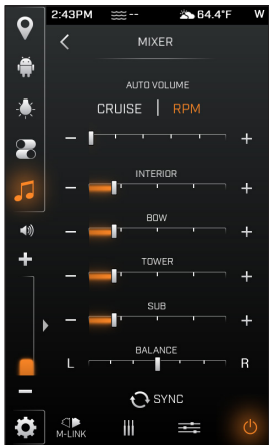

The *Auto-Volume* level can also adjusted and toggled between *Cruise* and *RPM* modes. Each segment of the bar represents a 20% volume increase.

**Cruise:** When Cruise Control is engaged and the set speed is met, Auto-Volume will increase the stereo volume based on the level selected.

**RPM:** Volume increases with the RPM of the engine in 750 RPM increments. At full throttle, volume will be 100%.

Wireless Audio Sharing (M-Link)

Audio may be wirelessly shared between boats equipped with either an M-Link (or A-Link) device.



M-Link, Transmit Mode.

M-Link, Receive Mode.

From the M-Link screen, the M-Link may be set to one of three (3) modes:

**OFF:** When off, the M-Link will neither transmit nor receive any signals from other nearby M-Link-equipped boats.


**TRANSMIT:** In Transmit Mode, share the boat’s audio with nearby bonded receiving devices within range. The device name that will be seen by other devices is the same as the Bluetooth device name. Select a bonded receiving device from the list to re-name or remove it.

**RECEIVE:** In Receive Mode, when “Explore” is selected, the module will search for compatible transmitting devices within range to bond with. To bond to a transmitting device, select it from the list.

To save a bonded transmitting device to the Favorites list, select “Add To Favorites. Select “Swing” to automatically switch between favorited devices that are transmitting and in range. To disconnect from the transmitting device, select “Disconnect”.

While bonding, a dashed ring will spin around the M-Link symbol; when bonding is complete, the ring will turn solid.


# 8” DISPLAY – SETTINGS

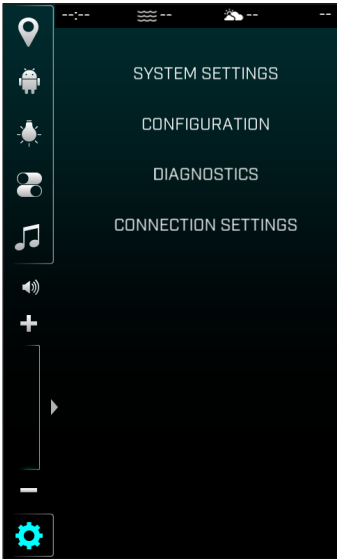

Select the *Settings* gear icon to navigate to the *Settings* screen, which allows the operator to view information and edit settings for most features of the boat.

## System Settings

### Software

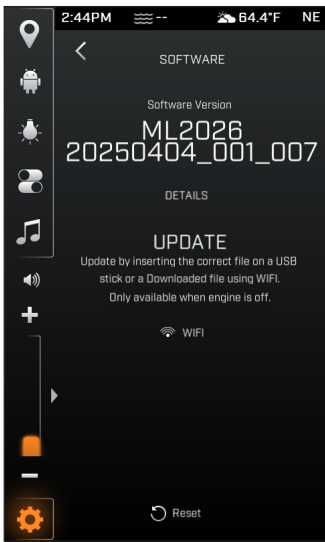

Select *Software* to view the installed software version and update the system via USB Input Device or Over-The-Air updates.

#### Software Update – USB

For USB Input Device Updates, verify that the software update is the only file that is on the USB Input Device. Insert the USB device into the USB port on the dash. After the file is finished copying to the system, an *Install* button will


appear. Remove the USB device and press the *Install* button. The system will reboot to an animated progress bar. After the software update is complete, the system will reboot again.

#### Software Update – Over-The-Air (OTA)

For Over the Air updates, the system must be connected to an active Wi-Fi connection. Select *Wi-Fi* to start the process of verifying the System Software Version against the latest software version that is available.

If an update is available, the *Software* screen will display a message with the new software version and the download size. Select *Install* to begin the download process. A dialog box will display the download percentage. After the download is complete, the *Install* button will appear. Pressing the *Install* button will cause the system to reboot and display an animated progress bar. After the software update is complete, the system will reboot again.

## Backlighting

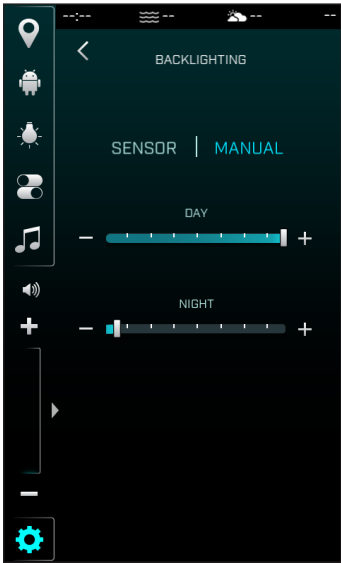

Select *Backlighting* to adjust the brightness of the 15” screen, 8” screen, and 4” auxiliary screen from 1-100%.

There are two backlighting modes: *Sensor* and *Manual*.

In *Sensor Mode*, the system utilizes a light sensor to determine the time of day and adjusts the brightness as follows:


Day	100%	Dawn/Dusk	60%	Night	5%
-----	------	-----------	-----	-------	----

In *Manual Mode*, the operator can set the brightness for Day and Night Mode. Toggle between Day and Night Mode by selecting the Day/Night Mode icon is found in the upper right corner of the 15” display screen.



---


## Language

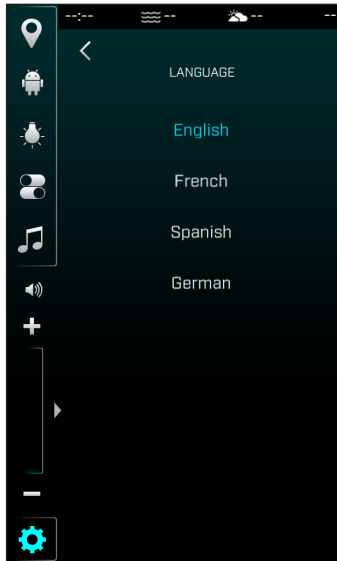

Select *Language* to switch between four (4) languages: English, French, Spanish and German. If a Factory Reset is initiated, the language will revert to English.

---


## Appearance

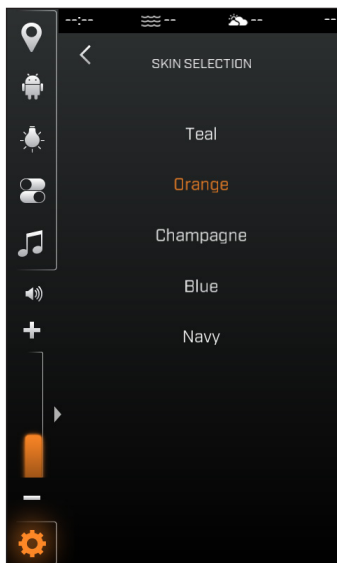

Select *Appearance* to customize the look and feel of the interface. There are five (5) skins to choose from: (teal [default], orange, champagne, blue, and navy). These skins will change the accents and highlights on all screens.

---

## Configuration

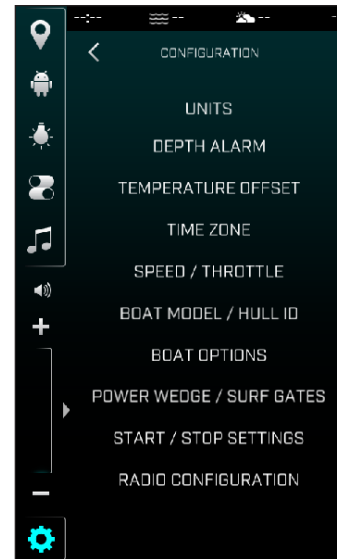

---

### Units

Select *Units* to toggle between Imperial and Metric units.

---

### Depth Alarm

Select *Depth Alarm* to adjust the depth at which the shallow depth alarm will sound. A value of 0 will turn the alarm off.

---

### Temperature Offset

Select *Temperature Offset* to adjust the displayed air and water temperatures by an offset value.

---

### Time Zone

Select *Time Zone* to select a time zone, and toggle Daylight Savings Time ON/OFF, and toggle the system time format between 12-hour and 24-hour.

---

### Speed/Throttle

Select *Speed/Throttle* to toggle the throttle sensitivity between *Standard Mode* (casual) and *Sport Mode* (aggressive).

---

### Boat Model/Hull ID

Select *Boat Model/Hull ID* to enter the HIN and select the model of the boat.

---

### Boat Options

Select *Boat Options* to toggle on-screen touch controls for optional equipment. When enabled, the controls will appear on the screen; when disabled, controls will not appear.

---

### Power Wedge/Surf Gate

Select *Power Wedge/Surf Gate* to access options for the Power Wedge and Surf Gates.

Toggle *Auto Wedge*, a feature that automatically moves the Power Wedge from the selected position to a position of lowest drag when the boat slows, and returns when the boat resumes set speed.

Toggle the *Light Signal* for the visual indication during a surf transfer. Select the volume level for audible surf tones.

To initiate Surf Gate calibration and service mode, select *Begin*.

## ⚠ WARNING

Ensure all people are well clear of the Surf Gates during calibration and service mode. Failure to do so may result in serious injury.


### Start/Stop Settings

Select Start/Stop Settings to change or disable the 4-digit Engine Start Code. When enabled, the Engine Start Code must be entered to start the engine.


### Radio Configuration

Select *Radio Configuration* to set the *Radio Region*.

## Diagnostics

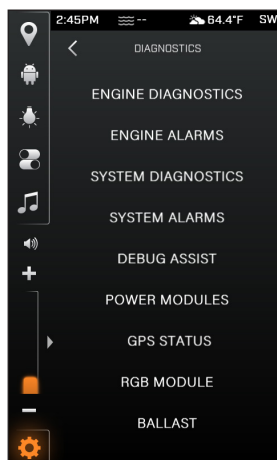

### Engine Diagnostics

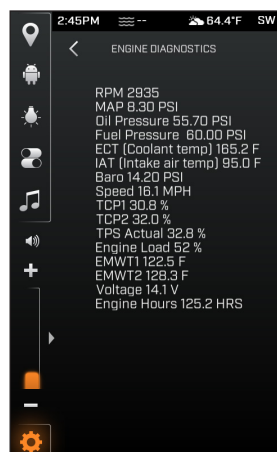

Touch *Engine Diagnostics* to view on-screen engine diagnostic information.

### Engine Alarms

Select *Engine Alarms* to view currently active or inactive engine alarms. Inactive alarms can be set to hidden or visible.

### System Diagnostics

Select *System Diagnostics* to view on-screen system diagnostic information concerning boat sensors and GPS signal.

### SVM – Camera Module

Select *SVM* to show the current firmware version, perform a firmware update, or adjust the water level offset for the onboard cameras.

To perform a firmware update for the SVM black box, insert a USB drive with the latest update files and follow the on-screen instructions.

### Rudder Calibration

Touch the *Rudder Cal* button, located in the *System Diagnostics* screen, to calibrate the rudder position sensor. The boat needs to be moving less than 5.0 mph/8.1 kph with the engine OFF, in order for the calibration to function. Follow the on-screen directions.

### Radio

Touch the *Radio* button, located in the *System Diagnostics* screen, to update the *Radio Black Box Firmware* from an USB device. Do not remove the update USB or power supply while the update is in process.

### M-Link

Select *M-Link* to view the current firmware version of the M-Link module. Select *Factory Reset* to clear all saved favorite devices.

### Smart Seat

Select *Smart Seat* to review current seat position information, motor controls, and current software version.

### System Alarms

Select *System Alarms* to view any **ACTIVE** or **INACTIVE** non-engine-related *System Alarms*.

### Debug Assist

Select *Debug Assist* to access controls for **AUTHORIZED MALIBU DEALER TECHNICIANS ONLY**.

### Power Modules

Select *Power Modules* to see the **INPUT** and **OUTPUT** status of each Power Module.

If the event of an overcurrent situation happens, reset the fault from these screens.

### RGB Module


Select *RGB Module* to view lighting system hardware and status information.

**GPS Status**

Select *GPS Status* to view GPS satellite information in the Android diagnostic app.

**Ballast**

Select *Ballast* to view ballast system flush controls (if equipped).

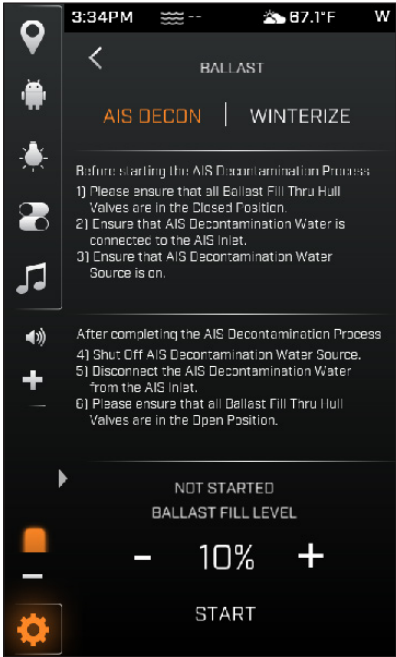

Select *AIS Decon* to initiate AIS ballast flush sequence. Read and follow all onscreen instructions. For detailed AIS decontamination instructions, refer to the *Ballast System* section in the *How It Works* chapter of this manual.

Select *Winterize* to initiate winterization ballast flush sequence. Read and follow all onscreen instructions. For detailed winterization instructions, refer to the *Ballast System* section in the *How It Works* chapter of this manual.

**Connection Settings**

**Bluetooth Connection**

Select *Bluetooth Connection* to access Bluetooth settings. Toggle Bluetooth functionality ON/OFF, change the name of the Bluetooth device, view all paired devices, delete devices, and select a favorite device.

**WiFi Connection**

Select *WiFi Connection* to see available Wi-Fi networks that are within range of the boat.


**4” AUXILIARY DISPLAY**

The boat may be equipped with a 4” auxiliary display, located

on the port side of the lounge area that offers quick access to lighting and audio controls.


The auxiliary display may be locked from the 8” screen (lock icon in bottom-right corner).

**Auxiliary Display – Main View**

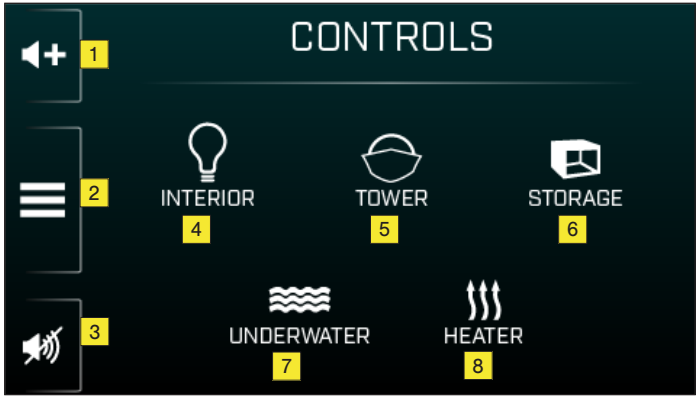

1	VOLUME MIXER	5	TOWER LIGHTS ON/OFF
2	OPTIONS	6	STORAGE LIGHTS ON/OFF
3	MUTE/UNMUTE	7	UNDERWATER LIGHTS ON/OFF
4	INTERIOR LIGHTS ON/OFF	8	HEATER LOW/HIGH/OFF

**Auxiliary Display – Options**

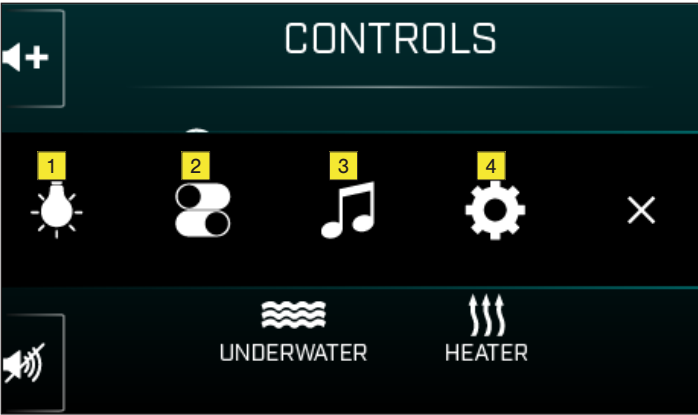

1	RGB LIGHTING	3	AUDIO
2	CONTROLS	4	SETTINGS




RGB Lighting



1	BACKLIGHTING ZONES	3	COLOR SCENES
2	COLOR SELECT	4	MUSIC SYNC

Audio

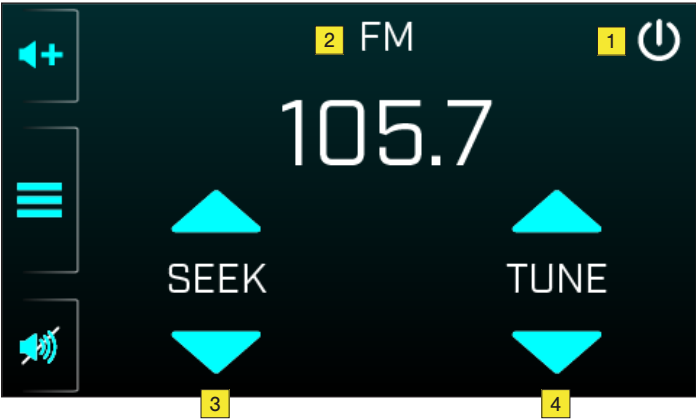


1	POWER ON/OFF	3	SEEK STATION
2	AUDIO SOURCE	4	TUNE STATION

Select Source




*Note: If the boat is equipped with an M-Link module, selecting the AUX source from the auxiliary display will switch the stereo input source to M-Link.*

Bluetooth/USB

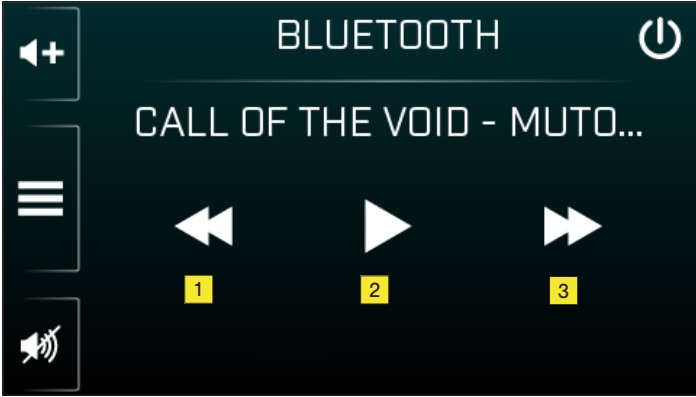

1	TRACK BACK	3	TRACK FORWARD
2	PLAY/PAUSE		

Volume Mixer

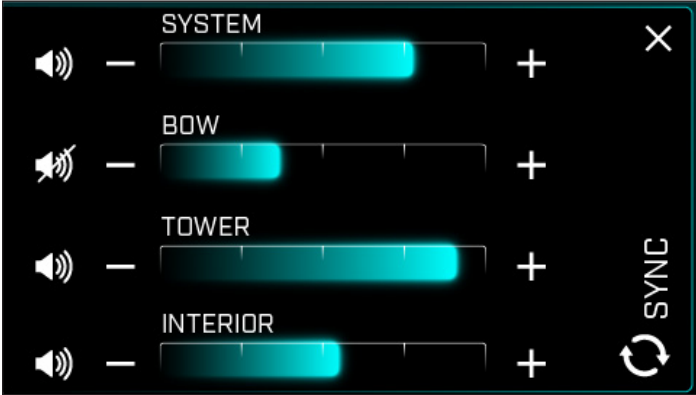

Settings



Sport Dash



Sport Dash Control Panel and Rotary Knob

The optional *Sport Dash* package includes a control panel that provides convenient access to the most-frequently used functions via six buttons and an analog rotary knob.

*Models: Standard on M242. Available on M230 and all Wakesetters.*

Sport Dash Buttons

There are six (6) buttons on the *Sport Dash* arranged in an upper row of three (3) and a lower row of three (3).

Surf Gate Control

The three (3) upper-row buttons—*Surf Left*, *Center*, and *Surf Right*—are for **Surf Gate Control**.

Power Wedge Control

The three (3) lower-row buttons—*Wedge Up*, *Wedge Down*, and *Wedge Stow*—are for **Power Wedge Control**. *Note: The boat must be moving between 1-10 mph to stow the Wedge.*

Sport Dash Rotary Knob

The *Sport Dash* rotary knob performs different functions based on whether it is turned, pushed, or pressed.

Turn

Turn the knob like a dial to adjust audio playback volume.

- **CLOCKWISE** : *Volume Up*
- **COUNTER-CLOCKWISE**: *Volume Down*

Push — Left and Right

Push the knob (without pressing it in) **LEFT** or **RIGHT** to seek the *Audio*.

- **LEFT**: *Seek Audio Back*
- **RIGHT**: *Seek Audio Forward*

Push — Up and Down

Push the knob **UP** or **DOWN** (without pressing it in) to adjust the *Cruise Set Speed*.

- **UP**: *Increase Cruise Set Speed*
- **DOWN**: *Decrease Cruise Set Speed*

Press

Press the knob **IN** like a button to **PLAY/PAUSE** the audio, depending on the *Active Audio Source*.

RESPONSE TXI — PREMIUM DASH



The TXi Premium Dash provides a powerful suite of digital controls, settings, and instruments via the 7” Display, located to the right of the steering wheel. At any time, the operator may use the intuitive touchscreen interface to view and configure important real-time boat performance and functionality information.

Be sure to read this entire manual before attempting to operate any controls.

RESPONSE TXI 7” DISPLAY

On the rightmost edge of the display are seven (7) buttons that may used to navigate the boat’s operating system.

	Day/Night Button
	Display Brightness Buttons <ul style="list-style-type: none"><li>• Increase Display Brightness</li><li>• Decrease Display Brightness</li></ul>
	Watersports Button
	Controls Button
	Gauges Button
	Settings Button

## 7" Display — Control Buttons

### Day/Night Button

Press the *Day/Night* button to cycle the display brightness between *Day Mode*, *Night Mode*, and *Sleep Mode*.

### Screen Brightness Buttons

To increase display brightness, press the big light bulb button; to decrease display brightness, press the small light bulb button

## Navigational Buttons

**NOTE:** Swiping side to side on the display will navigate between the *Watersports*, *Controls*, and *Gauges* screens.

### Watersports Button

Press the *Watersports* button to navigate to the *Watersports* screen.

### Controls Button

Press the *Controls* button to navigate to the *Controls* screen.

### Gauges Button


Press the *Gauge* button to navigate to the *Gauges Screen*.

### Settings Button

Press the *Settings* button to navigate to the *Settings Screen*.

## Watersports Screen

The *Watersports Screen* displays information about the *Ballast System*, *Auto-Set Wedge*, *Cruise Control*, and *Rider Profiles*.

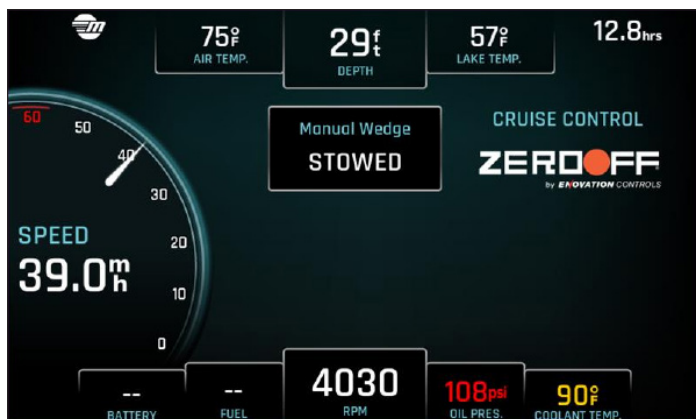

*Watersports Screen, (3-in-1 Event Zero Off GPS Enabled)*



*Watersports Screen, (3-in-1 Event Zero Off GPS Disabled)*

## Cruise Control

### If 3-in-1 Event Screen Equipped and Enabled

If the boat is equipped with the 3-in-1 Event Screen and the option is enabled in *Settings*, then cruise control is handled by the Zero Off GPS. On the *Watersports Screen*, a graphical Zero Off logo will appear under *Cruise Control*.

### If 3-in-1 Event Screen Not Equipped or Disabled

If the boat is either not equipped with the 3-in-1 Event Screen or the option is not enabled in *Settings*, then cruise control may be manually toggled and set on the *Watersports Screen*.

The engine must be running and in Neutral for the *Cruise Control* system to engage.

- The *Cruise Control Set Speed* shows the speed being commanded. The *Set Speed* can be set between five (5.0) mph to sixty (60) mph (or metric equivalent).
- The *Cruise Set Speed Adjustment* buttons will increase or decrease the *Set Speed* in one-tenth (0.1) mph/kph increments.
- The *Throttle Position* will show the driver the current position of the throttle that the engine is receiving. When the engine begins to govern the speed, a box will appear around the *Throttle Position Indicator* to highlight the desired range. If the *Throttle Position Indicator* is in the box, the box will be Green. If the *Throttle Position Indicator* moves above or below, the box will change to Red.
- After disabling *Cruise Control*, the boat will hold the programmed speed until you bring the throttle back to Neutral. Failure to remain aware of your surroundings when disabling *Cruise Control* could result in damage to the vessel and/or result in serious personal injury.



## ⚠ WARNING

The operator is responsible for the safe and prudent operation of the boat. The cruise control feature is designed to enhance the operator's capability to operate the boat—it does not automatically steer the boat, nor does it relieve the operator of the responsibility of safely operating the boat at all times. Avoid navigational hazards and never leave the helm unattended.

### Warning Icons


There are two warning icons that can be visible on the screen if there is an active alarm/fault on the vessel or on the engine. The *Check Engine* icon is in the bottom right corner of the display. If the engine control module is reporting an active alarm, the icon will be visible. Pressing this icon will navigate the screen to *Engine Alarms* screen.

The *System Warning* icon is in the bottom left corner of the display. If one of the following alarms is active this icon will be visible:

- Low Battery Voltage
- Low Fuel
- Shallow Depth Alarm
- Auto Bilge
- Wedge in Drag
- Power Module Overcurrent

Pressing the *System Warning* icon will navigate the screen to the *Systems Alarm* screen.

### Controls Screen

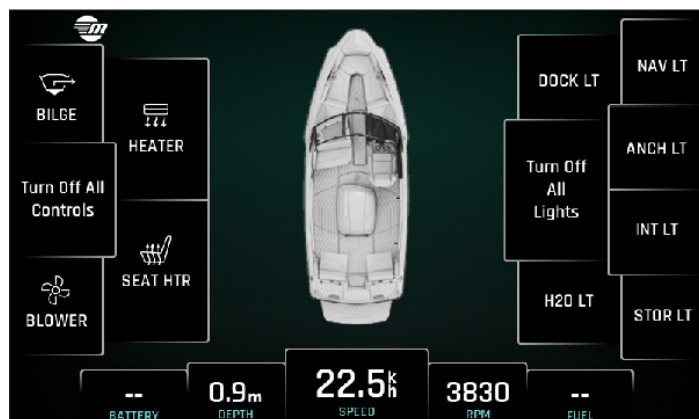

The *Controls Screen* allows the operator to toggle on and off the various lights and options installed on the vessel.

- Blower
- Bilge Pumps
- Interior Lights

- Storage Lights
- Navigation Lights
- Anchor Light
- Docking Lights
- Swim Lights
- Seat Heater
- Heater

If the buttons for any equipment are not shown, select *Settings* and verify that the output is active.

### Gauges Screen



The *Gauges Screen* displays the following information:

- **Vessel Speed (MPH or KPH)**  
Vessel speed can be shown in either Miles Per Hour (MPH) or Kilometers Per Hour (KPH). To toggle between MPH and KPH, access the *Settings Screen* and change the Units.
- **Engine – RPM**
- **Engine – Manifold Absolute Pressure (MAP) (psi or kpa)**
- **Engine – Intake Air Temperature (IAT) (°F or °C)**
- **Engine – Coolant Temperature (ECT) (°F or °C)**
- **Engine – Oil Pressure (psi or kpa)**
- **Engine – Fuel Pressure (psi or kpa)**
- **Engine – Battery Voltage (V)**
- **Engine – Hours (hrs)**
- **Engine – Load (%)**
- **Fuel Level (%)**  
Fuel Level is read from the level sender in the fuel tank. Note that movement of the boat can affect the reading, especially as the fuel level decreases. Be certain to read the *Fueling* information in the *Get Ready* chapter of this manual before operating the boat.
- **Time**

Time is read from the Zero-Off GPS Puck.

- **Water Depth (feet [ft] or meters [m])**

Water Depth is read from the depth finder.

- **Water Temperature (°F or °C)**


Water Temperature is read from the paddlewheel and depth finder.

- **Air Temperature (°F or °C)**

Air Temperature is read from a temperature sensor on the dash harness.


## Settings Screen

Press the *Settings* button to view the *Settings Screen* and manage system settings, calibration, boat configuration, and diagnostics. Changes are automatically saved upon leaving the *Settings Screen*.

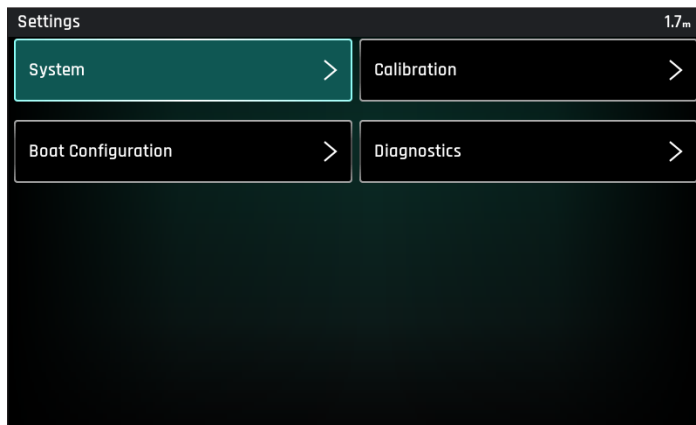

## Settings — System

### Software

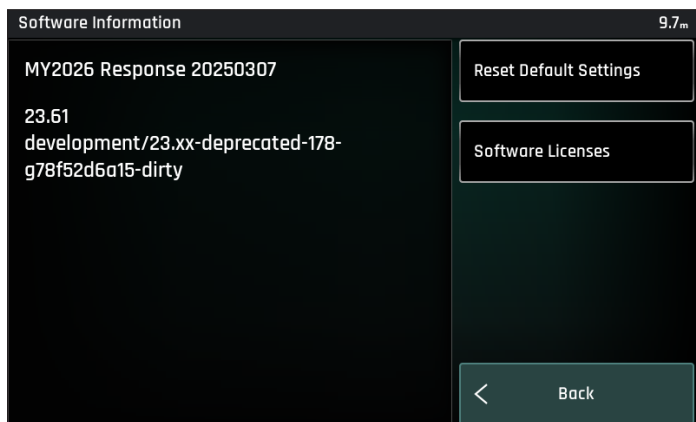

Select *About (Update)* to view the installed software version and instructions for how to install a software update.


Select *Reset Default Settings* to restore the system factory default settings. All previous calibration and settings will be lost.

Software updates may be performed on the screen. Upload the software package to an empty USB drive and insert it into the USB port under the dash. Navigate to the *Software* screen. Once the system recognizes the update file, a button will appear that says *Update*. Pressing this button will bring up a pop-up confirming that you want to perform a software update. Pressing YES will begin the software update process. The display will show the status of the update.

### Language

Select a language to set it as the system language.

## Settings — Calibration

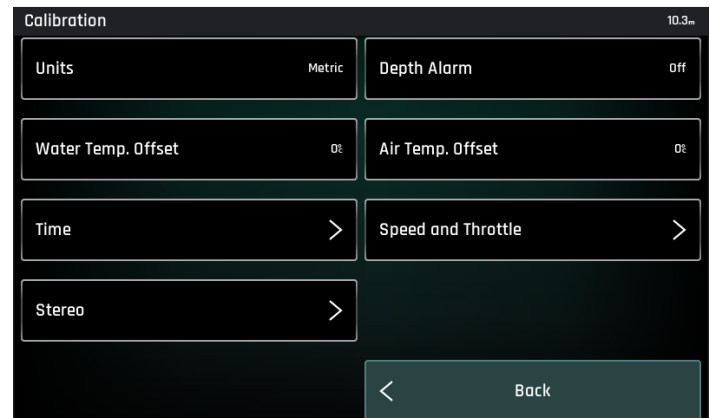

### Units

Toggle system units between select either *English* or *Metric*.

### Depth Alarm

Adjust the depth of the *Shallow Alarm*.

### Water Temperature Offset

Adjust the *Water Temperature* reading to change degree(s) plus or minus.

### Air Temperature Offset

Adjust the *Air Temperature* reading to change degree(s) plus or minus.

### Time

Choose from all time zones and turn ON/OFF Daylight Savings Time.


### Speed/Throttle

Toggle the Throttle Profile between *Standard* and *Aggressive*.

### Stereo


Select the *Auto-Volume Level*.

## Settings – Boat Configuration

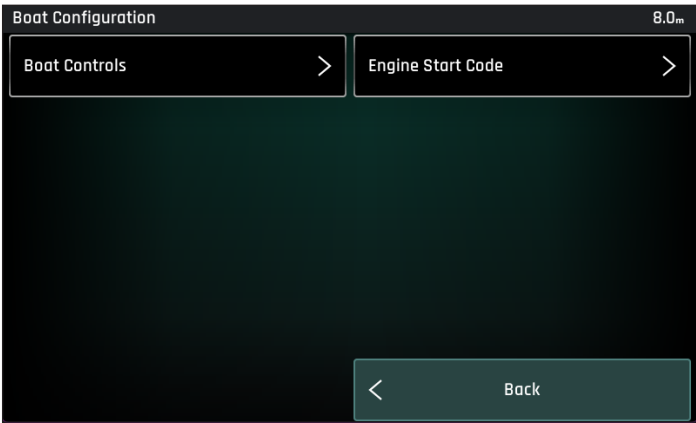

### Boat Controls

This screen displays onboard boat options (if equipped) and allows the operator to toggle them ON/OFF by selecting them.

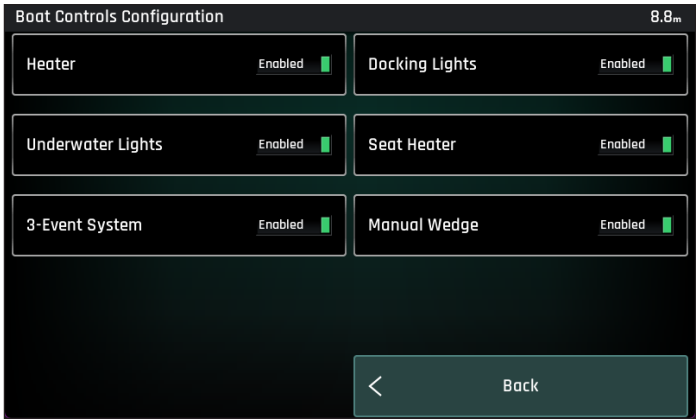

### Options

- 3-Event System
- Docking Lights
- Heater
- Manual Wedge
- Seat Heater
- Underwater Lights


### Engine Start Code

The *Start Code* must be entered to access this screen. After the code has been successfully entered, the operator may enable/disable/change the *Start Code*.

## Settings – Diagnostics

### Engine Diagnostics

Select *Engine Diagnostics* to view onscreen engine diagnostic information.

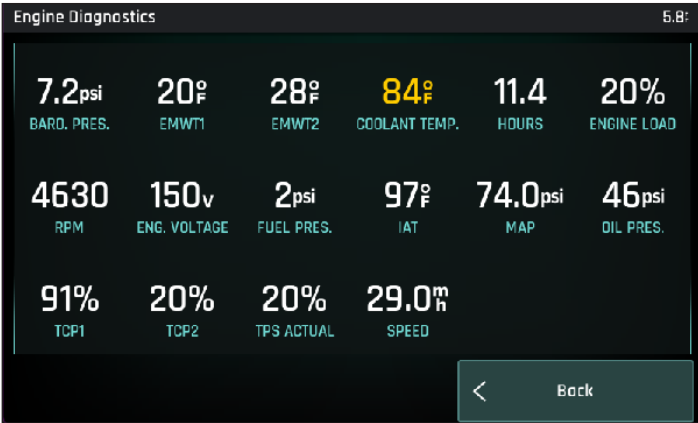

### Alarms

Select *Alarms* to view all active and inactive engine alarms.

### System Module Diagnostics

View *Fuel Level*, *Lake Temperature*, *Air Temperature*, and *Bilge* status. Press CAN 1 Status to see devices connected to the CAN 1 network and their status. Press CAN 2 Status to see devices connected to the CAN 2 network and their status.


### Debug Assist

This screen should only be accessed by authorized Malibu technicians.

### Power Modules

View the *Input*, *Output*, and *Relay* status of each of the power modules.

## Engine Start Code

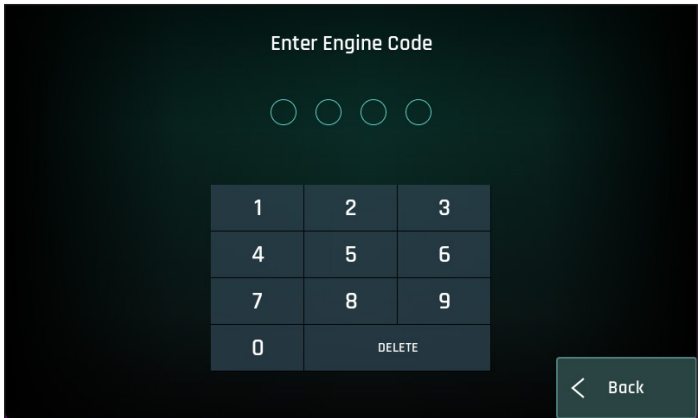

If the *Engine Start Code* feature is enabled, the operator will be prompted to enter an *Engine Start Code* each time the power button is pressed on or the ignition key is cycled. The code can be changed, or the prompt can be disabled, or if the code prompt is disabled, the blower will turn on for four minutes in preparation of the engine starting.



To enable/disable/change the *Engine Start Code*, press the *Settings Button* and navigate to *Settings > Boat Configuration > Engine Start Code*. The *Engine Start Code* must be entered before Start Code settings can be changed.

To reenable the start code prompt, go into the settings menu and select Show Engine Code. From that menu, select the *Show* button.

---

## 3-IN-1 EVENT SCREEN

Available as an option on the TXi, the 3-in-1 Event Screen is a combination touch and push button control. The display unit is a multi-functional tool that provides GPS tracking and multi-media functions. It also enables the operator to view various engine parameters and service codes.

---

## Care and Maintenance

A soft cloth can be used for cleaning the unit face. Window cleaner or alcohol can also be used to clean the glass portion of the display. Do not use harsh or abrasive cleaners on the unit.

---

## Home Screen and Buttons

The following information is displayed:

- Actual speed
- RPM
- MPH/KPH
- Number of detectable satellites
- Type of satellite signal
- Zero-Off GPS Speed Control switch
- Set speed increase/decrease touch points
- Pull out section for ski options
- Pop-up screen for slalom settings

---

## GPS Information

---

### Satellite Signals

GPS functionality depends on satellite signals—a minimum of four satellites is required to get a clear signal or “fix”. Possible satellite scenarios are described as follow:

---

#### Differential Satellite Fix

A “differential fix” means that not only does the GPS have enough satellite information to calculate a position, but it

also has information from ground-based reference stations. This is the most accurate type of fix. Accuracy can be as good as 10cm.

---

#### Non-Differential Fix

A “non-differential fix” means the GPS has enough satellite information to calculate a position but not enough information from the ground-based reference stations. Average accuracy with this type of fix is usually 15 meters.

---

#### No Fix


A “no fix” means the GPS cannot detect any satellites and therefore cannot calculate a position.

---

## Three Event Information

The unit is named for the three (3) events that may be monitored: *Slalom*, *Jump*, and *Trick*.


Touch the right arrow and the screen will shift to show the following *Change Event* options:

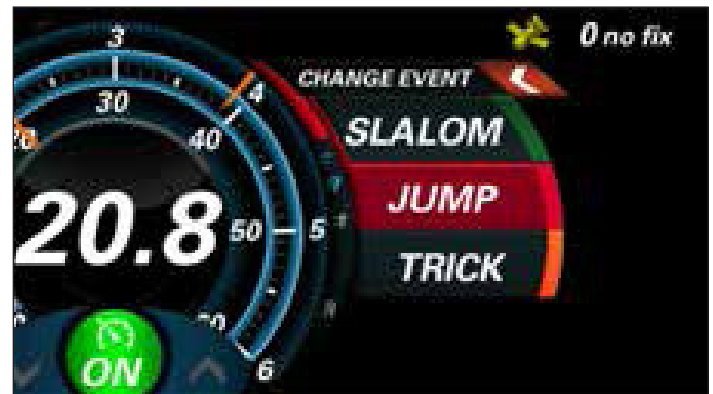

---

#### Slalom

When *Slalom* is chosen, the screen will shift again, and the following appears:

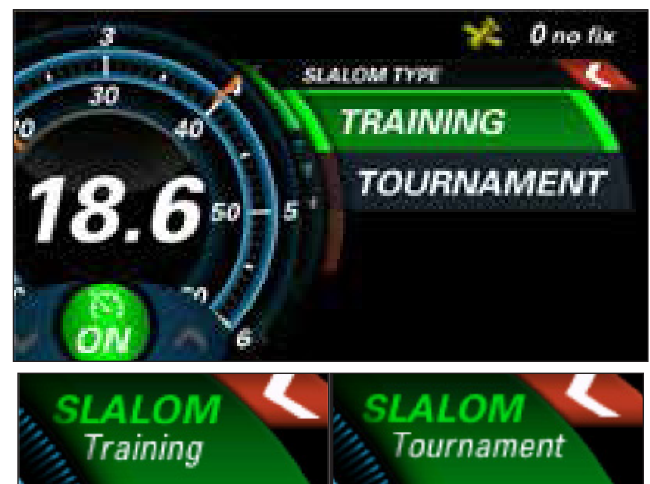


- When in *Training* mode, Set Speed may be set to any value.

- When in *Tournament* mode, the Set Speeds are predefined and limited to the following values:


15.5	17.4	19.3	21.1	23.0	24.9
26.7	28.6	30.4	32.3	34.2	36.0

- When in *Tournament* mode, the buoy times will be displayed while running a course:

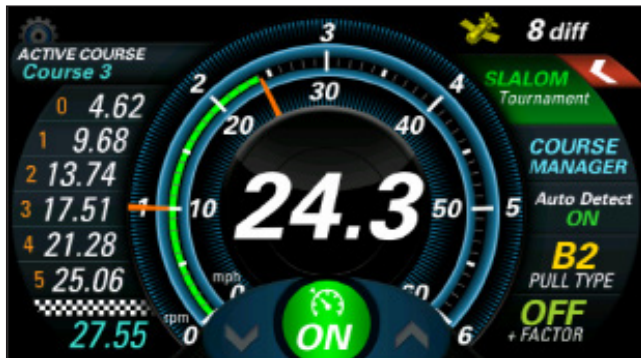


## Slalom Settings

Select *Slalom*, then touch the symbol in the upper left corner of the screen. The following will appear:

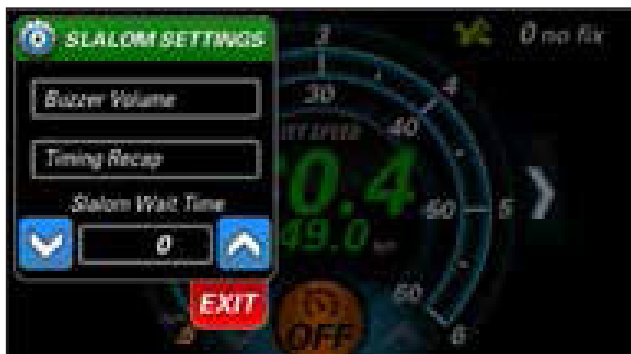

### Buzzer Volume

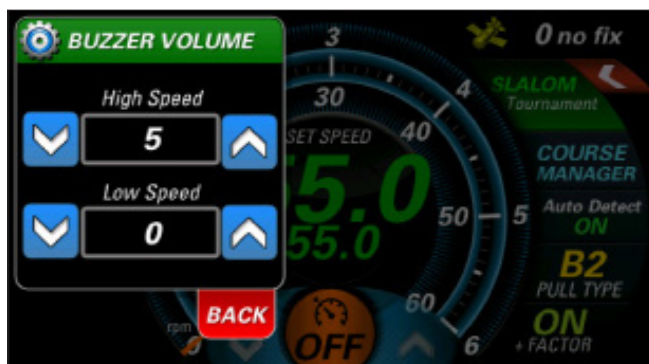

The buzzer volume adjustment compensates for increased engine noise. As the boat speed increases, and therefore the noises from the engine increase, the volume of the buzzer will increase proportionately to the boat's speed between 0 and 25 mph (40.2 km/h). No further increase occurs at speeds above 25 mph (40.2 km/h). The buzzer emits a sound when the set speed is reached and when reaching the

buoys at a course. Select *Buzzer Volume*.


Select the volume for High and Low speed by utilizing the up and down arrows. Touch *Back* to return to the *Slalom Settings* screen.

## Timing Recap



The timing recap will display the buoy times for the last two course runs. Touch Exit to return to the Home screen.

## Slalom Wait Time

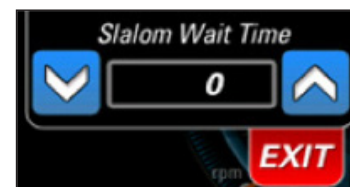

Wait time is the amount of time a skier can wait in the water before the warning timer starts to beep, indicating it is time to pull up the skier. As the warning timer nears the end, a beeper start to indicate the amount of warning time is close to the end. The beeping continues to increase in speed and volume in relation to the amount of warning time remaining. Each press of the up or down arrow increases or decreases the time by five seconds.


## Jump Settings

Select *Jump*, then touch the symbol in the upper left corner of the screen, and the following will appear:



---

## Buzzer Volume

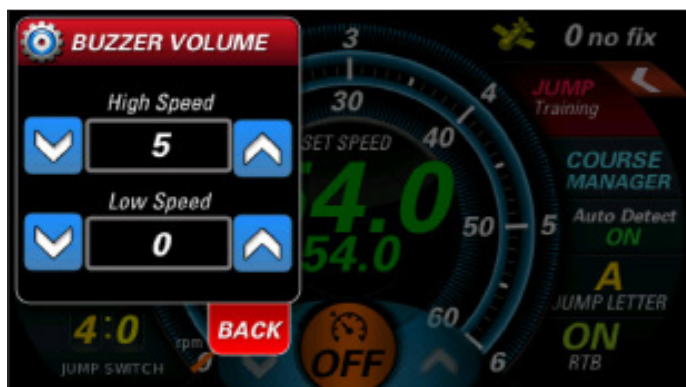

The buzzer volume adjustment compensates for increased engine noise. As the boat speed increases, and therefore the noises from the engine increase, the volume of the buzzer will increase proportionately to the boat's speed between 0 and 25 mph (40.2 km/h). No further increase occurs at speeds above 25 mph (40.2 km/h). The buzzer emits a sound when the set speed is reached and when reaching the buoys at a course. Select *Buzzer Volume*.

Select the volume for High and Low speed by utilizing the up and down arrows. Touch *Back* to return to the *Slalom Settings* screen.

---


## Timing Recap



The timing recap will display the buoy times for the last two course runs. Touch *Exit* to return to the *Home* screen.

---


## Jump Switch

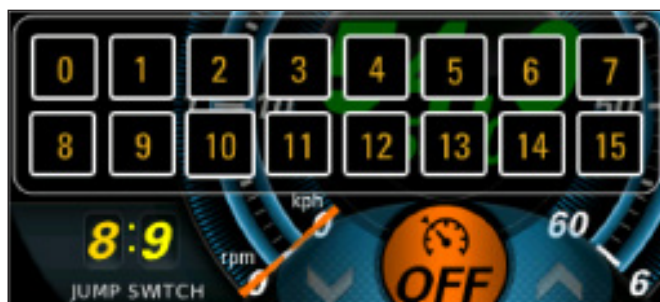

This number either increases or decreases the intensity of the “bump” value upon jump switch engagement. The number on the left side of the colon is for the first segment in the jump and the number on the right side of the colon is for the second segment of the jump. Depending on the boat, it can help jumpers achieve a balanced time. Touch each number to view and select an alternative number. Your authorized Malibu dealer can help you to determine the strength number that is best for your boat.

---

## Jump Switch Timeout

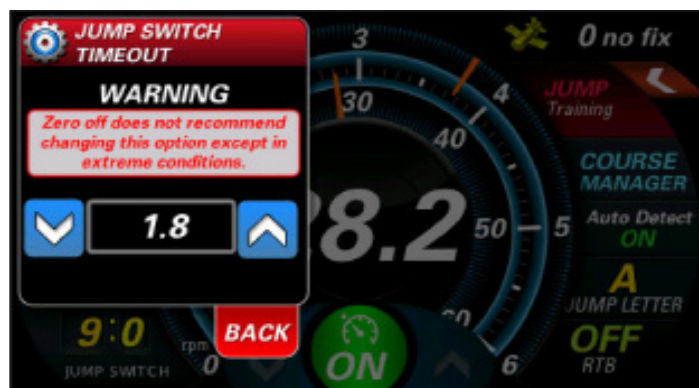

This is the amount of time that the boat will apply the accelerator on the jumpers counter cut (or anytime the jumper is out of the actual jump course.” This setting is adjustable for extreme headwinds or tailwinds, but it is recommended that it be left at 1.8 in nearly all instances. Touch *Back* to return to the *Jump Settings* screen.

---

## Trick Settings

Select *Trick*, then touch the symbol in the upper left corner of the screen. The following will appear:






## Buzzer Volume





The buzzer volume adjustment compensates for increased engine noise. As the boat speed increases, and therefore the noises from the engine increase, the volume of the buzzer will increase proportionately to the boat's speed between 0 and 25 mph (40.2 km/h). No further increase occurs at speeds above 25 mph (40.2 km/h). The buzzer emits a sound when the set speed is reached and when reaching the buoys at a course. Select *Buzzer Volume*, and the following appears: Select the volume for High and Low speed by utilizing the up and down arrows. Touch *Back* to return to the *Slalom Settings* screen.

## River Mode and Offset

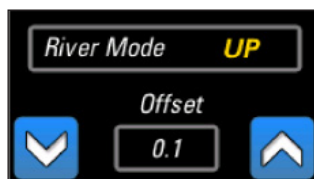

This feature provides speed adjustment compensation for the water current. Choices are *OFF*, *Down*, and *Up*. Offset is the speed of the water flow used in the correction.

## Course Manager

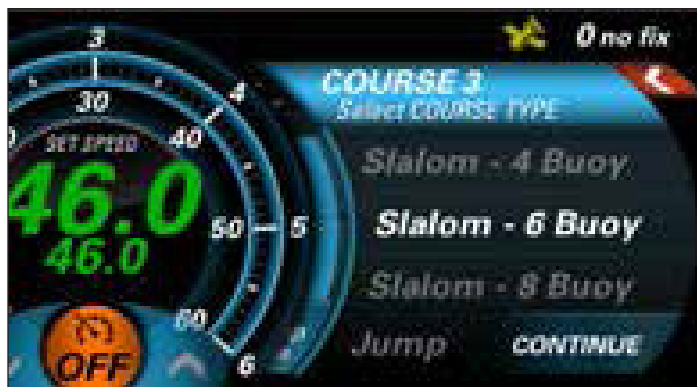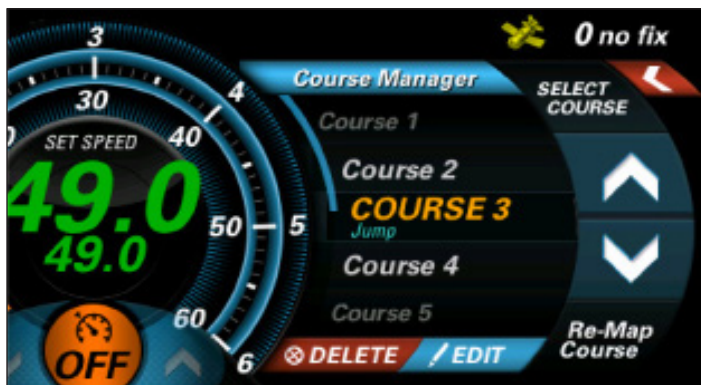

Touch *Course Manager* and the screen will expand to display the image to the left.


Utilize the Up and Down arrows on the right to scroll through the available courses. Press *Select Course* when the desired course is highlighted (as in Course 3 shown in the image).

To delete a course, highlight the specific course and touch *Delete*. To edit the name of a course, highlight that course and touch *Edit*. A keyboard will appear to rename the course.

To map or remap a course, touch *Map* (if not previously mapped) or *Remap Course* (if previously mapped). The screen above will appear.

Touch the preferred course type, and the highlighting will be bright white (as shown for Slalom - 6 Buoy in the image).

Touch *Continue*, and the screen below will appear:

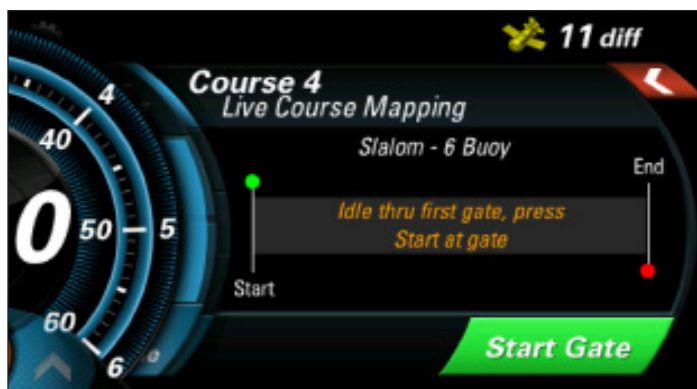

Follow the prompts as you run the course. The blue bar will show the progress through the expected course. Press the *End Gate* button when crossing the final gate.

If the mapping was unsuccessful, this screen will appear.



If the remap was successful, this screen will appear.



Touching Continue will display a keyboard for the user to name the course that was just mapped.


---

## Auto Detect

Zero Off auto detects previously mapped courses within a 1 km radius of the boat. When an auto detected course should be overridden, simply touch Auto Detect to turn it off. Auto detect will be re-enabled any time the user changes modes between slalom, jump, or trick.

---

## Pull Type

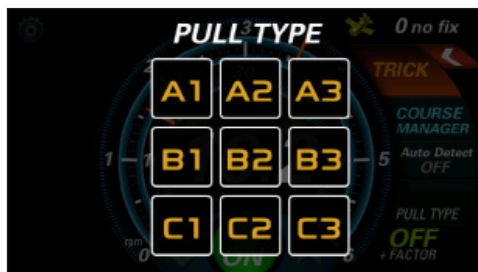

Touch the Pull Type OFF (which means it is currently not operating) to turn this feature ON, and the screen right will appear.

No two skiers are alike. Therefore, the pull types exist to customize the ride to the skier. Keep in mind the concepts of Pull and Release. As you begin your pull, the boat speed begins to drop below the set/target speed. As you let up on you pull, the boat speed begins to rise higher than the set/target speed. The letter tells the engine how quickly to begin the apply or reduce power to get back to the set speed. The lower the letter (A being the lowest) the longer it will take for the engine to respond to the speed drop. The higher the letter (C being the highest) the faster the engine will respond to the speed drop.

Choose the appropriate type based on the following criteria:

**Category A** - This provides a slower engine response out of the buoy, but the boat will tend to move ahead as the skier approaches the buoy.

**Category B** - This provides a moderate engine response

compared to A and C.

**Category C** - This provides a faster engine response out of the buoy, but the boat will tend to hold back as the skier approaches the buoy.

The numbers decide how strong the pull of the boat will be felt by the skier.

**Setting 1** - This requires the lowest amount of load before the system initiates an RPM spread and provides for a softer pull behind the oar.

**Setting 2** - This provides for a moderate pull behind the boat as compared to 1 and 3.

**Setting 3** - This requires the highest amount of load before the system initiates an RPM spread.

---

## Plus (+) Factor

For each letter setting, the + provides faster engine response. This will benefit skiers looking for immediate reaction from the engine/throttle.

NOTE: The engine will respond quicker on A+ than on C.

Touch the + Factor to turn ON and OFF.

---

## WET SOUNDS STEREO SYSTEM



The Response TXi may be equipped with a Wet Sounds stereo system operated via a 2.7" touchscreen mounted on the left side of the dash (and/or optional transom remote).

For detailed instructions on how to operate the stereo system, please refer to the owner's manual provided by Wet Sounds: <https://shop.wetsounds.com/WS-MC-2/>

*(Scroll down the webpage and select the User Manual image)*

Alternately, the stereo system owner's manual may be accessed by scanning the above QR code with a smart device.

---

## BASIC ELECTRICAL COMPONENTS

---

### Circuit Breakers

All major boat circuits are protected from shorting and overload by resettable circuit breakers. If a circuit breaker becomes tripped, you should turn the battery isolator switch to the OFF position as soon as possible, then wait about one (1) minute before resetting the breaker and turning the battery switch back ON. If the circuit continues to trip, there is a problem somewhere in the system. Take the boat to an authorized Malibu dealer to locate and safely correct the issue.

There are two (2) circuit breakers locations: the helm breaker panel next to the helm seat, and the component board under the observer seat.

If a circuit breaker continues to trip, do not hold the breaker in position to activate the electrical circuit. See an authorized Malibu dealer immediately to locate and correct the issue before operating the boat.


---

#### Circuit Breakers — Helm



---

#### Circuit Breakers — Under Observer's Seat

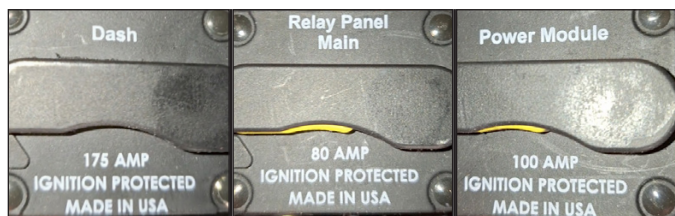


To access the component board circuit breakers, lift the observer seat and remove the component board cover (secured with thumb nuts).

The breaker labeled Relay Panel Main controls the Power Wedge III and Surf Gate. The component board may also contain additional circuit breakers for optional features such as a powered tower or automatic battery charger.

---

### Engine Fuse Box

In addition to the circuit breakers that control most of the electrical activity on the boat, Malibu engines also have a fuse box on the engine.

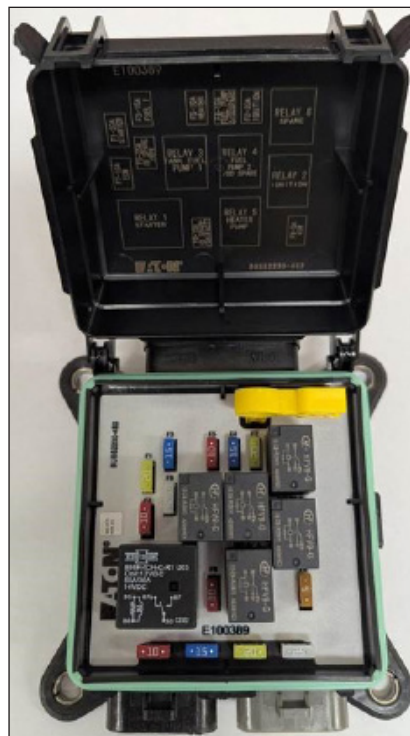

*Fuse Box*

This fuse box aids in controlling various electronic functionality within the engine. Its purpose is to prevent electrical overload to various key electronic elements. If the fuse “kicks” off, it tends to be a signal that certain vital operations have experienced an electrical surge that could have caused significant damage to the system if the fuse had not blown.

The fuse box can be opened to replace the fuse. (Unlike circuit breakers that “trip,” a fuse must be replaced.) When possible, have this function serviced by an authorized Malibu dealer, who can check the entire system to determine the source or cause of the fuse malfunction. If the fuse blows during an outing, never pry or force open the box. The top should pop off the housing with minimal effort. Inside the housing will be several fuses; the sizes are denoted on the top of the fuse. There is also a Primary and Secondary fuse box under the dash that contains fuses. Each box has a labeled/detailed picture of location, fuse size, and which circuit it protects.

If a fuse blows repeatedly, it is symptomatic of a recurring issue that must be addressed. Such repair should be undertaken by your authorized Malibu dealer.

---

### Electrical Harnesses and Wiring

Your Malibu boat is equipped with several electrical harnesses providing power within the drivetrain and to various ancillary functions of the boat. Due to the complexity of the boat’s wiring, much of which is inaccessible inside the hull and under the deck, any time an issue is suspected involving the wiring or any of the harnesses, the boat owner



is strongly encouraged to have the boat serviced by an authorized Malibu dealer.

**⚠ CAUTION**

Electrical wiring or harness issues should always be addressed by an authorized Malibu dealer. Alteration of wiring from the original Malibu design could result in shock hazard, potential spark that could lead to fire, or other danger situations. Any disruption of the wiring from its original plan and resultant damage to components or the boat is not covered under warranty. Individuals could also be injured by such error.

**Batteries**

If the boat owner opts to equip the boat with batteries of their own choosing, there are certain requirements for starting and the operation of the boat. All batteries should be rated at least 800 cold cranking amps (CCA), and, preferably, be AGM batteries; meeting these requirements is critical to avoiding a situation in which a battery(ies) is completely drained and leaves boaters stranded away from shore, or which can cause significant damage to the recharging alternator.

For model-specific battery locations, refer to the *Quick Reference Guide* chapter.

**IMPORTANT NOTE FOR ALL BATTERY SYSTEMS:** Note that the bilge pumps will continue to pull power, even when the isolator switch is in the OFF position on the boats so equipped. **This is to prevent swamping of the boat and potential sinking.** Bear in mind that for the bilge systems to work the battery will necessarily be drained, and eventually it will cause the battery to run out of charge. Therefore, under these circumstances, the boat should periodically be started, and the engine run for a sufficient time to allow the voltmeter reading to return to the desired range of at least 13.6 volts. How often and how long the engine should be run to recharge the battery will vary depending on the type, brand, and age of the batteries. The boat owner should frequently recharge the battery until determining the approximate time in which the battery retains sufficient charge to operate the bilge system, and also to start the engine.

The boat is equipped with one of three battery systems depending on model and configuration:

- Two-Position (ON/OFF)
- Three-Position (ON/OFF/COMBINE)
- Four-Position (OFF/BAT1/BAT2/COMBINE)

**Two-Position Isolator System (ON/OFF)**

The most basic battery system that allows the operator to turn a single or dual battery bank ON or OFF. The advantage to

this system is that it can allow the battery to cease operation by turning the switch off and retain residual energy within the battery until needed.

**Three-Position Isolator System with ACR (ON/OFF/COMBINE)**

This battery system allows the operator to turn both battery banks ON or OFF simultaneously or set to combine to allow the banks to connect and disconnect automatically. This function is dependent on the charging/discharging state of the batteries and the ACR (Automatic Charging Relay) does all the work. The advantage to this system is that it allows the battery banks to combine automatically when ample charging is available and disconnect automatically when there is a large amount of discharging, without relying on the operator. This will help keep both banks protected and in a charged state unlike a manual combined switch that could potentially drain both banks if left in combine.

**Four-Position Isolator System (OFF/BAT1/BAT2/COMBINE)**



This battery system allows the operator to turn both battery banks ON or OFF or to combine them. The advantage to this system is that it allows the operator to direct power draw from each bank individually or combine both banks to take advantage of a larger battery system when needed. It's important to be aware of any continuous discharging to the system when set to COMBINE and make appropriate action to switch to an isolated battery bank if voltage starts to deteriorate. If the switch is left in the COMBINE state, it's possible to drain both battery banks entirely and possibly lead to a stranded situation.

There are four markings around the battery switch knob:

OFF	1	2	1+2
-----	---	---	-----

The numbers **1**, **1+2**, and **2** refer to the two battery banks. **OFF** means that all power to both batteries is shut down. The battery will not be able to recharge while in the OFF position. This is the appropriate setting for periods of inactivity with the boat. When the boat remains in the water, the bilge pumps will still be powered by the battery in case it becomes necessary for the bilge pumps to pump out residual water in the bilge system. See above description of how the bilge system operates automatically.

**Battery 1** is the starting or engine battery.



**Battery 2** is the house battery and is used to run the electronics. The house battery should have a rating of at least 75 Amp Hours.

Routinely verify that each battery is secure within its holder.

**When starting the engine, the battery switch should be set to 1. This allows the engine to pull power from the engine battery.**

The switch should be set on 1+2 when the boat is running to charge the engine battery and the house battery. When listening to music without the engine running, set it at 2 so the engine battery is not drained. If the engine battery is sluggish or is struggling to start the engine, turning to 1+2 can be helpful in providing sufficient power to start the engine and begin the recharging process.

**All systems:** If the battery has insufficient charge, use only a battery charger to recharge the battery, or remove the battery and take it to an authorized Malibu dealer or (auto parts store with appropriate facilities) to safely recharge the battery. If the boat is out of the water and/or in storage, OFF is the setting for the battery switch.

Malibu does not recommend the purchase and use of battery chargers other than the battery charger offered as an option through an authorized Malibu dealer.

**Use marine-rated batteries only!** Never use automotive batteries as they do not have the additional protection necessary to function in a boat where water and humidity are always factors.

**Batteries used in tandem must always use the same chemistry!** Mixing battery types can cause damage to the electrical system, which is not covered under warranty.

## NOTICE

If the battery switch is in the OFF position, the automatic bilge system will continue to operate. This could result in a drain on the battery after an extended period. The only way the automatic bilge system is OFF is to disconnect the battery cables from the batteries or remove the batteries. Unless the boat has been removed from the water, Malibu does not recommend disconnecting the automatic bilge system.

## ⚠ DANGER

If the battery switch is in the OFF position, the automatic bilge system will continue to operate. This could result in a drain on the battery after an extended period. The only way the automatic bilge system is OFF is to disconnect the battery cables from the batteries or remove the batteries. Unless the boat has been removed from the water, Malibu does not recommend disconnecting the automatic bilge system.

## ⚠ WARNING

Inside the battery is an electrolyte fluid that allows the chemical reaction to provide power. The fluid is comprised of several components, one of which is sulfuric acid. As with most acids, this is caustic and corrosive. If the acid comes in contact with skin, immediately flush the area with copious amounts of fresh, clean water. Follow up with medical assistance.

## ⚠ CAUTION

Failure to use marine-rated batteries in your boat could result in electrical system interruptions that could strand your boat during an outing. Batteries are placed in molded containers to provide extra protection, but it is still possible for water and the high humidity associated with operation on the water to affect batteries. If a battery, even marine-rated, becomes wet, allow it to dry before trying to start the engine. Water can cause a short at the battery terminals, which would prevent operation. Note that batteries are never covered under Malibu warranty. Damage to other components due to the use of inappropriate batteries or failure to properly maintain batteries is also not covered under warranty.

### Connecting/Disconnecting Batteries

The posts on a battery are marked negative (-) and positive (+), one of each on top and separate by some space. The battery cables are color-coded, black for negative and red for positive.

Malibu recommends having your authorized Malibu dealer install the batteries. Consumers can perform this procedure, provided common sense safety guides the process.

If batteries have not been previously installed:

**Step 1:** Ensure the engine is OFF, and the battery switch is OFF on boats, where equipped.

**Step 2:** Place the batteries in the containers.

**Step 3:** Attach the positive cable to the secondary (2) battery, attaching the positive (+) cable to the positive (+) post.

**Step 4:** Attach the positive cable to the primary (1) battery, attaching the positive (+) cable to the positive (+) post.

**Step 5:** Attach the negative (-) cable to the secondary (2) battery, attaching the negative (-) cable to the negative (-) post.

**Step 6:** Attach the negative (-) cable to the primary (1) battery, attaching the negative (-) cable to the negative (-) post.

**Step 7:** A separate cable is attached between the two negative (-) posts on the (1) and (2) batteries for additional ground.

**Step 8:** Check that all cables are secure. Do not torque any connections; hand-tighten securely using a wrench. Never round off any of the nuts used to secure the cables. If a nut

will not tighten, do not force it. Seek assistance to determine if the nut is the wrong size or some other issue exists.

If a battery requires replacement, reverse the steps above. Never replace a battery with the boat electrical system **ON**. Even if only one battery requires replacement, follow the steps and disconnect/then reconnect cables as directed.

## **⚠ DANGER**

Never touch a positive (+) and negative (-) posts or connection simultaneously during installation! Never attempt to install or replace batteries with the boat electrical system **ON**, or in the presence of gas fumes. An electrical spark caused by connection to a functional battery can cause an explosion or fire, which is likely to cause serious injury or even death. This can also cause substantial damage to the electrical system, which is not covered under warranty.

## **Battery Maintenance**

Batteries require routine maintenance to operate properly. See the *Care and Maintenance* chapter of this manual for details.

## **Battery Charger**

The charger is a three-stage electronic device that operates automatically when properly installed. There are red and green LED lights on the charger face to indicate that charging is occurring. When the battery or batteries are fully charged, the unit will automatically shut OFF.

The charger can be plugged into an on board socket. It can be left in place without boiling electrolytes in the battery, but Malibu recommends disconnecting and storing it when not in use. If the charger ever appears to be malfunctioning, take the boat and charger to an authorized Malibu dealer for troubleshooting.

## **⚠ DANGER**

**DO NOT USE AUTOMOTIVE JUMPER CABLES TO START THE ENGINE.** Never jump-start the boat from a vehicle onshore or another boat. The presence of water and fumes create a situation in which sparks, or backfire could result in serious injury or even death.

## **Engine Sensors**

To ensure the engine runs as designed, it is equipped with several sensors that constantly monitor engine functionality.

These sensors include: oil temperature sensor, oil pressure sensor, manifold absolute pressure (MAP), camshaft position

sensor, crankshaft position sensor, coolant temperature sensor, and knock sensor.

These sensors are inaccessible to consumers because they are located inside sealed portions of the engine. Sophisticated, expensive tools are necessary to analyze the sensor activity; therefore, if any of the sensors indicates malfunction, the boat needs to be presented to the authorized Malibu dealer for diagnosis and resolution of any issues that may be present. Notice of potential malfunctions will appear on the 15" display. Additionally, alarms may sound if issues arise affecting engine operation. These alarms may be visual on the 15" display or may be audible alarms. Although it is possible for a sensor to be in error, it is unlikely. Experience has shown over the years that the sensors are highly accurate and offer protective warnings of malfunction that could potentially bring attention before more expensive and damaging events occur. Never ignore an alarm! Seek assistance from your authorized Malibu dealer if the issue cannot be resolved or recurs.

## **⚠ CAUTION**

Never ignore visual or audible alarms! Consumers may be able to address the issue raised by the alarm, but if the alarm persists, cease operating the boat and seek assistance from your authorized Malibu dealer. Failure to seek aid in analyzing the cause of an alarm could result in damage that is not covered under warranty. Some alarms could be for malfunctions that could also put individuals onboard in potential harm.

## **OTHER ELECTRICAL COMPONENTS**

### **12-Volt Receptacles**

All boats have 12-volt receptacles for your convenience. Some models have more than one receptacle. Verify locations with your authorized Malibu dealer. It is the responsibility of the device user to determine that the accessory is designed to be operated on a 12-volt system. If the connector will not easily and securely insert into the 12-volt receptacle, do not force it. If damage occurs to the device or the boat's electrical system by attempting to use a device that is not compatible, such damage will not be covered under warranty nor will Malibu accept responsibility.

### **Wireless Charging**

The boat may optionally be equipped with wireless chargers throughout the interior.

While chargers interface with many personal wireless devices, particularly mobile phones, they will not recharge every device. Check the operating instructions or owner's manual for the individual device to determine whether the device is rechargeable via this type of pad. Malibu makes no claims that the pad will operate with your device.

## ⚠ CAUTION

Remove all objects from the charging pad before charging your mobile device. Objects, such as coins, keys, rings, paper clips, etc., between the phone or device and the charging pad will become very hot. On the rare occasion that the charging system does not detect an object and the object gets wedged between the device and the charger, remove the device and allow the object to cool to prevent burns, before removing it from the charging pad. Please note that it is best practice to not put metallic objects on top of the wireless charger.

## Surf Band

A waterproof Surf Band is standard on Wakesetter models. Worn on the wrist of a wake surfer, wakeboarder, or skier, the device allows redundant control of the Surf Gate, Power Wedge, and minor cruise control adjustments. The boat operator still has primary control of the boat and can deactivate the rider controls.

The Surf Band turns ON and OFF through the Settings menu on the 15" display.

The distance from the boat that the Surf Band is operational is approximately 80 feet. The signal emitted from the wristband will weaken as distance from the boat increases, but the cessation of operation will vary, depending on conditions, location, battery strength, and other factors.

To operate the Surf Band while underway:

**Step 1:** Place the Surf Band securely on the wrist of the non-dominant hand.

**Step 2:** To adjust the Power Wedge, press the **UP ARROW** to raise the Power Wedge. It will move one "click" for each press of the button. Press the **DOWN ARROW** to lower the Power Wedge.

**Step 3:** To adjust the Surf Gate, press the **LEFT ARROW** (<) above the word "Surf" to surf left (increase the wave on the left, or port, side of the boat). Press the **RIGHT ARROW** (>) to surf right (increased the wave on the right, or starboard, side of the boat).

**Step 4:** To increase the speed of the boat, press the **UP ARROW** above the word "Speed." To reduce speed, press the **DOWN ARROW**. Each press will increase or decrease the speed one (1) mph.

## NOTICE

The Surf Band communicates over a commonly used radio frequency. The command signals may not be successfully sent or received when subjected to radiated interference from nearby high-powered transmitters operating on the same frequency. The possibility of interference is minimal, but it is unavoidable.

There is an LED that is underneath the rubber section of the Surf Band. If the signal LED stops flashing with a button press, or communication becomes intermittent, replace the battery.

**Step 1:** Rotate the battery cover counterclockwise one-eighth (1/8) of a turn with a coin or screwdriver until the cover arrow is aligned with the unlocked symbol.

**Step 2:** Remove the battery cover and the battery.

**Step 3:** Assure the white O-ring cover seal remains intact.

**Step 4:** Replace with a Panasonic CR2016 battery, text side up.

**Step 5:** Reposition the battery cover and rotate clockwise one-eighth (1/8) turn to secure.

## ⚠ CAUTION

The Surf Band will **TEMPORARILY** override the driver's control of these elements of the boat operation. However, you should be aware that the driver can always resume control of all aspects at any time. Surfers should limit the amount of time spent looking at the wristband as prolonged viewing away from the boat, wave, and surroundings could result in the surfer losing control and falling from the surfboard. Injury could result.

## Heated Steering Wheel



The boat may be equipped with a heated steering wheel designed to provide additional warmth and comfort to the hands of the operator.

The heated steering wheel may be toggled on/off via the *Heated Steering Wheel* icon on the *Controls Screen* on the 8" display—refer to the 8" *Display – Controls* section of this chapter.

# ENGINE AND POWERTRAIN

## MALIBU MONSOON ENGINE, TRANSMISSION, & V-DRIVE

The boat is equipped with a Malibu Monsoon engine, produced in partnership with General Motors. Because Malibu boats were created to further enjoyment of watersports, the power curve and maximum performance of the package were designed to enhance every aspect of the experience.

Boats equipped with Malibu Monsoon engines require proper attention to adhere to warranty policy. Note that these instructions should be followed even after the warranty period has expired. The instructions developed for the engines and powertrains in Malibu boats function as the guidelines to a long-term, positive boating experience.

**THE FOLLOWING INFORMATION IS PROVIDED FOR THE MALIBU MONSOON ENGINE. UNLESS OTHERWISE DIRECTED, THE INSTRUCTIONS ARE APPLICABLE TO ALL MALIBU-BUILT ENGINES AND POWERTRAINS.**

### ⚠ CAUTION

Failure to follow all engine operation and care and maintenance instructions as provided in this manual can result in damage to the engine and/or transmission that is not covered under warranty. Under some circumstances, this could result in the boat becoming inoperable, stranding boaters and/or placing those onboard in situations that could result in potentially dangerous situations.

### ⚠ CAUTION

Owners/operators must follow the instructions and must pay particular attention to the *Saltwater Care and Maintenance* instructions, which appear in the *Care and Maintenance* chapter of this manual. Proper use of the engine flush kit, where equipped, is essential to ensuring a long life for the Monsoon engine. Failure to follow those instructions can void the warranty, as well as adversely affect the operation of the engine and powertrain.

## Safety

Significant safety information appears in the *Safety* chapter of this manual. It is critical to read the entire manual, with

particular attention to the safety information. All boat owners and boat operators must adhere to the safety requirements as described. It is also the responsibility of these individuals to be aware of U.S. Coast Guard regulations when boating in U.S. waterways, or the governing body(ies) of any waterway system in which the boat is operated.

**Failure to read and follow this information does NOT exempt or excuse boaters from the requirements.** This information also materially impacts the boat's warranty coverage. It is the owner's and/or operator's responsibility to perform all inspections and required maintenance prior to the operation of the boat, without exception.

This chapter provides powertrain-specific safety-related material. Please review and follow these guidelines to ensure the safety of yourself, boat operators, passengers and others who may be in the area.

## Prior to Operation

Follow the instructions as described in the *Before Each Use* section in the *Care and Maintenance* chapter of this manual.

### ⚠ DANGER

To prevent a possible explosion, always operate the blower until it automatically shuts off (at least four [4] minutes), prior to starting the engine. Always operate the blower when the engine is idling or at a low running speed. Improper ventilation can lead to accumulation of gasoline or exhaust fumes in the compartment. This can lead to a fire or explosion, either of which can result in serious injury or death!

### ⚠ DANGER

Never start the engine in the presence of fumes or signs of gasoline leakage. Always avoid smoking or open flame near the engine compartment.

## Other Safety Double Checks

Throughout this chapter of the manual, additional safety-related instructions are reiterated. Always follow these instructions. Repeating checks and inspections is far superior to ever skipping any of these requirements and suggestions.



## GENERAL INFORMATION

### Engine Specifications

Engine Descriptor	M5Di	M6Di	LT4
Type/ Aspiration	4 Cycle — Naturally Aspirated	4 Cycle — Naturally Aspirated	4 Cycle — Super Charged
Engine Configuration	90-degree V8	90-degree V8	90-degree V8
Displacement (cc)	5,300CC (327 CID)	6,200CC (383 CID)	6,162CC (376 CID)
Borespacing (mm)	111.76	111.76	111.76
Bore x Stroke (mm)	96.01 x 92	103.25 x 92	103.25 x 92
Compression Ratio	11:1	11.5:1	10:1
Fuel Compatibility	Gasoline	Gasoline	Gasoline (Premium Only)
Engine Rotation (Front)	CW	CW	CW
Block/Head Material	Cast Aluminum	Cast Aluminum	Cast Aluminum
Block Structure	Deep Skirt	Deep Skirt	Deep Skirt
Main Bearing Caps	6 Bolt	6 Bolt	6 Bolt
Valvetrain Configuration	OHV-CIB	OHV-CIB	OHV-CIB
Valves per Cylinder	2V	2V	2V
Valve Lifter / Lash Adjuster	Roller Hydraulic	Roller Hydraulic	Roller Hydraulic
CAM Drive	3/8" Roller Chain	3/8" Roller Chain	3/8" Roller Chain
Firing Order	1-8-7-2-6-5-4-3	1-8-7-2-6-5-4-3	1-8-7-2-6-5-4-3

### Serial Numbers

Each engine is assigned a unique serial number that is different from the Hull Identification Number (HIN) found on the transom of the boat. The engine serial number can be found in three locations on the engine: the bank one engine lifting eye, the top of the transmission, and the front of the oil pan.



It is extremely rare that an engine requires replacement in a boat; however, if this occurs, the replacement engine's serial number must be reported to the Malibu warranty department, even if the warranty statement effective dates have expired. In the event of a safety matter or recall, serial numbers often alert the factory to which boats may be affected and allow the company to contact consumers.

Engine serial numbers that do not match factory records may lead to questions of legality also.

### Engine Coolant



All Malibu Monsoon engines feature a hybrid of raw water cooling and closed cooling. **The closed cooling must have a 50/50 mix of marine-grade, propylene glycol coolant (such as Peak Sierra brand) and clean, distilled water. DO NOT USE ANY ETHYLENE-BASED PRODUCTS.**

#### Coolant/Water Mix Amount

- If the boat is equipped with a heater, the proper amount of coolant/water mix to add from an empty tank is approximately 4 gallons.
- If the boat is NOT equipped with a heater, the proper amount of coolant/water mix to add from an empty tank is approximately 2.5 gallons.

#### Care and Maintenance

Directions for maintaining proper levels are provided in the *Care and Maintenance* chapter of this manual. Maintaining proper levels is required to keep the warranty in effect and should be done for the lifetime of the boat/engine.

Also, carefully follow the raw water cleaning information provided in the *Care and Maintenance* chapter of this manual, especially when operating in saltwater or brackish water conditions. Failure to do so will void the warranty. Also see the *Saltwater Care And Maintenance* information provided in the *Care and Maintenance* chapter of this manual.

---

## Engine Oil



In M-Series (M5/M6) engines, use only 5W30 full synthetic dexos™ Gen2 Engine Oil. Malibu strongly encourages the use of Malibu-branded oil (available only from your authorized Malibu dealer). In LT4 engines, use ONLY 0W40 full synthetic dexos™ Gen2 Engine Oil. If Malibu-branded oil is not available, use ONLY Mobil 1, per General Motors. Use of other oil may void the warranty.

The engine requires approximately nine (9) quarts to fill from empty. (Never over-fill the engine oil, nor run the engine without sufficient oil as indicated on the oil dipstick.) The use of any other oil or fluid may void the warranty. Instructions for proper levels, maintenance and oil changes are provided in the *Care and Maintenance* chapter of this manual.

### ⚠ CAUTION

Be sure to check engine oil level before each use.

---

## Transmission Fluid

The boat arrives from the factory with DEX/MERC ATF in M-Series (M5/M6) and LT4 engines. **Only use this transmission fluid—use of any other transmission fluid may void the warranty.**

Approximately 2.5 quarts will be required to fill from empty. Again, the use of any other fluid may void the warranty. Instructions for proper levels, maintenance and oil changes are provided in the *Care and Maintenance* chapter of this manual.

---

## V-Drive Oil



Use Mobil SHC 630 Gear and Bearing Oil ONLY in the

**V-drive unit.** The unit requires 1.25 quarts of the oil to fill from empty. The use of any other fluid may void the warranty. Instructions for proper levels, maintenance and oil changes are provided in the *Care and Maintenance* chapter of this manual.

---

## Hydraulic Steering Fluid

The boat may be equipped with an optional hydraulic steering system that can be maintained or repaired **ONLY** by an authorized Malibu dealer. Because of the potential for physical harm, never attempt to check, modify, or repair, the hydraulic steering system.

---

## Fuel Filter



The engine is equipped with a Smart Fuel Filter that separates water from the boat's fuel and alerts the operator—via the dash—when an unacceptable level of water is detected in the fuel system. Do not ignore such alerts from the Smart Fuel Filter, as continued operation of the boat with water in the fuel system can lead to engine damage and/or failure.

As with the steering system, only authorized Malibu dealers have the specialized tools needed to work on any portion of the fuel system. Again, this is a safety matter. Never attempt to work on the fuel system.

### ⚠ DANGER

Boat owners or any person who is not an authorized Malibu dealer technician should never attempt to work on the steering or fuel systems within the boat. These systems require specialized tools not available to the public. Any alteration to or attempt to alter these systems will void the warranty. It is also highly likely that serious injury or death could occur to unauthorized persons attempting to access these systems.

---

## Maintenance Schedule

The maintenance schedule for the Monsoon Engine is provided in the *Care and Maintenance* chapter of this manual. **Do not attempt to operate the boat until after you have read this entire Owner's Manual.**

## CALIFORNIA EMISSIONS INFORMATION

Malibu Boats, LLC., has long worked with the state of California to ensure that emissions from our products remain in compliance with California's legal requirements. This means attention to aspects of the warranty statement and process, with particular attention to providing this information in clear, written style.

If you have any questions regarding this matter, please feel free to contact your authorized Malibu dealer.

### CALIFORNIA EVAPORATIVE EMISSIONS CONTROL SYSTEM WARRANTY STATEMENT<sup>1</sup> YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board and Malibu Boats are pleased to explain the evaporative emission control system's warranty on your 2024<sup>2</sup> spark-ignition marine watercraft. In California, new spark-ignition marine watercraft (SIMW) must be designed, built, and equipped to meet the State's stringent anti-smog standards. Malibu Boats must warrant the evaporative emission control system on your spark-ignition marine watercraft for the period listed below, provided there has been no abuse, neglect or improper maintenance of your SIMW.

Your evaporative emissions control system may include parts such as: canisters, carburetors, clamps, connectors, filters, fuel caps, fuel lines, fuel tanks, valves, vapor hoses, and other associated evaporative emissions control system components.

## MANUFACTURER'S WARRANTY COVERAGE

This evaporative emission control system is warranted for five years<sup>3</sup>. If any evaporative emission-related part on your SIMW is defective, the part will be repaired or replaced by Malibu.

## OWNER'S WARRANTY RESPONSIBILITIES

As the spark-ignition marine watercraft owner, you are responsible for performance of the required maintenance listed in this manual. Malibu recommends that you retain all receipts covering maintenance on your spark-ignition marine watercraft, but Malibu cannot deny warranty solely for the lack of receipts.

As the spark-ignition marine watercraft owner, you should, however, be aware that Malibu may deny you warranty coverage if your spark-ignition marine watercraft or a part

has failed due to abuse, neglect, or improper maintenance or unapproved modifications.

You are responsible for presenting your spark-ignition marine watercraft to a Malibu distribution center or service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed thirty (30) days. If you have a question regarding your warranty coverage, you should contact Malibu Boats' warranty department at 1-865-458-5478.

\*Note:

(1) As they relate to the evaporative emissions control system. This statement applies only to California.

(2) Emission warranty model year (2024) will be updated each model year and no other changes will be made.

(3) Malibu voluntarily extended the warranty period from two years as required by the California Air Resources Board to five years.

The California evaporative emissions control system warranty covers the following list of components:

- Belts
- Carbon canister
- Catalytic converters
- Clamps\*
- Coolant temperature sensor
- Control linkages\*
- Control valves\*
- Electronic controls\*
- Electronic control module
- Exhaust manifolds
- Exhaust risers
- Exhaust valves
- Flame arrestor
- Fuel cap
- Fuel injectors
- Fuel pressure regulator
- Fuel line
- Fuel line fittings
- Fuel tank
- Idle Air Control (IAC) valve
- Idlers
- Ignition coil and/or control module
- Ignition wires
- Intake manifold
- Intake valves

- Liquid/vapor separator
- Manifold Absolute Pressure (MAP) sensor
- Oil filler cap
- Oil pump and internal parts
- Oxygen sensors
- Pulleys
- Purge valves
- Spark plugs
- Throttle body-port fuel injection models
- Throttle body assembly-throttle body fuel injection models
- Throttle position sensor
- Vacuum control diaphragms\*
- Vapor hoses
- All other parts not listed that may affect the evaporative emissions control system, including hoses fittings, etc.

## General Emissions Information

After January 1, 2009, boats sold or registered in California have a Star label on the port side of the hull adjacent to the vessel registration, as shown.

Exhaust emissions should be routinely monitored and verified throughout the life of the boat. The boat owner has responsibility to ensure that the engine is never modified in any fashion that alters the emissions occurring during operation. The engines have been constructed to meet specifications as established by governing bodies with authority in this matter. Routine maintenance performed by authorized Malibu dealers should satisfy these requirements, but having maintenance completed by an authorized Malibu dealer does not absolve the boat owner from responsibility that emissions requirements are satisfied in the area in which the boat is owned and/or operated.

Each engine has an Emissions Control Information (ECI) label affixed. A sample label is illustrated in this section. Information appearing on the label must never be altered. If the original, factory-affixed label is damaged or comes off the engine block, contact an authorized Malibu dealer immediately for a replacement. Malibu does not endorse the replacement of these labels by any unauthorized person.

Engine emissions labels with the designation “CE” in the lower right-hand corner have been constructed within the parameters of the Declaration of Conformity requirements. This means that the engine conforms to the appropriate European Community Directive.

## Star Label

A Star label is also affixed to the heat exchanger of each certified engine. All Malibu engines, at minimum, have a Four Star—Super Ultra Low Emission rating. This means that the engine has ninety percent (90%) lower emissions than a One Star—Low Emission engine. It further means that the engine meets the California Air Resources Board’s stern drive/inboard marine engine Tier 3 exhaust engine standard.

Engines will also have an explanatory “Star” label attached, as shown. The applicable Star level will be marked, and an explanation of the label designation appears on the reverse side.

The explanations are:

### One Star — Low Emission



*The one-star label identifies engines that meet the Air Resources Board’s Personal Watercraft and Outboard marine engine 2001 exhaust emission standards. Engines meeting these standards have 75% lower emissions than conventional carbureted two-stroke engines. These engines are equivalent to the U.S. EPA’s 2008 standards for marine engines.*

### Two Star — Very Low Emission



*The two-star label identifies engines that meet the Air Resources Board’s Personal Watercraft and Outboard marine engine 2004 exhaust emission standards. Engines meeting these standards have 20% lower emissions than One Star—Low Emissions engines.*

### Three Star — Ultra Low Emission



*Three Star — Ultra Low Emission. The three-star label identifies engines that meet the Air Resources Board’s Personal Watercraft and Outboard marine engine 2006 exhaust emission standards or the Sterndrive and Inboard marine engine 2003-2008 exhaust emission standards. Engines meeting these standards have 65% lower emissions than One Star—Low Emission engines.*



---

#### **Four Star — Super Ultra Low Emission**



*The four-star label identifies engines that meet the Air Resources Board's Sterndrive and Inboard marine engine 2009 exhaust emission standards. Personal Watercraft and Outboard marine engines may also comply with these standards. Engines meeting these standards have 90% lower emissions than One Star—Low Emission engines.*

---

#### **Five Star — Extremely Clean**



*The five-star label identifies engines that meet the Air Resources Board's Voluntary Standards for spark-ignition marine engines. Engines meeting these standards have 50% lower emissions than Four Star—Super Ultra Low Emission engines.*

---

### **Additional Information, Including Warranty**

Malibu engines are prepared for the consumer in accordance with the applicable regulations as established by the California Air Resources Board as authorized by Chapters 1 and 2, Part 5, Division 26 of the California Health and Safety Code, and the United States Environmental Protection Agency, as described by 40 CFR 1045.

Defects resulting from any source other than that described in the *Malibu Limited Warranty Statement* are not covered. Parts required for routine maintenance during the warranty period are also not covered. Examples would be, but are not limited to, spark plugs or filters or fluids. However, such components may be covered if failure occurred during the first 10-hour break-in period. The warranty will not be extended beyond its original expiration date for any reason, and the use of unapproved replacement parts may void any remaining warranty, per the *Malibu Limited Warranty Statement*.

Replacement parts do not extend the warranty beyond its original period. Parts replaced under the limited warranty become the property of Malibu Monsoon Engines.

Warranty coverage may be denied in instances where the emissions component(s) had been altered or damaged by neglect, or there is evidence of failure to perform maintenance as required by information provided within this manual. If other, non-emission parts have been damaged as a result of failure to properly maintain or repair an emissions-related component, the non-emission component(s) may also not


be covered under the *Malibu Limited Warranty Statement*. See the *Care and Maintenance* chapter of this manual for information regarding appropriate maintenance.

---

## **MONSOON ENGINE SUPPORT SYSTEMS**

---

### **Malibu Fuel System**

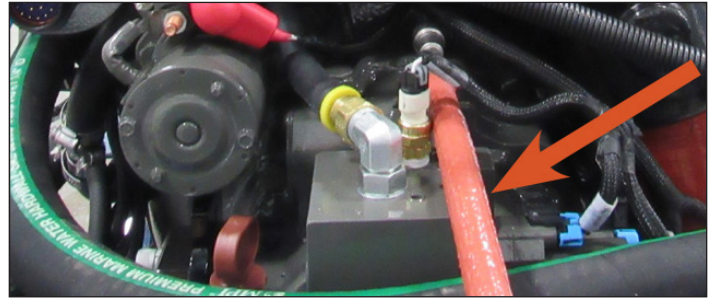

The boat is equipped with a pump-in-tank (PIT) fuel system, which means the fuel pump is located inside the fuel tank rather than at the engine. There are many benefits to the PIT system, most significantly in the prevention of vapor lock and improved filtration of contaminants. An additional camshaft-driven fuel pump is also located internally in the engine.

The entire fuel system is highly pressurized, which means that the pump and the PIT fuel filter may only be accessed via fuel lines under a significant pounds-per-square-inch (PSI) pressure. As such, the fuel system should only be accessed by an authorized Malibu dealer. The fuel lines may be identified by their orange "fire-sleeve" protective covering. Always avoid touching these lines, unless it is noted that one is squeezed or pinched. If it is possible to alleviate this situation safely, then do so. The preferable method, however, is to have an authorized Malibu dealer's trained service technician do so and verify that no damage has been done to the line or other equipment.

The fuel system, from tank to plumbing to engine, meets or exceeds U.S. Coast Guard requirements (Sec. 183.540 Recreational Boating). Because of the potential for a dangerous or even catastrophic event if any part of the system fails, Malibu strongly encourages all owners/operators to always be aware of proper operation. Follow operational directives, maintenance requirements, and remain alert for visual signs or odors that indicate the presence of fuel outside the contained fuel system. Never replace any part of the fuel system except with approved parts, and Malibu recommends always using your authorized Malibu dealer for checks, service and repair of the fuel system.

Normally, if there is any issue arising from damage or leakage in the fuel system a strong odor of gasoline will be present and signifies that the engine should not be started due to the danger of explosion from fumes. Even in the absence of a gasoline odor, owners and operators should always visually check the fuel system prior to operation, as directed in the *Care and Maintenance* chapter of this manual.

## **⚠ DANGER**

The fuel system—including the fuel lines, pump-in-tank (PIT) filter and pump—should never be serviced by any person other than an authorized Malibu dealer's trained service technician. Special tools and training are required to safely service the fuel system.

## **⚠ DANGER**

The flammability of gasoline and its explosive properties must always be respected. At the first odor of gasoline, the engine should be shut off and remain off until the source of the odor has been identified, and the issue has been rectified. Never start the engine if the odor of gasoline is present or if gasoline is seen anywhere in the boat other than the fuel system!

## **⚠ DANGER**

Never smoke or operate any spark-producing object within a fifty-foot (50') range of the boat when fueling. Fumes from gasoline are more likely to produce an explosion and/or fire than the actual fuel. Be sure that the fueling area is well-ventilated.

## **⚠ DANGER**

If fuel is spilled, always clean up with dry rags and dispose of properly on-shore.

## **⚠ DANGER**

Replacement parts in any portion of the fuel system must be with Malibu-authorized parts only! Use of unapproved parts could result in a failure that creates a potentially explosive situation or the potential for onboard fire

## **⚠ WARNING**

Avoid inhaling or ingesting gasoline and/or fumes. If gasoline gets on skin, immediately flush with copious amounts of fresh water on-shore; if gasoline gets on clothing, immediately change clothing and do not store gasoline-infused cloth on board the boat.

Return to shore and refuel whenever the fuel gauge indicates that the fuel load has fallen below one-quarter (1/4) of a tank full. **Continuous operation with ballast significantly loaded either port or starboard (rather than evenly distributed) can result in damage to the fuel pump as it attempts to compensate.** Even with the best of care, some water may get into the fuel tank or separate from the fuel that is pumped into it. If there is water present, it will settle on the bottom of the tank. If the pump begins to reach any water, it may cause malfunctioning in the engine.

## **⚠ CAUTION**

Do not over-fill the fuel tank. Doing so can cause spillage, which is an environmental hazard. Fuel tanks also expand and contract slightly to adjust to ambient air temperature. Over-filling can reduce the ability of the tank to respond, which can cause damage to the fuel system and/or boat, which is not covered under warranty.

## **NOTICE**

Review the *Care and Maintenance* chapter of this manual for important information regarding the proper fuel to use, how to maintain the fuel if the boat will not be used for a period of time, and other important information regarding the safe use of gasoline in the boat. Always include a pre- and post-outing inspection of the fuel system.

## **NOTICE**

Use of incorrect fuel can result in damage to the engine that is not covered under warranty. Failure to follow maintenance requirements may also void the warranties.

## **Fuel Information**

The minimum octane requirement for a M-Series (M5/M6) engine is 87 (R+M)/2 or 92 Euro RON. Minimum octane requirement for the LT4 is 91 (R+M)/2 or 95 Euro RON. **When possible, use 93 octane if available as this will ensure the best performance possible from the engine. (Boaters outside the U.S. and Canada should confer with their authorized Malibu dealer to determine the correct fuel grading, as it is often graded differently from how it is designated in the U.S. and Canada, which is described herein.)**

**Lower-quality fuel may cause deposits on the fuel injectors and intake valves, among engine components. Continued over a period of time, lower-quality fuel could damage the engine; such damage is not covered under warranty.**

One of the first signs of improper fueling is a knocking noise resulting from spark plug misfire. Knock misfire will damage

the engine over time. Because the engine is equipped with a knock sensor, operators may be alerted when the sensor triggers a warning through the dash. **Do not ignore such warning!**

The engine is engineered to run smoothly. If there are any symptoms of misfire, hesitation, poor idling or if the engine becomes hard to start, such indications should not be ignored. If the gasoline has been in the boat's tank for an extended period (in excess of two weeks), particularly without a stabilizer, the issue sometimes may be addressed by properly replacing the fuel with new gasoline.

## ⚠ DANGER

Always dispose of unused fuel properly on-shore. Check with local authorities to determine the proper manner in which fuel can be off-loaded from a boat. **NEVER** dump fuel into the water. It is illegal to do so as well as environmentally damaging. Allowing fumes to be vented can also cause a situation in which a spark or open flame could cause a fire, which is extremely dangerous and could result in serious injury or death.

**Never add diesel fuel to the fuel tank!** Diesel fuel and regular gasoline do not mix. Diesel fuel will cause permanent damage to the engine, and such damage is not covered under warranty. If diesel fuel is accidentally pumped into the fuel system, all contents of the fuel tank must be properly disposed of on-shore, and the engine should not be started until the system is thoroughly cleared and the correct fuel pumped into the fuel tank.

## When Fueling

**When pumping fuel, do not leave the nozzle unattended in the fuel fill.** Although the fuel system has been manufactured to avoid spit-back of fuel, and most gasoline dispensers will shut off if removed from fuel fill, it is always a wise consideration to provide full attention to the process.



Malibu strongly recommends using 93 octane TOP TIER detergent gasoline. The additives and detergents in these

fuels can reduce the amount of build-up in engines that adversely affects performance and shortens the life of an engine. Retailers selling TOP TIER gasoline can be found at [www.toptier.com](http://www.toptier.com).

**Never use E-85 or other E- fuels.** This type of fuel does not contain sufficient additives to protect the engine nor perform to expected standards.

**Never use leaded fuel.** Monsoon engines are designed and constructed to run properly **ONLY** on unleaded gasoline. If finding unleaded gasoline is an issue for a boat owner, check with your authorized Malibu dealer to locate unleaded gasoline.

**Never use gasoline containing higher than ten percent (10%) ethanol.** Use of gasoline containing 15 percent (15%) ethanol is prohibited in recreational boats and will void the warranty. Some fuel contains MBTE (methyl butyl tertiary ether) as a blend to enhance octane. Blended fuel is permissible as long as it is blended and does not exceed the percentage allowed.

**Never use gasoline that contains any methanol.** This type of fuel can cause corrosion to some of the engine parts, and such damage would not be covered under warranty.

## ⚠ CAUTION

Always verify that the fuel filler access is closed when the engine is running. Failure to do so may allow water to enter into the fuel system. Such intrusion could result in damage to the engine and is not covered under warranty.

**When fueling the boat outside the United States or Canada, verify the chemical components of the available gasoline.** You must use only approved fuel. Work with an authorized Malibu dealer to locate appropriate gasoline for use.

## When the Boat Is Not in Operation (Fuel)

When maintained as directed in the *Care and Maintenance* chapter of this manual, boats can reasonably be expected to be ready for operation when they are not used for a period of two (2) weeks or less. Longer than two (2) weeks requires particular attention to fueling, among other operations. If the engine does not start and run smoothly, it is likely that there are issues involving gasoline.

When allowed to sit for extended periods of time, fuel components can begin to separate or deteriorate. Any water that has intruded into the fueling system will separate, and because it is heavier than gasoline, will settle to the bottom of the tank. The fuel system, which includes a spring-loaded gas cap, should not allow significant amounts of water into the system, but operators should always verify that the fuel filler cap is closed anytime the boat engine is on.



Any time the boat is not going to be used for a period in excess of two (2) weeks, Malibu recommends adding STA-BIL® fuel stabilizer to the fuel tank. Although there are other anti-degrading stabilizers on the market, Malibu has found that STA-BIL®, when used properly, protects engines and fueling systems from the harmful effects of storage in most instances. Note, however, that even stabilized fuel can cause an engine to idle poorly and run less effectively until the older fuel has been used up. This kind of damage is not covered under warranty.



Even with the use of STA-BIL®, long-term storage with fuel in the tank and fueling system can result in degradation of the fuel. This can cause the engine to perform poorly until the fuel is used, but in some instances can cause permanent damage to the fuel system and/or engine. Such damage is not covered under warranty.

If the boat will be stored for a significant period of time, such as an entire off-season, Malibu recommends filling the fuel tank full and adding STA-BIL®. Because STA-BIL® will eventually degrade, boat owners should follow the instructions provided by STA-BIL® regarding storage period, temperatures, amount of mix, and any other information provided by the manufacturer of STA-BIL®.

**NO ADDITIVE OTHER THAN STA-BIL® IS APPROVED; USE OF ANY OTHER ADDITIVE MAY VOID THE WARRANTY.**

---

## Electrical System

**IMPORTANT:** Review the *Electrical Components* information in the *Dash and Displays* chapter of this manual prior to operating the boat. Recommendations and requirements explained in that section can prevent unexpected issues from arising that will cause abbreviated outings or premature degrading of components

---

## Alarms

The boat is equipped with an alarm system designed to alert the operator whenever onboard sensors detect abnormal conditions such as when the oil pressure, engine and/or transmission temperatures are outside acceptable parameters. In general, an alarm sound is an indication that a potentially serious issue exists.

*Note:* Audible alarms are functional through the instrument

panel, *EXCEPT* the Surf Gate transfer alarm, which sounds through the stereo system. Therefore, if the stereo is turned OFF persons onboard will not be able to hear an alarm.

Alarm information, including the Surf Gate transfer alarm information, may be viewed via the main display.

All alarms should be taken seriously, and boaters should return to shore as soon as possible. Seek assistance from an authorized Malibu dealer to determine the cause and solution to any problems that have been indicated.

---

## Cooling System

The engine features a hybrid cooling system, i.e., a combination of raw water cooling and closed cooling.

For the closed cooling system, Malibu recommends Peak Sierra Brand, 5-year, 100,000-mile, Marine Grade Coolant (propylene glycol) in a 50/50 mix with distilled water.

---

### Coolant/Water Mix Amount

- If the boat is equipped with a heater, the proper amount of coolant/water mix to add from an empty tank is approximately 4 gallons.
- If the boat is NOT equipped with a heater, the proper amount of coolant/water mix to add from an empty tank is approximately 2.5 gallons.

**Directions for maintaining proper levels are provided in the *Care and Maintenance* chapter of this manual.**

Without the need for a radiator such as used by land-based engines, the functionality of the cooling system is dependent upon both (1) operation within a body of water and (2) maintaining the appropriate level of coolant/water in the system. Reducing operational heat from the engine is critical to ensuring the engine continues to perform. Temperatures in excess of 200°F (93°C) are considered to be overheating situations.

## ⚠ CAUTION

NEVER run the engine with the boat out of a body of water! Even in closed cooling systems, some external water is used in the cooling process. Without water to circulate in the system, the engine will quickly overheat and can cause permanent damage that is not covered under warranty!



## ⚠ CAUTION

Be certain to read the *Care and Maintenance* chapter of this manual for important information regarding routine and regular functions that must be performed. Some of these tasks overlap engine and boat component maintenance and should never be skipped. Failure to perform care and maintenance as directed can result in damage to the boat and engine that is not covered under warranty.

## ⚠ CAUTION

Regularly review the engine temperature information provided via the main display. Warning lights and alarms also provide early warning when engine temperatures begin to exceed acceptable levels. Continuing to operate a boat that is overheating the engine and powertrain will result in engine failure eventually. Ignoring or failing to take proper steps to reduce the engine temperature, resulting in damage, is not covered under the warranty.

If an engine overheats, consider several factors before shutting down. **(Turning off the engine when it is overheated may not provide immediate relief, and, in some instances, can actually cause additional harm.)**

If the boat has been idling for a prolonged period of time and the engine became overheated, attempt to reduce the temperature by operating the boat at a higher speed, preferably at normal running speed. This will increase the speed of water flowing through the cooling system, assuming there is sufficient fluid.

If the boat has been running at a higher rate of speed for a prolonged period of time and overheats, reduce speed for a few minutes to see if the temperature reduces. Running at wide-open-throttle (WOT) for too long can challenge the cooling system.

If there is no immediately discernible cause for overheating, or if the temperature does not begin to descend back to the normal range, turn off the engine and carefully open the engine compartment **(but never if there is an odor of fuel)**. Ambient air should eventually cool the engine, but if there is resulting damage to the engine from overheating, it may not restart, and the boat may need to be towed to shore.

## ⚠ WARNING

Never directly touch an overheated engine. Temperatures can exceed 200°F (93°C), which would cause instant and serious burns, even through gloves or clothing.

The water pumps on the engine that circulate water and coolant throughout the engine during operation are

essentially inaccessible to. The circulation pump, which circulates coolant, is located on the bottom of the front-end accessory drive. If any of these pumps require attention, that should be done by a service technician at an authorized Malibu dealership.

Another pump, the raw water intake pump, brings in water from the body of water. The raw water pump is located on the top of the front-end accessory drive, adjacent to the alternator. Its purpose is to draw and circulate water from the body of water in which the boat is operating to increase the cooling effect for the engine. Water is brought through the raw water pickup, which is located at the transom, next to the steering tiller arm. The entire cooling system is located on the front of the engine on the transom side.

As part of the routine annual maintenance, the raw water pump should be inspected, with particular attention to the impeller. The process for inspection is explained in the *Care and Maintenance* chapter of this manual. **If the boat is operated in shallow or brackish water, or if the boat is run aground, the impeller should be checked regularly. Silt, sand, dirt and weeds can accelerate the deterioration of the impeller.**

**The boat is equipped with an engine flush kit. The process for properly using the engine flush kit is explained in the *Care and Maintenance* chapter of this manual.**

## NOTICE

Ensure that the engine flush cap is tight before every outing, or it will suck air and could damage the cooling system. Such damage is not covered under warranty.

Most often, the cause of overheating is either marine growth clogging the raw water intake or insufficient coolant/water. If there is debris, even in small amounts, in the body of water, during usage it is likely that some of the marine growth can accumulate in the cooling system.

A sea strainer is installed near the raw water intake and is designed to prevent debris from entering the cooling system, which can cause eventual engine failure. The sea strainer may be removed via the access plate. Be sure to regularly clean the sea strainer so that water can flow unimpeded—refer to the *Maintenance Schedule* at the end of the *Care and Maintenance* chapter for recommended service intervals.

To access the sea strainer, remove the tub located under the starboard transom cushion, revealing the ballast storage compartment. Locate the sea strainer access plate on the rear engine closeout. A removal tool is mounted nearby to help remove the strainer.



Sea Strainer, M5/M6.

Sea Strainer, LT4.



Sea Strainer Access Plate and Removal Tool.

Removal Tool.

## ⚠ CAUTION

Except for the sea strainer and raw water impeller, do not attempt to inspect or repair components of the cooling system. Most are inaccessible; all can be inadvertently damaged if not properly accessed. Attempting unauthorized inspection or repair may void the warranty.

## Coolant Requirements

In the closed cooling system, verify that there is sufficient coolant/water in the system. (Coolant and water may be required to be mixed, depending on the brand of coolant, most likely in a 50/50 mix).

Because the closed cooling system retains and recirculates coolant, an additional step prior to every outing is necessary: before starting the engine, while it is still cool to the touch and does not burn skin, **check the coolant reservoir level**. The instructions for this critical step are explained in the *Care and Maintenance* chapter of this manual.

## NOTICE

NEVER use ethylene glycol or Dex-Cool antifreeze coolant. These types of coolants are not formulated for the requirements of the Monsoon engine. NEVER mix the approved propylene glycol coolant with any other type of coolant, including ethylene glycol or Dex-Cool, even in small amounts. In fact, these different formulations do NOT mix and will not provide the required cooling protection for the Monsoon engine. Mixing coolants has the potential to damage the cooling system.

Malibu recommends using Peak Sierra Brand, 5-Year, 100,000-mile Marine Grade Coolant in a 50/50 mix with distilled water to keep the warranty in effect.

While some coolant evaporation occurs naturally, it should not occur at an accelerated rate. If a closed cooling tank has significantly lost coolant, especially if it is nearly empty, a potentially serious issue exists. Present the boat to an authorized Malibu dealer for analysis and correction, prior to starting the engine.

## NOTICE

Coolant should be flushed from the system and fully replaced every two (2) years, and the cooling system should routinely and carefully be checked for any leaks.

## Exhaust System

## ⚠ DANGER

Always operate the blower for several minutes (at least four [4] minutes) prior to starting the engine, running at a low speed or at idle. (The boat is equipped with an automatic shut-off when the automatic blower system has operated prior to starting the engine.) This must be done with the engine compartment open. Failure to perform this necessary function could result in an explosion of the accumulated fumes within the compartment, resulting in serious injury or death.

Always operate the blower for the required four (4) minutes prior to starting the engine, ensuring the engine compartment is open. This should also be done when idling or running at low speed. This allows the disbursement of fumes that otherwise allowed to accumulate could result in an explosion.

The blower is controlled from the command center. (See *Dash and Displays* chapter of this manual for more detail on how to operate the system.) **The blower should come ON automatically when the system is first powered up. However, operators should always verify that the blower is ON and operating rather than relying on the automatic ON.**

Although the fuel system works very efficiently, there will always be some gaseous by-product as a result of operating an internal combustion engine. These gases, along with the water used to cool the engine (in addition to the closed cooling system) are routed out of the boat by way of the exhaust manifolds on each side of the engine, and expelled out of the system at the transom.

## ⚠ DANGER

Never allow anyone to be on the swim platform, transom seating or sun pads when the engine is running. Carbon monoxide fumes are colorless and odorless. Illness and death can result from breathing fumes, even before a person is aware of breathing them. See the *Safety* chapter of this manual for more information regarding this critical matter.


Although much of the exhaust is dispersed into and through the water, fumes still reach the swim platform and transom area of the boat, including the sun pads. Therefore, no one should ever be on the swim platform, transom seating or sun pads when the engine is operating.

Always allow the exhaust manifolds to cool before touching them. (The manifolds are on the upper side of the engine on both sides.) Engine operation will result in the manifolds becoming very hot, and touching could result in burns to the skin.

## NOTICE

Engines equipped with catalyst exhaust manifolds may produce an unusual odor. This is typical of engines with a catalytic converter exhaust system. If you are uncertain about any odor, do not hesitate to contact an authorized Malibu dealer for assistance in determining the cause and potential for concern.

The boat is also equipped with a natural air-intake that forces air through a ventilation system on the deck of the boat. This channels air from the bilge to the transom vent.

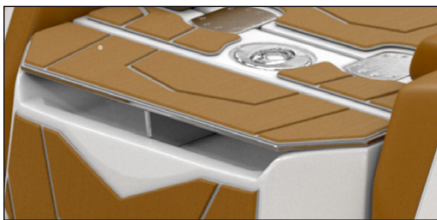

With proper maintenance, which is the responsibility of the boat owner and/or operator, the ventilation system works efficiently and protects the people onboard from dangerous fumes. Follow the maintenance requirements as indicated in the *Care and Maintenance* chapter of this manual.

**DO NOT** allow the ventilation intake to be covered up by towels, swim paraphernalia or any other item that potentially restricts the inflow of air for the proper ventilation of the blower system. Such restrictions can result in the accumulation of toxic fumes, which can lead to an explosion under certain circumstances. All types of restricted ventilation are dangerous and can lead to serious injury or death!

## ⚠ WARNING

The State of California has determined that the engine exhaust contains chemicals that have been known by the State to cause birth defects, cancer or other reproductive harm.

**Never operate the boat if you or anyone on board suspects that the exhaust or fuel system is not performing as designed.**

## BREAK-IN PERIOD

Breaking in marine engines is a different process from land-based vehicles. The first ten (10) hours of operation for the Monsoon engine is critical for long life and enjoyable operation. When done properly, the break-in period will ensure peak performance.

The first hours of the boat operation have critical requirements for engine break-in. Pay close attention to the displays and monitor the readings. Pay particular attention to the oil pressure and engine temperature information as these are the earliest warnings when something is going wrong with the powertrain. Alarms will sound if serious problems are encountered.

Also, check carefully for leaks. The break-in period is the most likely time for leaks to appear, whether fuel, oil, water or exhaust. Verify that fluid levels are at the required levels. Listen for abnormal noises and pay attention to vibrations.

Any part of the operation that seems to be different from expectations should be checked with an authorized Malibu dealer, especially during this break-in period.

## Break-In Procedure

All Malibu boats undergo a general pre-test run at the factory before shipping. The customer-based break-in period takes place for the next ten (10) hours of operation. (The display includes an hourmeter function that allows the operator to keep track of the number of hours the boat has been in operation. See the *Dash and Displays* chapter in this manual for details.)

## NOTICE

Failure to have the initial 10-hour oil change performed by an authorized Malibu dealer may result in the voiding of the engine portion of the warranty if it is determined that engine issues could have been analyzed and/or prevented through the dealer's inspection at that 10-hour engine oil-change time.



The break-in procedures, which should be followed for the first ten (10) hours of operation as measured by the integrated hourmeter, allow the engine and transmission components to properly seat and function in the usage thereafter. These procedures are as follow:

- Always allow the engine to warm up after it is started. The length of time varies depending upon conditions, but it is especially critical when operating in colder weather. Oil viscosity thickens at these times. Failure to allow it to warm up can cause severe damage to the engine, which is not covered under warranty. **This is time in addition to the four (4) minutes venting the engine compartment.** Engine temperature is available on the 15" display. Always verify that the engine feedback information on the 15" display is within acceptable limits and no alarms show or sound before leaving the dock. Often, symptoms of potentially stranding issues will be noticeable at the beginning of the outing.
- Vary engine speed, but **DO NOT EXCEED 3500 RPM** with light load for the first hour.
- After the first hour higher RPMs are allowable **up to, but not exceeding, 5000 RPM, but operators must avoid operating at one continuous speed (RPM).** Varying the speed is important! **NEVER RUN AT WIDE OPEN THROTTLE (WOT) DURING THE BREAK-IN-PERIOD!**
- Never operate at idle speed for extended periods during the break-in period. Occasionally, return the shifter/throttle to neutral for a cool-down period, but do not operate at idle speed for extended periods. It is better to turn OFF the engine than to idle indefinitely.
- Operate above 1500 RPM carefully. If the body of water is choppy or if there are other challenges present, operate at lower RPM. Boating conditions can add strain to powertrain operation.
- Always shift and accelerate smoothly during break-in. Avoid rapid operational changes. Plane the boat quickly as lower speeds can put more strain on the engine.
- **Do not do your first oil change before ten (10) hours or later than fifteen (15) hours.**
- **Do not load the boat to its maximum load capacity until after the first oil change. Maintain the correct oil level as measured on the dipstick during the break-in period.**
- Monitor all gauges and displays closely.
- Abnormal vibrations or unusual noises could be symptomatic of additional problems that are not registered by the gauges and displays.
- The boat must be returned to an authorized Malibu dealer for the first service/scheduled maintenance. The purpose is to allow a trained technician to interpret any signs of malfunction or anomaly that may have

occurred. Catching these symptoms early is critical to avoiding potentially damaging events that might not be covered under warranty.

- The dealer will change oil and the transmission fluid, as well as check the cooling fluid, clean the sea strainer, and do an alignment check on the engine.
- Verify that the propeller remains properly mounted and undamaged. Propeller information is provided in the *How It Works* chapter of this manual.

## ⚠ CAUTION

Never operate at wide-open-throttle (WOT) continuously, even after the break-in period. WOT allows boat operators to quickly get the boat out of potentially dangerous situations and is intended for only brief use. WOT places exceptional stress and strain on the engine and drivetrain components. It can also test the boat operator's ability to control the vessel. Loss of control not only could cause an accident that damages the boat but could also potentially injure persons onboard.

## NOTICE

Check the engine oil level frequently during the break-in process. It is normal for the engine to use oil at this time, often at a greater rate than will occur later. The dipstick is located mid-block on the starboard side of the engine, between the intake and manifold. It has a circular yellow handle. Add only full-synthetic 5W30 engine oil for M-Series engines, and 0W40 for LT4 engines. **DO NOT USE ENGINE ADDITIVES AT ANY TIME. ENGINE ADDITIVES WILL VOID THE WARRANTY.**

At ten (10) hours (and never later than fifteen [15] hours), the engine oil and oil filter **MUST** be changed. Malibu strongly recommends that this procedure be done by the authorized Malibu dealer as the service technicians are trained to look for the difference between acceptable signs of engine wear as differentiated from abnormal. This can make the difference in ensuring a long life for your drivetrain.

If your dealer is not conveniently close by, instructions for oil and filter change procedures has been provided for oil changes **AFTER** the break-in, 10-hour oil change. After the break-in period, follow the instructions presented in the *Care and Maintenance* chapter of this manual.

## NOTICE

Failure to follow break-in instructions can result in long-term performance issues or damage to critical components of the drivetrain. Such failure is not covered under warranty.



---

## TRANSMISSION AND V-DRIVE

---

### Transmission

The engine is equipped with a transmission manufactured by either **Velvet Drive** (M5/M6) or **ZF** (LT4).

The internal gearing is an integral part of the boat's propulsion and allows a measure of control when docking and loading onto a trailer. Inside the housing is a series of gears controlled by the shifter/throttle arm on the side panel at the driver's helm. The shifter allows the boat to move forward, backward or remain fairly stationary. Bear in mind that boats are not equipped with brakes nor is there a way in which boats can remain stationary in the fluidity of a body of water. Neutral stops propulsion, but not movement. See the *Get Ready* chapter of this manual for more information regarding this topic.

The transmission is attached to the back of the engine, but it will be in the boat forward of the engine's orientation because in these types of boats the engine is turned around from direct drive boats and most land-based forms of transportation.

Transmissions normally require very little maintenance as long as the powertrain is operated in a sensible manner. Slamming the shifter into a gear or being too timid in moving it can damage the system. As noted in the *How It Works* chapter of this manual, a brisk, confident movement is suggested. Getting up to plane as quickly as reasonable and returning the shifter/throttle to an appropriate speed for the body of water is best. Excessive weight and neglecting service can also adversely affect the system and contribute to damage.

After the first ten (10) hours of operation, as part of the authorized Malibu dealer's review during the oil change will be a check of the transmission. Instructions for the required check of the transmission fluid are given in the *Care and Maintenance* chapter of this manual.

---

### V-Drive

The boat is equipped with a V-drive system consisting of two (2) drive shafts, a gearbox, and the propeller.

The first drive shaft connects the rear of the transmission to a gearbox mounted in the center of the boat. The second drive shaft extends from the gearbox to the rear and out the bottom of the boat to where the propeller is mounted. (The propeller's functionality is described in the *How It Works* chapter of this manual, as part of the underwater gear.)

As with the transmission, the V-drive assembly is very durable and requires little routine attention. Your authorized Malibu dealer will check it during the 10-hour oil change. Afterwards, it will require a periodic check, which is described in the *Care and Maintenance* chapter of this manual.

# HOW IT WORKS

## SAFETY EQUIPMENT

### Fire Extinguishing Equipment

Even when surrounded by water, fire is a significant concern. In fact, because safe egress from the boat is limited if it becomes necessary to abandon ship, this issue reinforces the need for easily accessible personal flotation devices (PFDs). For more information about PFDs, refer to the *Safety* chapter of this manual.

### Fire Extinguisher Requirements

**In the United States, boats between 16–26 feet in length are required to have at least one (1) fully charged and date-stamped 5-B or 10-B rated portable fire extinguisher onboard.**

When purchasing fire-extinguishing and suppression units, Malibu strongly recommends buying units that are designed specifically for the marine environment, the standards for which have been established by the U.S. Coast Guard (USCG) and the American Boat and Yacht Council (ABYC). In other countries, follow the recommendations and requirements of local jurisdictions and boating authorities.

### ⚠ CAUTION

Most countries have fire extinguishing and suppression requirements for recreational boats.

It is the responsibility of the boat owner and/or operator to determine the requirements for the body of water on which the boating will occur. Check with local governmental agencies regarding locale-specific requirements and limitations.

### NOTICE

Malibu recommends always having at least one *extra* hand-held unit fully charged and onboard. **Hand-held fire extinguishers are not included in standard equipment.**

### Additional Fire Extinguisher Requirements — 26 LSV


For boats 26–40 feet in length (such as the 26 LSV), the fixed fire extinguisher system **must** also be accompanied by at least **two (2) 5-B or 10-B rated portable extinguishers**, which are **not included in standard equipment**. The operator is responsible for ensuring the boat is equipped with the

correct number and type of fire extinguisher(s)—see portable fire extinguisher installation instructions in the next section.

### Portable Fire Extinguisher(s)

#### Fire Extinguisher Mounting Location — Most Models

One (1) portable extinguisher should be mounted to the inner side of the deck in the compartment under the glovebox, accessed by lifting up the observer seat (OB) leanback cushion.

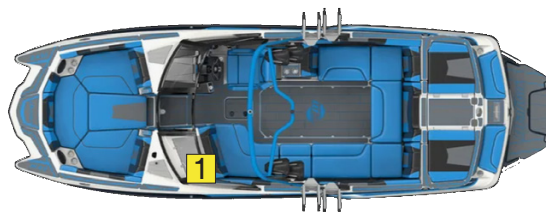


*On all models except the 26 LSV, one (1) portable fire extinguisher should be mounted in the indicated location.*



*Mounted portable fire extinguisher.  
Note the nearby label.*

#### Recommended Fire Extinguisher Mounting Locations — 26 LSV

The 26 LSV must be equipped with two (2) 5-B or 10-B rated portable extinguishers, mounted in specific locations.

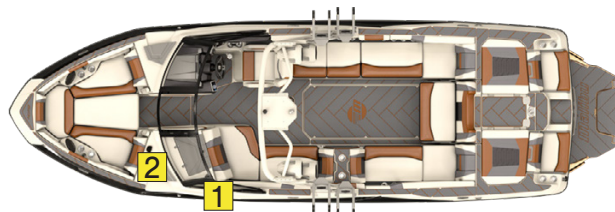

*On the 26 LSV, one (1) portable fire extinguisher should be mounted in the each of the indicated locations (two portable [2] extinguishers in total).*

One portable extinguisher should be mounted to the interior side of the deck in the compartment under the glovebox, accessed by lifting up the observer seat (OB) cushion.



*Mounted portable fire extinguisher  
(1 of 2). Note the nearby label.*

On the 26 LSV, another portable extinguisher should be mounted behind the port-side bow lean-back cushion adjacent to the red fire extinguisher label affixed to the boat under the armrest of the seat.



*Port-side bow lean-back cushion.  
Note the nearby label.*

*Mounted portable fire  
extinguisher. (2 of 2)*

### **Mounting — Instructions**

Each portable fire extinguisher must be mounted to the boat with:

1. a USCG-approved mounting bracket and
2. self-tapping screws (as the bracket is lagged directly into fiberglass).

Screw size and quantity will depend on the chosen mounting bracket. Choose a screw length that is long enough to secure the bracket, but not so long that the screws protrude through the upholstery cushion when pressure is applied to the face of the cushion, e.g. if a person sits or leans against it.

Refer to the chosen fire extinguisher's owner's manual(s) for specific installation instructions and requirements such as mounting height, hardware type, etc.

Refer to and follow all operation, inspection, and maintenance instructions provided by the fire extinguisher manufacturer, usually affixed to the canister itself.

### **Automatic Fire Extinguisher System**

The boat is equipped with a fixed manual/automatic fire extinguisher system located in the engine compartment. If the system's sensor recognizes extreme heat in the compartment, the system will emit a chemically fixed suppression material.

In the event of a fire, do not wait for automatic actuation of the fixed fire extinguisher system—use the manual release handle located near the helm seat (near the helm circuit breaker panel).



### **Fixed Fire Extinguisher — Manual Release**

1. Immediately turn the engine OFF and power down all electrical systems.
2. Ensure all engine hatches are closed.
3. Pull out the safety pin.
4. Firmly pull the red "FIRE" T-handle. There will be both an audible and visual (indicator light) alarm when the system discharges.

### **Fixed Fire Extinguisher — After Discharge**

1. Before inspecting for damage, allow the agent to "soak" the compartment for at least 15 minutes and wait for hot metals or fuels to cool.
2. Have approved portable extinguishers in hand and ready for use.
3. Do not breathe fumes or vapors caused by the fire and/or suppression agent. They are hazardous and toxic.
4. Forced ventilation will often be necessary. Care should be taken to readily dissipate hazardous atmospheres and not merely move them to another location. Consideration should be given to exhaust paths when opening or venting the enclosure after discharge. Ventilation should not be directed near any area that might be used as a gathering spot for personnel.

Following discharge of fire suppression material, the system will require recharging. If an automatic system has discharged, it is unlikely that the boat can be run. Malibu recommends getting a tow to shore and having the engine compartment thoroughly cleaned and the fire suppression system recharged prior to running the boat's engine again. If hand-held units have been discharged, they will also require recharging. Be aware that the chemicals in all fire suppression units can discolor upholstery.



---

### Fixed Fire Extinguisher— Indicator Light

When powering up the boat, always verify that the extinguisher system indicator light, located adjacent to the throttle-shifter at the helm, is ON.

- Light **ON** - System is charged.
- Light **OFF** - System has been discharged and requires service.

## ⚠ WARNING

Whenever fire extinguishers or suppression units have been used in fighting an onboard fire, a careful determination should be made whether it is safe to operate the boat. In most instances, it is advisable to have the boat towed to shore rather than risk additional fire or permanent damage to the drivetrain. The boat should be thoroughly serviced by an authorized Malibu dealer prior to operation again. Operation prior to service could result in additional damage to the boat and may result in serious injury or death.

---

### Fire Extinguishers – Care & Maintenance

In the event that the fixed system discharges, it is recommended that the boat be cleaned as soon as practical. Fire suppression manufacturers provide information regarding the proper and appropriate cleaning agents. Also, refer to the cleaning instructions provided in the *Care and Maintenance* chapter of this manual to avoid permanent damage to materials.

**Service and re-installation of the fixed fire extinguisher system must be performed by an authorized Malibu dealer.**

Even if no fire extinguishers have been discharged, fire extinguishers and/or suppression units require periodic maintenance. The automatic fire suppression system, as well as any onboard hand-held fire extinguishers, should be inspected at least annually for rust, corrosion, damage, or leakage by an authorized Malibu dealer. Partially used hand-held units should be replaced or recharged by an authorized Malibu dealer or a qualified fire extinguisher servicing company.

All fire extinguishers, whether fixed or hand-held, have an expiration date (usually affixed to the canister). Expired fire extinguishers must be replaced before operating the boat.

*Models: All models.*

---

## Emergency Safety Lanyard



The Emergency Safety Lanyard attaches to the boat operator by way of a lanyard for the purpose of shutting off the engine if the operator, for any reason, moves or is moved away from the driver's helm.

## ⚠ WARNING

It is required by law that you use the Emergency Safety Lanyard system as failure to do so can cause death or serious injury. **DO NOT** operate the boat if the Emergency Safety Lanyard system does not function properly.

## ⚠ DANGER

The Emergency Safety Lanyard should always be connected between the switch and the operator when the engine is running. The purpose of the switch is to immediately shut OFF the engine if the operator moves away from the driver's helm. Without the driver's control, all persons onboard or other boaters in the area could be subject to serious injury or even death. Never operate the boat without the Emergency Safety Lanyard connected between the switch and the boat operator. Malibu recommends the operator of the vessel always remain at the helm any time the engine is running.

The switch assembly consists of an ON-OFF switch and a switch/lanyard clip. The engine will not start and/or run if the toggle is in the OFF position. Malibu recommends the clip always be inserted in the toggle switch. Connected to the operator, if (s)he moves away from the controls, the clip will pull free, pulling the switch to the OFF position. If the engine needs to be shut down very quickly, it can be done so by pulling on the lanyard to release it from the switch.

To reset the switch after activation, reinstall the lanyard clip and flip the switch to the UP position.

---

## Lighting

All Malibu boats are equipped with multiple lights to assist boaters in low light situations.



## ⚠ WARNING

Boat outings should conclude prior to dark. Visual sighting is critical to safe boating. In an emergency where the boat must be operated in darkness, use the boat's navigation and anchor lighting in accordance with local law and ordinances which may restrict the type of lighting to be used, plus sound signals, to alert anyone in the area, and proceed slowly. After dark, it may be impossible to see other boats, submerged hazards, or the shoreline, which can result in damage to the boat that is not covered under warranty, and serious injury or even death.

If equipped with a tower, the boat will also have a 360-degree light on top for use at anchor. If the boat is operated in darkness, use the anchor light in accordance with local law and ordinances. This light is on whenever the navigation/anchor lights are on.

*Models: Standard on all towers.*

## Emergency Back-up Key Switch

When the emergency back-up key switch is turned to the ON position, the Anchor and Navigation Lights will illuminate.

*Models: Standard on all models.*

## Navigation Lights



As required by the U.S. Coast Guard and most maritime authorities, recreational vessels should display navigational lights between sunset and sunrise, as well as other periods of reduced visibility. There is a green light on the starboard side and a red light on the port side, operated from a button on the dash panel.

*Models: Standard on all models.*

## ⚠ CAUTION

Bow and navigation lights get hot during use, which could result in burns if touched. The light can remain hot for an extended period after it has been turned OFF.

## Docking Lights



These are an option that offer additional visual assistance when docking. The lights are located around the bow area and provide white light to the front of the boat. The docking lights are operated from a screen icon. On all Wakesetter models, the control will be from HIGH-LOW-OFF. This feature is enabled through the touch screen settings.

Please note that boat operators are not allowed to operate docking lights while the boat is underway.

*Models: Available on all models except 21LX.*

## Courtesy Lights

The courtesy lights vary from model to model and are found in all areas of the deck from bow to stern, as well as inside storage compartments. These lights LED lights provide bright white light without excessive heat. However, leaving them on for extended periods of time shortens the life of the LEDs and can cause them to become warm to the touch. Malibu recommends leaving the lights off unless they are needed. Lights are operated via the 8" display—refer to the *Dash and Displays* chapter of this manual for more detailed instructions.

*Models: Available on all models.*

## Anchor Light



---


## Overhead Tower Lights



*Models: Standard on boats equipped with the Ascend Pro Tower. Available on boats equipped with the Ascend Tower.*

---

## Underwater Transom Lights

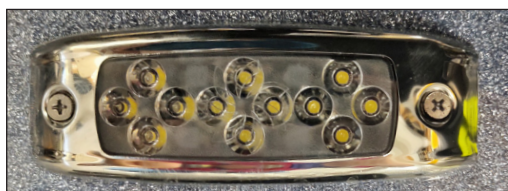

The boat may be equipped with optional underwater transom lights, which are located under the swim board and add considerable brightness in the water. This is an added safety feature, particularly when swimming in shallow water. **Note that these lights are not allowed to be ON while the boat is underway.** These LED lights are intended to be operated under the waterline, and Malibu recommends keeping the lights OFF unless submerged. The lights are controlled via the 8" display.

*Models: Available on all models except 21LX.*

---

## RGB Lighting

The boat may be equipped with the RGB (Red, Green, Blue) Lighting Package, which replaces most standard white interior lights with RGB lights capable of emitting multiple colors. Interior lights are located in cabin and bow side panels, shifter panel and under the slide tracks of the transom Bench Seat.

RGB lighting controls are split into three different zones:

- bow interior,
- cabin interior,
- and Ascend Pro Tower (if equipped).

Each zone can be controlled independently or all together if desired, and may be set to standard white lighting or any array of red, green and blue.

*Models: Available on 23LSV, 25LSV, 26LSV, 23MXZ, 24MXZ, M230, and M242.*

---

## Tie-Ups and Fenders

Several methods of securing boats to shoreline and docks are available.

Although Malibu does not provide rope for tie-ups as a standard provision, dock lines are available through [www.malibuboatsgear.com](http://www.malibuboatsgear.com). Also, many excellent marine aftermarket suppliers offer a wide range of rope for sale.

Malibu recommends a two-strand nylon rope. (Three-strand rope may stretch too much and allow the boat to bump other objects.)

There are several different knots and hitches to secure boats to docks or shoreline. Malibu recommends making the effort to learn these marine-intended knots and hitches. Consult with your authorized Malibu dealer to determine which ones will work best in the tie-up application you will be using. Some hitches are intended for only short-term docking, while others work better for longer periods of inactivity. Always bear in mind wave action that may cause the boat to bump the shoreline (and scratch the hull, which is not covered under warranty), or bumping against a dock, or even potentially other boats (also not covered under warranty), when selecting the appropriate method to secure the boat.

---

## Cleats



The boat may be equipped with optional pop-up cleats, located below the windshield on each side of the deck, and near both rear sides. Some models may also have two additional/optional cleats mounted on either side of the front of the bow. Refer to the *Quick Reference Guide* chapter of this manual for model-specific cleat locations.

The pop-up cleats operate by pushing on the cleat. If it is flush with the deck, pull up the cleat for use; to retract, push on the cleat once more.

Pop-up cleats have two “horns” around which the line is tied. To tie a line with a “cleat hitch” knot, begin by bringing the line past the center of the cleat on the outside beneath and wrap it around under both horns. Then bring the line across and back under the first horn again in a figure eight. Make another figure-eight loop around the second horn. Although there are multiple marine knots, the cleat hitch is a special knot suitable for tying the rope to a cleat. If a line is not correctly secured on the cleat using a cleat hitch, it can work itself loose.

## **⚠ WARNING**

Cleats are used to tie the boat to a dock or to hang fenders. They are not designed for any kind of towing, including other boats. Nor should they be used for anchoring, mooring, or lifting the boat; the only location structurally certified for such “strong point” requirements is the bow eye. Abuse of the cleats is likely to result in equipment failure that will damage the boat, which is not covered under warranty, and can also result in serious injury or death.

## **NOTICE**

Malibu recommends the purchase and use of fenders to protect the boat’s gel coat finish whenever a boat is at risk of contact with docks or any other object (for example, rafting up with other boats) that may damage the finish. This kind of damage is not covered under warranty.

If the boat will be moored for an extended period or where there is active wave motion, Malibu recommends the purchase of fenders, also available from reputable marine suppliers. Fenders are available in a range of sizes and materials, but the goal is to protect the boat from damage because of motion against the dock.

*Models: Available on all models.*

## **Bow Eye and Transom Eyes**

All boats are equipped with a single bow eye near the apex of the hull under the bow, and two transom eyes, which are located one each on the port and starboard sides of the transom. The semicircular or U-shaped metal connections are made from stainless steel to reduce the effects of rust and corrosion. On boats that are not equipped with cleats, these eyes (along with the transom grab handle and/or the tower tow point) are used to tie-up the boat, and no other part of the boat, including any interior components such as the windshield extrusions or grab handles should ever be used.

*Models: Standard on all models.*

## **NOTICE**

Never tie up the boat, even temporarily, using any component of the boat except the bow eye, transom eyes and/or cleats (where equipped). Using any other component could result in damage to the boat that is not covered under warranty.

## **Fender Locks**

The boat may be equipped with stainless steel quick-release fender locks designed to provide protection when the boat is docked. Composed of a receiver permanently affixed to the boat and a locking pin which may be inserted into from the receiver, fender locks allow you to set fender/bumpers to without re-tying them.

To remove a fender, simply pull the locking pin.

## **NOTICE**

Quick-release receivers are not designed to be used to tie up the boat; they are designed only to support fenders/bumpers.

## **Horn**

All boats are equipped with a horn. The purpose of the horn is to sound an alarm in the event of an emergency, and to draw attention as you maneuver the boat in areas where line of sight is questionable or in instances when attention seems warranted. The horn is activated by a button on the dash.

*Models: Standard on all models.*

## **Mirror**

Even when accompanied by an onboard observer to assist in keeping track of passengers, skiers, boarders, and others engaged in activities, operators would be well advised to use a mirror as part of constant alertness to the surroundings.

All boats can be equipped with a windshield-mounted and adjustable mirror as an option.

Note that the mirror is held in place by a knob that is tightened. Unlike most land vehicles, the boat mirrors must have this knob loosened to adjust the mirror’s field of vision, and then retightened to hold it in place.

*Models: Available on all models.*

## **NOTICE**

Failure to tighten/loosen the knob on the mirror prior to adjusting the field of vision can cause damage that is not covered under warranty.

## **Flip-down Step**

Some models may be equipped with a flip-down step on the swim board. Be certain the step is properly stowed before operating the boat. The flip-down step should be down (and



usable) only when the boat is anchored or stationary.

*Models: Available on all models except Response TXi and 21LX.*

## NOTICE

Failure to properly stow the flip-down step prior to getting underway can result in damage to the ladder, step, and potentially to the boat, which would not be covered under warranty.

## Fuel Fill

Malibu boats are equipped with fuel fill fittings and vents to provide state-of-the-art safety protection in the process of adding fuel to the tank. While most of the fuel system on the boat is inaccessible to owners/operators, the fuel fill was designed to ensure the process of fueling is efficient and as safe as possible.

The fuel fill is located on the port and starboard sides of the boat toward aft on all Malibu models.

There should be no spit-back or overfill at land-based gas stations in North America. However, the requirements that eliminate those issues are not applicable to some gasoline service stations in other countries or even at some marinas in North America.

Therefore, care should always be taken while fueling the boat. Do not stand too close to the fuel fill location in case some fuel is expelled from the pressurized system. You may also hear an audible release of air pressure when opening the cap. Pay attention to ensure that gasoline is entering only into the boat's fuel fill and not spilling or running outside the fuel fill.

Note that the first time the boat's fuel tank is filled, the process may seem slow. This is because fuel is displacing air that was in the tank. After the first full tank, filling should proceed at approximately the same pace as one would expect in filling land-based vehicles.

## ⚠ DANGER

Gasoline is extremely flammable. Under some conditions, particularly those that allow fuel fumes to accumulate in enclosed areas, gas can be explosive as well. Avoid smoking while filling the gas tank or allowing any sparks in the area. Never run the boat engine while filling the gas tank. If any gas is spilled, clean it up with clean rags and dispose of properly on land.

## INTERIOR PERFORMANCE

### Steering Wheel

Steering in a boat is different from most land vehicles, although the effect is similar. Malibu boats are equipped with steering wheels. The standard steering wheel, which can be tilted, is turned in the direction the operator wishes to go. Instead of wheels turning in that direction, the boat steering wheel controls a rudder, and the rudder turns in the opposite direction. By cutting through the water with a rudder in the opposite direction, the bow of the boat will turn in the direction the steering wheel has been turned. Note that, compared to land-based vehicles, it takes more time to perform maneuvers on the water than it would on land. It is important for new operators to practice before trying turns in tight locations.

Boats also do not track in the same manner as land-based vehicles. They are affected by currents, wave action, and natural motion created by the propeller. At slow speeds, the effect is more pronounced, and boats seem to wander slightly. Trying to steer the boat back and forth to compensate only worsens the effect. If there is adequate water depth and no obstacles close at hand, allow the boat to follow its course. The overall course will be directionally straight if the steering wheel is held in place.

Malibu boats are equipped with a tilting mechanism on the steering column. This allows the operator to adjust the steering wheel to the most comfortable angle and provide a sense of secure control. Steering columns have a lever at the underside of the column. Press down on the lever until the steering wheel is movable. Tilt it up or down to the best angle for the operator and reengage the lever snug against the steering column. Never force the lever. If it will not move with relative ease back into place, the steering wheel is not in one of its acceptable levels. Adjusting slightly should allow proper action of the tilt mechanism.

## ⚠ WARNING

Communication is key to maintaining proper control of the boat. In models equipped with the Surf Band, it can take temporary control of the boat, affecting maneuverability and safety. A designated individual onboard should always manage who is operating these controls. Failure to do so could result in serious injury or even death because of loss of control.



## Shifter/Throttle



**Note:** The engine will not start unless the shifter/throttle control is in the Neutral position!

To the right of the boat operator is the shift/throttle lever. Any time the boat engine is off, the lever should be in the center upright position, which is Neutral (meaning the boat is not in gear) and is apparent when it can be felt slotting in with an auditory click. Boats are not equipped with “Park” like land-based vehicles.

At the base of the throttle is a button. Pushing on the button disengages the transmission, thereby allowing use of the throttle without engaging the transmission. This is used for warm-up of the engine while it is still in Neutral. Be sure to position the throttle vertically (Neutral) before reengaging the transmission by again pushing the button.

When engaging the transmission from Neutral either forward or backward into reverse, pull up on the safety collar located directly below the throttle lever knob. The safety collar helps avoid unintentional movement into gear.

When shifting gears, always do so smoothly and briskly. Being either too hard and slamming the gears, or too tentative is hard on the shift/throttle system and can result in damage that is not covered under warranty.

*Models: Standard on all models.*

## ⚠ WARNING

Do not shift from forward to reverse while the engine is at high RPM. Damage to the transmission will result. When shifting from forward to reverse, the system requires a brief pause in the Neutral position to allow the engine to return to its idle position prior to moving into the opposite gear. Without the brief pause, it can also cause the engine to shut off. The subsequent loss of control can cause damage to the boat and/or injury to persons in or around the boat.

## Electronic Throttle Control (ETC)

### ⚠ DANGER

Never make any alterations or modifications to any part of the throttle control system, including the throttle control. Such changes render the engine and boat warranties void and may result in loss of control of the boat, which could result in serious injury or death.

Although unseen by the boat’s occupants, the Electronic Throttle Control (ETC) contributes to the boat’s performance in critical fashion. Never make any modifications to the throttle control.

If, for any reason, (unplugged, wire cut, a short, loss of power, or sensor failure, etc.) any part of the electronic throttle control system fails, the engine controller will default to idle. The operator will essentially have no control of the throttle and the Engine Fault Alarm will activate.

If this happens, the operator must turn the ignition key to OFF, and then attempt to restart the engine. This will reset the computer area network. If the condition persists, however, it will be necessary to take the boat to an authorized Malibu dealer for repair.

Additional information regarding the throttle control’s safe operation and maintenance is included in additional separate material that is part of the new boat information package.

*Models: Standard on all models.*

## Pylon(s)

All models can have an optional pylon located between the lounge lean back seats and the sun deck area. These pylons, which are intended for use in wakeboarding and tubing as well as skiing, are not intended for any other use.

*Models: Available on all models.*

## NOTICE

**DO NOT** attempt to use the pylon for any purpose other than towing individuals behind the boat with an appropriate towing rope. **DO NOT** attempt to tow another boat by attaching a rope to the pylon. This will overload the pylons and can cause damage to the boat which will not be covered under warranty.

## ⚠ WARNING

**DO NOT** allow passengers to sit behind the pylon whenever someone in the water is being towed. When the towed individual lets loose of the ski/wakeboard rope, the tension may cause the rope and its tow handle to snap back into the deck area. Individuals may not be able to deflect the rope, with the result that people hit by the rope and handle could be injured, especially if they are not paying attention.

## Sport Dash



As part of the Command Center, the optional Sport Dash package features several components intended to enhance enjoyment of the boating experience. Sport Dash components include:

- A smartphone holder with wireless charging capabilities.
- An intuitive analog rotary knob for Surf Gate, Power Wedge III, Speed Control, and Stereo (volume, song selection, and mute). The dial allows the operator to keep their eyes on the water while adjusting the controls.

*Models: Standard on M242. Available on all Wakesetter models and M230.*

## Rear and/or Dock Camera

When the shifter/throttle is put into reverse, an image from behind the transom will appear in the center of the 15" display in boats equipped with a back-up (or rear) camera. This does not replace the driver's responsibility for verifying

that there are no impediments to either side or behind the boat! The back-up camera serves as a redundant visual indicator.

At any time, the operator can go to the media tab on the 15" display and select the reverse camera to view images on the camera. Otherwise, the camera operates automatically, as indicated, when the shifter/throttle is in reverse.

Boats may also be equipped with an optional docking camera, which can aid the driver in approaching the dock. As with the rear camera, the dock camera does not replace the driver's responsibility for verifying that there are no impediments to properly and safely docking the boat! The dock camera serves as a redundant visual indicator.

Control for the docking camera is also available through the 15" display.

When viewing either the reverse camera or docking camera feeds via the Media screen, the user has the ability to record a video or take a picture that is saved to the Android Emulation.

*Models: Standard on M242. Available on M230 and all Wakesetter models (except 21LX).*

## 360° Camera System

The 360° Multi-Camera System (if equipped) allows the operator to view video output from multiple view points around the boat. Six (6) cameras installed around the boat provide four (4) directional views (front, rear, port, starboard) as well as an overhead view and a 360° 3D view.

*Models: Available on 23LSV, 23MXZ, 24MXZ, 25LSV, 26LSV, M230, and M242.*

## ⚠ WARNING

The 360° Camera System is designed to be an aid and does not relieve the operator of their responsibility to operate the vessel with due care and attention. Do not solely rely on this system for vessel docking or operation purposes. Failure to pay attention to surroundings during vessel docking and operation could lead to collision with obstacles or hazards in or around the water.

## INTERIOR LUXURY

### Stereo Components


Malibu offers a range of optional media opportunities. Most

of these systems are controlled through the 8” display, but a Transom Stereo Remote is available as an option.

Stereo system controls are explained in the *Dash and Displays* chapter of this manual.

*Models: Available on all models.*

**M-Link**

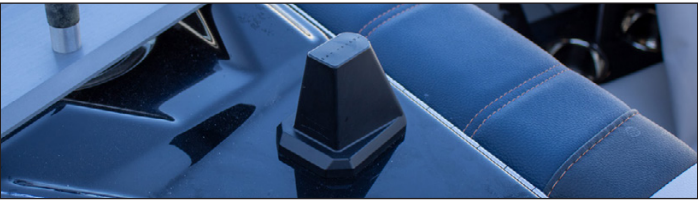

The boat may be equipped with an Wet Sounds M-Link stereo receiver/transmitter, enabling wireless audio sharing with other nearby M-Link (or A-Link) units. The unit is mounted in front of the port-side windshield.

Audio played by the host boat will also be played though the speakers on all connected M-Link (or A-Link) boats. Refer to the *Dash and Displays* chapter for operating instructions.

**Seating**

Malibu provides a variety of seating types and options. The standard seating is crafted from top-quality materials and engineered to provide the maximum-allowed number of individuals on board for the boat model’s design. Please note that it is very important for passengers to be seated when the boat is underway as shown in the seating charts in the *Quick Reference Guide* chapter of this manual. This provides for balance and avoidance of over-loading that could otherwise adversely affect the boat’s maneuverability, swamp the boat, or even cause injury or death.

**⚠ DANGER**

Failure to evenly distribute the combination of passengers and additional gear brought on board can result in loss of control of the boat, swamping and sinking, and causing other adverse effects. Never exceed the boat capacity, paying particular attention to limits in bow seating. Failure to pay ongoing attention to this can result in serious injury or death.

**⚠ WARNING**

Never attempt to jump into the body of water from any of the seating in the boat. It can be difficult to determine water depth, and it could be possible to misjudge clearance of the deck and gunwales.

Malibu offers transom seating. This padded, comfortable individual seating on each side of the transom area is intended for use only when the boat is fully stopped, without the engine running. Sitting in this area while the boat is underway could result in individuals falling off, which could result in injury or even death. It is also possible that carbon monoxide fumes from the exhaust system could reach individuals sitting here.

No one should sit or ride on the sun pads when the boat engine is running. Carbon monoxide is emitted from the exhaust system and vented into the water beneath the swim board. Fumes can and do reach the sun pad area. Avoidance of carbon monoxide poisoning is addressed in the *Safety* chapter of this manual.

**⚠ WARNING**

The transom seating should never be used while the boat is underway as passengers in those seats could be dislodged, resulting in injury or death. Also, the seat should never be used when the engine is running because passengers at the transom may also be subject to carbon monoxide fumes emitted from the exhaust under the swim board. Do not have the engine running while passengers are sitting in the transom seats. Even while stationary, the transom seats should never be the location from which individuals attempt to leap into the water. It can be difficult to determine the water depth, and people can misjudge clearance of the swim board.

**⚠ WARNING**

The glide handle for the driver’s helm seat should be the locked position anytime the boat is underway. Failure to have the handle stowed properly could result in the seat moving unexpectedly, and such action could cause the driver to be distracted and lose control of the vessel. This could result in injury to the driver and/or passengers.

The Wakeview bench, optional on some models and standard on others, pivots up to allow observers to have a rear-facing seat while the boat is underway. When moving the seat back up or down, take care to avoid pinching fingers, hands, or other body parts as the back snaps into or out of place.



## ⚠ WARNING


Interior grab handles may be used by passengers to hold on to during boat operation. The handles are sturdy surfaces, which means that if an individual makes sharp contact with a grab handle, bruising may result. If the boat is being operated in a manner that results in excessive movement of the passengers, or if people are shoving each other, even playfully, at any time, injury is possible. Malibu strongly recommends that this kind of activity be always avoided. Do not use the handles to secure or tie up the boat as this can cause damage that is not covered by warranty.

When adjusting the helm seat, note that there is a handle pull inboard, adjacent to the glide handle. Pull the lower lever inboard to unlock the slide mechanism. When in the neutral position, the driver can slide the seat forward or aft to a preferred position. Return the handle to its locked position while the boat is underway. Failure to do so could cause the seat to move, resulting in the driver losing control.

The standard driver's seat also has a swivel feature. To activate, pull the upper lever inboard to unlock the swivel mechanism. When the desired position has been achieved, release the handle to lock the position.

*Models: Standard on all boats; configuration is model-specific.*

### Smart Helm Seat

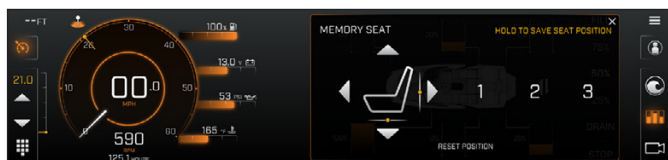

The boat may be equipped with a Smart Helm Seat featuring powered adjustment (up/down, forward/aft) and the ability to save seat positions in memory—all conveniently controllable via the 15" display.

Like the standard helm seat, the Smart Helm Seat is also able to swivel using a mechanical lever.

**IMPORTANT: When adjusting the Smart Helm Seat, always avoid pinching fingers, hands, and other body parts.**

*Models: Available on all Wakesetter models.*

### Seat Heater

The boat may be equipped with a seat heater, designed to provide an additional level of warmth to the operator, which is especially helpful in colder locales and/or conditions.

Available on both the standard helm seat and Smart Helm

Seat, the seat heater is controlled via the 8" display. Refer to the *Dash and Displays* chapter of this manual for specific control location.

**IMPORTANT: The seat heater should always be turned off at the conclusion of the outing, if not before.**

### Flip-Up Windblock Door (Natalie Seat)

The Natalie Seat (Windblock Door) is a seat back that doubles as windblock door and as a center seat back closing out the bow to allow to sit three-wide facing forward.

To put the door into seat position or windblock position, grab the end of the cushion and pull up, rotating the top of the seat towards the front of the boat until it hits a hard stop (it should lock in at a similar angle to the port and starboard lean backs.) Push in on the bottom of the seat to ensure that the hinge is locked.

Before stowing the seat, ensure there are no objects in the recess to prevent damage to them or the hinge. To stow the seat, either pull forward on the bottom of the seat to release pressure on the hinge or pull on the handle built into the hinge to drop the seat down into the stowed position.

When moving the seat, always ensure that extremities are not in a position to get pinched.

*Models: Available on 22MXZ, 23MXZ, 23 LSV, 24 MXZ, and 25LSV.*

### M-Series Bow Filler Cushion and Removable Leanback Seat

The boat may be equipped with a bow filler cushion and removable leanback seat (M-Series only).

On the M242, the bow filler stows on the port side of the bow and then flips over to cover the walkthru bow. The leanback is stowed on the OB outboard wall.

On the M230, the bow filler is stowed upside-down in the starboard bow seat base storage tub and can be placed with either side facing up (one side has upholstery; the other has soft grip). The leanback is stowed in the bow starboard storage tub by pulling the handle which slides the pins in.

Both leanbacks can be pushed into their tracks by sliding the bottom pins in and then pushing the top pins into their slots.

*Models: Standard on M242. Available on M230.*

### Multi-View Wake Bench

The boat may be equipped with a sliding Multi-View Wake Bench (MWB) that offers a variety of seating as well as a table.

To move the bench into different positions in the boat pull



the grab handle from the center of the cushion (located just under the seat in front). This will allow you to lift the front of the bench from the stowed slot position and into your desired location in the lounge.

To move back into the stowed position, repeat the pulling action to lift it out of the slot and then guide the bench back down the track towards the transmission cover until it locks into its position.

To configure the Multi-View Wake Bench into a rear facing position or the table, place your hands on the center of the lean back and pull up and over so the arms on the side transition in the tracks and the cushion/lean back moves towards the front side of the cushion.

Next, pull the flapper latch at the top of the lean back and spin the lean back toward you. The first position that it will hit is the table position. If you'd like it to continue into the rear-facing position, repeat the previous step and spin until it locks into the next position.

When you are finished and would like to return the seat to the stowed position, repeat the steps above to spin the lean back into the original position, and then place your hands at the top of the lean back and push on it until it transitions the arms/lean back to move towards the rear of the cushion.

*Models: Available on 22LSV.*

## Max Pivot Seat



The optional sliding Max Pivot Seat may be configured into the following positions:

- forward-facing,
- rear-facing,
- lounge/bed,

- high table, and
- low table.

### Sliding the Seat

Depending on boat model, the seat may be locked into one of either three (3) or four (4) slots along the slide track:

- stowed slot (nearest to the transom),
- middle slot (or slots),
- far slot (nearest to the helm).

To move the seat into a different slot, carefully pull up on the unlock tab located on both sides of the cushion. Then, slide the seat along the track into the desired slot and press the lock button on both sides.


When the seat is unlocked, a red pop-up indicator will be visible. **Do not use the seat when these indicators are visible.**

### ⚠ WARNING

Prior to using the seat or getting underway, always ensure that the seat is **fully locked** into a slot and that the red pop-up indicators are not visible. Failure to do so may result in injury.



*Max Pivot Seat Controls (on either side of cushion).  
From left to right: lock button, unlock tab, lean-back tab.*

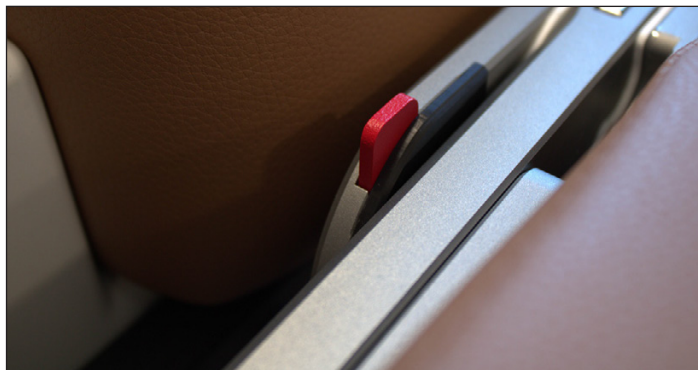

*When the red pop-up indicator is visible as shown, the seat is unlocked and may be slid into a different slot.*

---

### Lounge/Bed Position



To configure into the lounge/bed:

- With the seat in the stowed slot and forward-facing position, unlock and slide the bench into a slot.
- Locate the lean-back tab on the vertical starboard side arm.
- Pull the lean-back tab up and hold it; pull back on the rear of the lean-back until there is an audible click.
- Release the tab and allow the lean-back to gently fold down flat.

---

### Rear-Facing Position



To configure into the rear-facing position:

- Configure the seat into the lounge/bed position (see previous instructions).
- Pull up on the bottom cushion until there is an audible click.

To stow the seat from the rear-facing position, pull and hold the lean-back tab on the arm toward the top of the seat and then push the cushion towards the transom until there is an audible click. Release the lean-back tab and let the seat cushion down gently.

---

### High Table Position



To configure into the high table position:

- With the seat in the stowed slot and forward-facing position, configure the seat into the rear-facing position (see *Rear-Facing Position*).
- Locate the circular twist knob on the back side of the lean-back.
- Twist the knob in a counterclockwise direction to unlock the lean-back. Then, pull the bottom of the lean-back, swivelling it toward the bow, until it locks into place with an audible click.

---

### Low Table Position



To configure into the low table position:

- Twist the knob and lift the forward- most edge of the table/cushion. It will continue to swivel up until it hits the next lock position with an audible click.
- Locate the lean-back tab on the starboard side arm.
- Pull up on the tab and push the table/cushion towards the transom until there is an audible click. Release the tab and gently lower the table down to the lower position.

To stow the seat from either table position, twist the knob and lift the forward edge of the table/cushion so it swivels over and locks into the next position. Lift the rear lean-back cushion up until it locks into the forward-facing position and then unlock and slide the seat back into the stowed slot.

*Models: Standard on M242. Available on 23 LSV, 23MXZ, 25LSV, 24MXZ, M230, and 22MXZ .*

## ⚠ WARNING

Avoid multiple pinch points locations in this seating. Hands and fingers of either the user or other passengers could be caught while using this seat or changing position of the seat.

### Response Series Walk-Thru Seat



Malibu offers an optional walk-thru seat on TXi models. This seat is specifically designed to only be used during ski events, as it does not meet industry regulations.

*Models: Available on Response TXi.*

### Armrests

Armrests are available in the bow section of some models. While the armrests add comfort, it is important to use them properly. No one should ever sit, perch, stand, or walk on an armrest. Do not use the armrest to hold satchels, bags, or any other property. The armrests will not hold excessive amounts of weight without failing. When adjusting armrests up and down, use caution to avoid pinching fingers or skin.

*Models: Available on certain models.*

## ⚠ CAUTION

Armrests are intended to be used only as armrests. Any excessive weight placed on an armrest, even briefly, can result in failure of the armrest. Among other activities, **DO NOT STAND ON THE ARMREST.** This is not covered under warranty and could also result in injury. In moving armrests up and down, use caution to avoid pinching fingers or skin.

### Glove Box

Malibu recommends storing this manual in the glove box so that it will always be readily available for reference during

outings. Placing this manual in a plastic bag will increase its protection.

The glove box is convenient for storing personal items while boating as well. **While the glove box is not waterproof, its design reduces the likelihood of damage from water that may come on board.** Malibu does not warrant the level of water resistance available when using the glove box.

The glove box opens by pushing on the button on the front of the lid. Closing requires only shutting the lid tight. Closing requires minimal effort. If more effort is required, it is likely the glove box is overloaded, and some material should be removed prior to closing.

**Do not store any aerosol items in the glove box.** These can overheat and leak and/or rupture. Any liquid or semi-liquid material placed in the glove box may spill or overheat. Care should always be used when placing liquids such as suntan lotion in the glove box. Malibu is not responsible for such misjudgments.

Should any water intrude into the glove box, clean it out as soon as practical. Mold and mildew can result if even small amounts of water are not removed. As with any storage location, any spills should be cleaned efficiently to avoid damage and/or odors.

*Models: Standard on all models.*

## NOTICE

Never attempt to close an overloaded glove box. Attempting to force the lid closed could result in damage that is not covered under warranty. Avoid pinching fingers, hands, and other body parts while closing the glove box lid.

### Storage Compartments

Malibu boats have multiple storage compartments available throughout the boat. In general, storage is available in the bow, gunwale, and floor. Some models will also have transom storage and may have interior lighting within the storage compartments.

As much as possible, gear and property brought onboard should be stowed in storage compartments to prevent movement of items during the outing. Unsecured items could strike and potentially injure individuals on board during operation.

Be sure to distribute items throughout the boat and compensate for the persons on board. Weight should be as evenly distributed throughout the boat as possible to avoid negatively affecting control.

Never try to close an overloaded storage compartment. Forcing a compartment closed can result in damage to the



boat that is not covered under warranty.

Storage compartments should be cleaned out in accordance with the *Care and Maintenance* instructions in this manual. At least annually, all compartments require a thorough cleaning. If anything with residual odor is placed in a storage compartment, or if anything has spilled in the compartment, cleaning should occur as quickly as possible afterwards.

## **⚠ DANGER**

Anything brought on board should be stored in a designated storage compartment, if possible, to avoid the potential of being struck by an unsecured item while underway. This could result in serious injury or even death. Items should be evenly distributed and with attention to the number of passengers and where they will sit. Even distribution of added weight is critical to a safe operation.

Never force a compartment closed as overloading could cause damage to the boat and that is not covered under warranty. Storage compartments should be kept clean. Failure to do so may result in damage or permanent discoloring and/or odors that are also not covered under warranty.

*Models: Available on all models.*

## **Removable Cooler**

Adding more convenience is a marine-grade, removable cooler. Any cooler of the same or smaller size will fit in the same location under the seating immediately aft of the driver's seat, but Malibu recommends marine-grade coolers as they use stainless-steel hardware, which is advisable in the type of atmosphere in which it will be used. Although the supplied cooler has a liner that reduces odor absorption, it is a good idea to clean out the cooler after each use. Odors may still penetrate, and spills can stain. Such occurrences are not covered under warranty. Cooler storage location varies by model.

*Models: Available on all models except Response TXi.*

## **Cup Holders**

All boats are equipped with cup holders. The cup holders are sized for contemporary, normal-sized cups. Malibu recommends using only cups with covers, as boat motion is likely to otherwise slosh liquids out of the cups. If liquids are spilled into the cup holder, or anywhere else, they should be cleaned up as soon as practical to prevent any damage to the boat components or anything brought on board. Such damage is not covered under warranty.

*Models: Standard on all models.*

## **Removable Trash Receptacle**

Some models have a removable trash receptacle which is stowed under the aft, starboard seating. Malibu recommends using plastic liners in the receptacle to ease the removal of trash. All trash, regardless of whether the boat is equipped with this feature, should be properly discarded onshore in a legal and safe manner. Clean the receptacle as needed to prevent staining and odors.

*Models: Available on all models except Response TXi and 20VTX.*

## **Soft Grip**

Soft Grip adds comfort and an attractive appearance to the interior. Be aware, however, that it requires some additional maintenance. Always allow Soft Grip to dry before covering the deck with a mooring cover or other canvas. Although Soft Grip is constructed from marine-grade materials, if it does not dry thoroughly before storage, even short-duration, mold and mildew can set in. Additional information is available in the *Care and Maintenance* chapter of this manual.

*Models: Available on all models.*

## **⚠ WARNING**

Use caution when walking on Soft Grip that is wet. Soft Grip can be very slippery, and falls could result in serious injury.

## **Grab Handles**

Boats are equipped with grab handles for added convenience and safety. Handles are generally inside the deck above passenger seating and on the transom, centered above the swim board. The handles assist boarding, particularly from the swim board into the deck area. During boat operation, the grab handles inside the deck can provide additional security for passengers. (No one should ever be on the swim board during boat operation. You can read more on this in the *Safety* chapter of this manual.) The handles are crafted from stainless steel or anodized aluminum to resist rust and corrosion. Clean all grab handles on a regular basis.

*Models: Standard on all models. Locations vary. Operators and passengers should acquaint themselves with the locations prior to operation.*



## ⚠ WARNING

Interior grab handles may be used by passengers to hold on to during boat operation. The handles are sturdy surfaces, which means that if an individual makes sharp contact with a grab handle, bruising may result. If the boat is being operated in a manner that results in excessive movement of the passengers, and/or if people are playing and moving around the boat, at any time, injury is possible. Malibu strongly recommends that this kind of activity be always avoided. Do not use the handles to secure or tie up the boat, as this can cause damage that is not covered by warranty.

## Heater

A popular option on all models is the heater. Warm air is vented to the deck from the engine core. Vent locations vary by model, so owners/operators and passengers should familiarize themselves with the locations. The vents having sliding, directional gates that can redirect the air flow, or even shut it off.

The heater is controlled on the 8" display screen. To turn it on high speed, on low speed, or off, review the instructions that are provided in the *Dash and Displays* chapter of this manual.

## ⚠ DANGER

Never operate the heater within a confined space. This includes with a canvas cover over the cockpit or bow area, with the stern of the boat in a shallow area, or at the dock/shore with other boats or docks close by. Any situation in which exhaust fumes are trapped or limited in disbursement could result in carbon monoxide fumes within the deck and could result in carbon monoxide poisoning. Carbon monoxide poisoning is addressed in the *Safety* chapter of this manual. Be aware that operation of the heater is a drain on the battery.

Be aware that operation of the heater is a drain on the battery. Review the *Electrical* section in the *Dash and Displays* chapter of this manual for important information regarding how to avoid becoming stranded by a fully discharged battery or batteries. Pay attention to the voltmeter reading; whenever it falls below 10.5 volts, the battery requires recharging.

Propylene glycol (a specific type of antifreeze) runs through the heater core. This is addressed in the *Care and Maintenance* chapter of this manual.

Also note that air coming through the vents may be cool initially, depending on whether the engine has warmed up. The propylene glycol to heat the heater core is pulled from the engine. Therefore, the engine must be running—ideally

at or above 1200 RPM while underway—to have warm air flow from the heater. Allow a reasonable period for the air to warm. However, if it has not warmed after several minutes, it may signal an issue with the heater system. This will require attention from an authorized Malibu dealer.

## TOWER, CANVAS, AND ACCESSORIES

Malibu towers are available for every model of Malibu Boats, and they provide several benefits to boat users. The elevated tow points make the tower an impressive addition for most watersports. When accessorized with available Malibu-approved options, towers provide many other enhancements to the boating experience such as protection against sun or rain, additional storage space, stereo output, and lighting.

Malibu offers three different towers: the Ascend, the Ascend Pro and the Ski Tower. The Ascend is the most versatile tower for Malibu models and meets the needs of most users. The Ascend Pro Tower is powered, can be trailered in the down position, and has more options. The Ski Tower is a lighter-weight version that folds down lower than the Ascend and mounts farther forward to avoid interference with the tow rope when the boat is equipped with a center pylon in use. Depending on the boat model, not all towers may be available.

## ⚠ CAUTION

Adding any tower to a Malibu boat other than a Malibu-built tower will void the warranty. Due to the complexity of adding a tower, the stresses on the deck and the potential for injury if the tower fails, Malibu strongly discourages the addition of any aftermarket tower. If the owner upgrades a boat for the addition of a tower, such work must be done only by an authorized Malibu dealer, utilizing Malibu-built components and tower.

## ⚠ CAUTION

Water toys, i.e., inflatables, should NOT be towed from the tower. The impact forces exerted by towed water toys may damage the tower or the hull of the boat.

## ⚠ WARNING

No components should be added to the Malibu tower beyond what is specified by Malibu. Other aftermarket items may not be acceptable due to electrical, electronic, or other wiring and power-related issues. The tower weight limit may also be exceeded by adding aftermarket items. Such weight limits can also cause the tower to fail, which could result in damage that is not covered under warranty, as well as serious injury or death to persons onboard. Never suspend any additional items from the tower. No one should ever be allowed to sit or stand on or hang from the tower. The design will not support such activity and may result in serious injury or death.

## Ascend Tower

The Ascend Tower enhances the boating experience by providing a better tow for most watersports, mounting locations for board racks, Bimini cover, tower speakers, overhead lighting, and additional tow points. It can be lowered effortlessly for storage or passage under low bridges.

## ⚠ CAUTION

A second person to assist in raising or lowering the tower is strongly recommended. Due to the weight and angle of the tower, a lone individual could lose control, resulting in damage to the boat, which is not covered under warranty, and/or injury to people in the tower's range of movement.

## ⚠ WARNING

Prior to lowering or raising the tower ensure nobody is beneath it, and that no body parts are in the area where such could be injured by the moving components of the tower.

*Models: Available on all models except Response TXi and 20VTX.*

## Lowering the Ascend Tower

- Prior to lowering the tower, fold the board racks inward and stow the tower mirror.
- Stow the Bimini accordingly:
  - With the Bimini wrapped and the boot installed, pull the release pins on both port and starboard Bimini mounting points (rotate 90 degrees to prevent them from re-engaging).
  - From the center of the Bimini, push upward until it reaches the upright position (where the release pins

align with the upright position holes on the Bimini mounts).

- Rotate the release pins another 90 degrees to secure the Bimini in the upright position.
- With the Bimini in the upright position, ensure it has moved as far inward as possible and the boot buckles are securely fastened around tower hoop. Slide the Bimini aft as much as possible.
- Rotate the handles on the bases of the tower toward the stern of the boat. Make sure to rotate the handles all the way to the stops. There is a cam mechanism inside the latch that will not reset if the handle is not rotated all the way when opening it.



- Gently lower the tower until it stops.

## Raising the Ascend Tower

- Raise the tower until it physically stops.
- Rotate the port and starboard handles toward the bow of the boat until the handles stop.
- The board racks and Bimini can now be deployed.

## NOTICE

If Malibu tower accessories are added to the Ascend Tower after the build process, it may be necessary to upgrade the internal tower gas springs to accept the additional weight and to perform as designed. This kind of upgrade should be done only by an authorized Malibu dealer.

## The Ascend Pro Tower

The Ascend Pro enhances the boating experience by providing a better tow point for most watersports, mounting locations for board racks, Bimini covers, tower speakers, additional tow points, overhead lighting and misters. It can be lowered and raised effortlessly with the twist of a switch for trailering, storage or passage under low bridges. While the boat is stationary or traveling at speeds of less than 5

mph, it can be partially tilted down for better shade coverage.

*Models: Available on all M-Series and Wakesetters except 21LX and 22LSV*

## ⚠ WARNING

Prior to lowering or raising the tower ensure nobody is beneath it, and that no body parts are in the area where such could be injured by the moving components of the tower.

### Lowering the Ascend Pro Tower completely

- Prior to lowering the tower, fold the board racks inward and stow the tower mirror.
- Stow the Bimini accordingly:
  - With the Bimini wrapped and the boot installed, pull the release pins on both port and starboard Bimini mounting points (rotate 90 degrees to prevent them from re-engaging).
  - From the center of the Bimini, push upward until it reaches the upright position (where the release pins align with the upright position holes on the Bimini mounts).
  - Rotate the release pins another 90 degrees to secure the Bimini in the upright position.
  - With the Bimini in the upright position, ensure it has moved as far inward as possible and the boot buckles are securely fastened around tower hoop. Slide the Bimini aft as much as possible.
- Swivel the helm seat clockwise so the back of it is in the interior (to move it out of the way of the tower and speakers when the tower is lowered.) Otherwise, the speaker could damage the seat, which is not covered under warranty. Slide the seat back as far as possible.
- Turn the battery isolator switch to the ON position and wait five (5) seconds.
- On the home base in the center of the tower, push the power button. It will light **BLUE**.
- Rotate the switch clockwise and hold in this position until the tower is completely down.

## NOTICE

The Ascend Pro tower is equipped with lockout solenoid assemblies that keep heavy impact loads from damaging the actuators. This is the clicking sound that can be heard when the switch is first turned. These devices only protect the actuators when the tower is in the fully up position.

## ⚠ CAUTION

With the Ascend Pro tower in the down position, if the boat experiences a large upward force (e.g., dropping off an 8" curb at a moderate speed while trailering), it may cause damage to the internal mechanisms of the tower, causing it to fail to return to the full UP position. Only an authorized Malibu dealer can properly repair the damage.

### Raising the Ascend Pro Tower completely

- Turn the battery isolator switch to the ON position and wait five (5) seconds.
- On the home base in the center of the tower push the power button. It will light up **BLUE**.
- Rotate the switch counterclockwise and hold in this position until the tower is completely up. This is 1-2 seconds past when you hear the lockout solenoid assemblies engage.
- Push the power button. The **BLUE** light will turn off.
- Deploy the Bimini in reverse order of the stowing instructions above.
- Swivel and slide the helm seat back to its normal operating position.

## NOTICE

If the 'Tower Down' banner shows on the 15" display at the helm but the tower is up, it could be because the actuators were not fully run to the internal stops. Repeat the steps for raising the tower.

## ⚠ CAUTION

Power to the Ascend Pro tower should remain OFF unless being used to raise or lower the tower. Leaving the power on will make the tower susceptible to raising or lowering unexpectedly if the knob is accidentally moved in either direction. In the process, the tower could hit individuals onboard the boat potentially causing serious injury.

---

## Ski Tower

The Ski Tower enhances the boating experience by providing a better tow point for most watersports, mounting locations for board racks, Bimini cover, tower speakers, and additional tow points. The Ski Tower is a lighter-weight tower that mounts further forward so it will not interfere with the tow rope when the center pylon is being used for a better water-skiing experience. It folds down lower than the Ascend Tower, making the windshield the high point of the boat.

*Models: Response TXi, 20VTX*

### ⚠ CAUTION

A second person to assist in raising or lowering the tower is strongly recommended. Due to the weight and angle of the tower, a lone individual could lose control, resulting in damage to the boat, which is not covered under warranty, and/or injury to people in the tower's range of movement.

### ⚠ WARNING

Prior to lowering or raising the tower ensure nobody is beneath it, and that no body parts are in the area where such could be injured by the moving components of the tower.

---

## Lowering the Ski Tower

- Prior to lowering the tower, stow the Bimini and fold the board racks inward.
- See Bimini stowing instructions above.
- Unscrew the two knobs on each side of the tower hoop.
- Fold the side plates attached to the base's inboard.
- Lower the tower until it stops.

---

## Raising the Ski Tower

- Raise the tower until it physically stops.
- Fold the side plates upward to meet the hoop assembly.
- Screw in securely the two knobs on each side of the tower hoop.
- The board racks and Bimini can now be deployed.

---

## Tower Accessories

Following are descriptions of a variety of optional accessories that can be added to the tower, depending on packages and availability. It is important to note that the

towers were designed to accommodate only the specified options. Other aftermarket options may not work properly due to the electrical harness requirements. The towers can also hold only a limited amount of weight. Exceeding that limit can cause failure of the tower, which could lead to injury to people on board or people using the tower for water activities. No additional weight should ever be added to the tower.

*Models: Available on all towers.*

### ⚠ WARNING

No components should be added to the Malibu tower beyond what is specified by Malibu. Other aftermarket items may not be acceptable due to electrical, electronic, or other wiring and power-related issues. The tower weight limit may also be exceeded by adding aftermarket items. Such weight limits can also cause the tower to fail, which could result in damage that is not covered under warranty, as well as serious injury or death to persons onboard. Never suspend any additional items from the tower. No one should ever be allowed to sit or stand on or hang from the tower. The design will not support such activity and may result in serious injury or death.

### ⚠ CAUTION

Water toys, i.e., inflatables, should not be towed from the tower. The impact forces from inflatables may do damage to the tower or fiberglass hull of the boat, which is not covered under warranty. Injury may also result.

---

## Bimini Top

The boat may be equipped with a Bimini top, a deployable canvas awning designed to provide shade and sun protection (depending on the angle of the sun) to the operator and passengers. Deluxe versions may also offer rope and surfboard storage.

### ⚠ CAUTION

Bimini tops that provide board storage should NOT be used to store foil-style boards such as wakefoils or hydrofoils; doing so may lead to injury.

The canvas cover requires thorough drying prior to the boat being stored. See the *Care and Maintenance* chapter of this manual for additional information.



---

## Bimini Options

### • Ascend Pro Tower:

- **CS (Apex)** : Gen III Surf Dual Coverage Bimini w/ Rope and Surf Board Storage
- **CS (Apex)** : Extended Gen III Surf Dual Coverage Bimini w/ Rope and Surf Board Storage
- **Great Lakes** : Flip Dual Coverage Bimini w/ Rope and Surf Board Storage
- **PTM** : Dual Coverage Bimini w/ Rope and Surf Board Storage

### • Ascend Tower:

- **CS (Apex)** : Gen II Surf Dual Coverage Bimini w/ Rope and Surf Board Storage
- **CS (Apex)** : Extended Gen II Surf Dual Coverage Bimini w/ Rope and Surf Board Storage
- **Great Lakes** : Flip Dual Coverage Bimini w/ Rope and Surf Board Storage
- **PTM** : Dual Coverage Bimini w/ Rope and Surf Board Storage

### • VTX Ski Tower:

- **CS (Apex)** : Single Coverage Bimini
- **Great Lakes** : Dual Coverage Bimini w/ Rope and Surf Board Storage

### • TXi Ski Tower:

- **CS (Apex)** : Single Coverage Bimini
- **Great Lakes** : Single Coverage Bimini
- **Great Lakes** : Dual Coverage Bimini w/ Rope and Surf Board Storage

### • No Tower:

- **CS (Apex)** : Single Coverage Bimini
- **CS (Apex)** : Tournament Edition Single Coverage Bimini
- **Great Lakes** : Single Coverage Bimini

---

## Bimini Top — How To Open

---

### **Apex (CS) Dual Coverage Bimini**

1. Unclip the strap wrapped around the tower and unwrap from around the tower.
2. Pull the bimini forward and free of the tower until it will not slide any farther.
3. Reposition the tower mirror (where equipped) into place for use.
4. Unzip the bimini boot and place the boot in a secure location, preferably one of the storage compartments.
5. Unroll the canvas from around the bimini frame (support bar).

6. Pull the canvas over the tower, ensuring the opening fits over the navigation light.
7. Unfold the back half of the bimini toward aft.
8. Secure the two support rods. Gently pull down on the bimini canvas to release tension and make it easier to hook the rods.
9. Wrap all the connection straps around the bars and secure with the Velcro flaps.
10. Attach the bimini canvas to the tower using the provided straps and tighten. These will go between the speakers if equipped.
11. If equipped, the bimini extension can be zipped into the aft zipper.

---

### **Great Lakes Flip Dual Coverage Bimini**

1. Unclip the strap wrapped around the bimini.
2. Reposition the tower mirror (where equipped) into place for use.
3. Unzip the bimini boot and place the boot in a secure location, preferably one of the storage compartments.
4. Unroll the canvas from around the bimini frame (support bar).
5. Pull the appropriate pin on both the port and starboard side hardware kits to unlock the bimini.
6. Flip the bimini over the tower (it may be stowed forward or aft of the tower), but do not pull it all the way down yet. (It is easier to attach the Velcro straps before the bimini is put under tension.)
7. Wrap all the connection straps around the bars and secure with the Velcro flaps.
8. Pull down the bimini until you hear both sides of the hardware kit lock into place.

---

### **PTM Dual Coverage Bimini**

1. Unclip the strap wrapped around the bimini.
2. Reposition the tower mirror (where equipped) into place for use.
3. Unzip the bimini boot and place the boot in a secure location, preferably one of the storage compartments.
4. Unroll the canvas from around the bimini frame (support bar).
5. Ensure the flip underneath both hardware kits (port and starboard) are unlatched.
6. Use the handle on either hardware kit to deploy the bimini. (You should hear a click from both hardware kits.)
7. Wrap all the connection straps around the bars and secure with the Velcro flaps.

---

### **Great Lakes Ski Tower Dual Coverage Bimini**

1. Unclip the strap wrapped around the tower and unwrap from around the tower.
2. Reposition the tower mirror (where equipped) into place for use.
3. Unzip the bimini boot and place the boot in a secure location, preferably one of the storage compartments.
4. Unroll the canvas from around the bimini frame (support bar).
5. Flip the canvas over to either the front or rear of the tower, ensuring the opening fits over the navigation light. *Note: If storing to the front of the tower, the bimini may obstruct visibility and instead need to be stowed in the aft position.*
6. Secure the two support rods. (Gently pull down on the bimini canvas to release tension and make it easier to hook the rods.)
7. Wrap all the connection straps around the bars and secure with the Velcro flaps.
8. For each of the two support poles, press the button and adjust the

pole from the “STOW” position to the “DEPLOY” position.

---

### Single Coverage Bimini (w/ Tower)

1. Unclip the strap wrapped around the tower and unwrap from around the tower.
2. Reposition the tower mirror (where equipped) into place for use.
3. Unzip the bimini boot and place the boot in a secure location, preferably one of the storage compartments.
4. Unroll the canvas from around the bimini frame (support bar).
5. Pull the canvas to the tower, ensuring the opening fits over the navigation light.
6. Use the appropriate Velcro and/or zipper straps to secure the bimini to the tower.
7. Check the front of the bimini and attach any Velcro straps at the front of the bimini (where applicable).
8. Lock the support arms that connect the front of the bimini to the tower in place.

---

### Single Coverage Bimini (No Tower)

1. Unclip the strap wrapped around the tower and unwrap from around the tower.
2. Reposition the tower mirror (where equipped) into place for use.
3. Unzip the bimini boot and place the boot in a secure location, preferably one of the storage compartments.
4. Unroll the canvas from around the bimini frame (support bar).
5. Pull the canvas to the aft of the boat.
6. Use the appropriate straps and connections to secure the bimini.

---

## Bimini Top — How To Close

- Reverse the “How To Open” steps provided for your boat’s specific Bimini top.
- If the boat will be in motion, place the Bimini boot over the canvas and zip it closed. (This will keep the canvas from flapping during operation and potentially tearing it, which is not covered under warranty).
- If towing, move the tower mirror (where equipped) into its stowed position out of the way of the the Bimini support. No-tower Bimini tops should be completely taken down before towing.

---

## Extended Awning Deployment:

1. To deploy the Extended Awning (where equipped), first open the Bimini top. Then, place the black 48” poles in the necessary locations located on the deck depending on the desired coverage (front, rear, or both).
2. Unroll the awning material and attach to the tower with the main Bimini already deployed.
3. The rear canvas will wrap around the support poles on the side of the Bimini and come back to buckle.
4. There should be enough strap length to adjust how tight the canvas is after the awning is fully deployed.

5. Pull the D-rings at each corner towards the poles located at the rear and hook them around the top. The poles will flex towards the tower but are stiff enough to keep the canvas tight.

6. On the front, attach the canvas around the aft hoop(s) in the corners on the Ascend or Ascend Pro.

7. Proceed by pulling the canvas out and mounting each D-ring with its nearest pole.

8. To remove the extended awning, do these steps in reverse.

**Note: The Extended Awning is not to be used at speeds of over 5mph.**

*Models: Available on dual coverage CS (Apex) Bimini tops on 24MXZ, 25LSV [aft awning only], 26LSV [aft awning only], M230, and M242.*

---

## Tower Speakers

Malibu offers three (3) types of tower speaker:

- **Wet Sounds Icon8** — 8” coaxial speaker with 1” tweeter
- **Wet Sounds Rev8** — 8” horn-loaded compression driver (HLCD) speaker
- **Wet Sounds Rev12** — 12” horn-loaded compression driver (HLCD) speaker with integrated RGB lighting

All speaker options offer full mid-bass sound with clean, detailed highs. The Malibu-designed enclosure features waterproof connectors. The speakers are powered by a dedicated amplifier. Refer to the *Dash and Displays* chapter of this manual for additional information about the speaker operation.

*Models:*

- **Icon8:** Available on all models with an Ascend, Ascend Pro, or Ski Tower. The Towers can have either one or two sets of speakers. Tower Speakers can be either white or black
- **Rev8:** Available on the Ascend, Ascend Pro, and Ski Towers. The Ascend has the option of one or two sets of speakers, while the Ski Tower has the option for only one set. Tower Speakers can be either white or black.
- **Rev12:** Available on the Ascend and Ascend Pro Towers. Either tower has the option of one or two set of speakers. Tower speakers can be either white or black.

---

## Board/Ski Racks

The boat may be equipped with board racks designed to store wakeboards. For detailed board rack usage instructions, please refer to documentation provided by the manufacturer. Be sure that boards are securely in place prior to operating the boat, as they can become projectiles if they are not.

Always remove boards and stow them inside the boat before trailering—highway speeds can cause damage even if the boards are secure on the rack.

The ski rack (only available on boats equipped the Ski Tower) accommodates two slalom skis with easy-access bungee forks to free up storage areas onboard. The ski racks can be mounted on either the port or starboard side of the tower, or on both.

## ⚠ WARNING

Secure boards and/or skis on the rack prior to operating the boat. If they are not secure, the boards and/or skis may come off the rack and become projectiles that could damage the boat or hurt individuals. Remove them from the racks and stow in the boat when trailering. Even if secured on the racks, highway speed can cause damage to the boards, skis, tower or boat, or even cause them to become loosened from the racks. Spinner racks should be locked prior to towing.

## Ascend Tower Mirror

Housed in an aluminum billet with an adjustable arm, the optional mirror offers high-definition, prescription grade optics with a 140-degree field of view.

The mirror is adjustable by way of a clamp on the tower. The mirror should be removed and stowed in a storage compartment inside the boat if the boat will be towed any substantial distance.

*Models: Available on boats equipped with an Ascend Tower.*

## Ascend Pro Tower Mister



The Ascend Pro tower may be equipped with Malibu's revolutionary integrated tower mister to help keep you comfortable all summer long. To properly assemble and

prepare this feature for use as well as how to properly prepare this feature for winter storage please follow the instructions outlined below.

## Preparing for Use:

- Ensure the reservoir is installed in the port under seat storage, secured with three draw latches, all plumbing connected, and filled with fresh, clean, debris-free water.
- The Tower Mister is operated via the 8" display—refer to the *Dash and Displays* chapter of this manual for more information.
- When using the tower mister for the first time each season run the system without nozzles for one minute to purge any air or debris from water lines.
- Install all nozzles and ensure the system functions as intended.
- Nozzles are initially shipped in the glove box.
- Inspect and refill reservoir water after each use using fresh, clean, debris-free water.

**IMPORTANT:** Always use fresh, clean, debris-free water. Failure to use clean water will result in poor performance or damaged components.

## Mister — Preparing for Storage (Winterization):

1. Ensure the water reservoir is empty.
2. Run the mister to ensure all water is removed
3. Disconnect the plumbing from the reservoir.
4. Unplug the pump at the Delphi link.
5. Release draw latches and remove the reservoir.
6. Store reservoir in an area protected from freezing temperatures.

## ON AND UNDER THE WATER

### Blower System

One of the most critical elements of the boat is the blower system. The purpose of the blower system is to remove volatile fuel vapors and other toxic byproducts produced by normal engine and drivetrain operation. The emissions are primarily vented through the surf pipe, located beneath the swim platform and transom area of the boat. Therefore, no one should ever be on the swim platform, transom seating, or sun pads while the engine is operating.

**IMPORTANT:** Always operate the blower for at least four (4) minutes prior to starting the engine. Also, always operate the blower when idling or operating at low speed. This helps disperse fumes that, if otherwise allowed to accumulate, could result in an explosion.

The blower is controlled from an ON-OFF switch on the 8" display. See the *Dash and Displays* chapter of this manual for more detail on how to operate the system. The blower should come on automatically when the system is first powered up from the ON-OFF power button. However, operators should always verify that the blower is on and operating rather than relying on the automatic ON.

## ⚠ DANGER

Always operate the blower for several minutes (at least four [4] minutes) prior to starting the engine. Also, always operate the blower when idling or running at low speed. This must be done with the engine compartment open. Failure to perform this necessary function could result in an explosion of the accumulated fumes within the compartment, resulting in serious injury or death.

## ⚠ DANGER

Never allow anyone to be on the swim platform, transom seating, or sun pads when the engine is running. Carbon monoxide fumes are colorless and odorless. Illness and death can result from breathing fumes, even before a person is aware of breathing them. See the *Safety* chapter of this Owner's Manual for more information regarding this critical matter.

## ⚠ WARNING

Always allow the exhaust manifolds to cool before touching them. (The manifolds are on the upper side of the engine on both sides.) Engine operation will result in the manifolds becoming very hot, and touching could result in burns to the skin.

## NOTICE

All engines are equipped with catalyst exhaust manifolds that may produce an unusual odor. This is typical of engines with a catalytic converter exhaust system. If you are uncertain about any odor, do not hesitate to contact an authorized Malibu dealer for assistance in determining the cause and potential for concern.

boat is a properly functioning bilge system. The bilge is a void between the deck and hull in which unintended water accumulates as it is drained from other areas of the boat. It does not include the water in the ballast system, which is deliberately added to the boat and must be dealt with separately.

As noted in the *Care and Maintenance* chapter of this manual, the bilge should be routinely checked and drained, as necessary. The automatic function will often keep the system free of excess water. Too much water in the system can affect the boat's handling under operation, and can potentially swamp a boat, causing damage to other components in the bilge compartment.

There are two bilge pumps in most boats. One pump is in the center of the boat, directly below the center pie plate. The second pump (where equipped) is located at the transom of the boat, aft of the engine on the starboard side.

Bilge pumps can be turned on manually or automatically. To turn on the pump manually, use the controls on the screen. See the *Dash and Displays* chapter of this manual for additional information on operation through the screen. The bilge pumps are also equipped with a sensor to automatically turn on if water is sensed around the pump. This function is always active. The automatic mode will always be activated, even if the battery isolator switch is turned to the OFF position. Therefore, be certain the pump is working properly and there is no kink in the output hose before storing the boat for long periods of time since the bilge pump will continue to run if it senses water. Otherwise, this could cause a battery to drain and could ultimately damage the pump over time.

Operators should always check that the drain plugs are installed and secure prior to every operation.

## ⚠ WARNING

Drain plugs must always be checked to be certain they are securely installed prior to every outing and operation. Failure to install the drain plugs will allow water to intrude into the boat and can result in flooding, swamping, and sinking the boat. Such action could result in damage to the boat that is not covered under warranty, as well as serious injury or death to persons on board.

## Bilge System

Another critical component in the safe operation of the




## NOTICE

After manual operation of the bilge pumps is complete, use the screen controls to return the bilge pump(s) to automatic mode. If the bilge pump is left in manual mode and there is insufficient water in the bilge, the bilge pump will eventually fail. Such a result is not covered under warranty. Malibu recommends testing the function of the bilge pump prior to each use of the boat. This can be done by simply turning the pump(s) on and making sure they are running.

There will likely always be a small amount of water in the bilge, as the pump cannot eliminate 100% of the water. A minor amount of water is acceptable. However, operators should monitor bilge water levels through the center access pie plate. In all models, this hole is in the center of the deck near the driver's helm. It may be under a mat. It should remain secure during operation and opened when the boat is stationary and the engine not running. Be certain to close the pie plate before operating the boat again. Individuals on board could trip and injure themselves if the pie plate is not secured properly.

All boats are equipped with two drain plugs, a 1/2" drain plug on the transom and a T-handle drain plug in the center of the boat. The 1/2" drain plug can be accessed outside the boat, directly under the swim platform on the center back of the transom. The T-handle can be accessed inside the boat through the center access. Be certain to read the above information regarding **SECURELY** installing drain plugs prior to all outings.

The transom plug is in the center of the transom at the bottom edge.

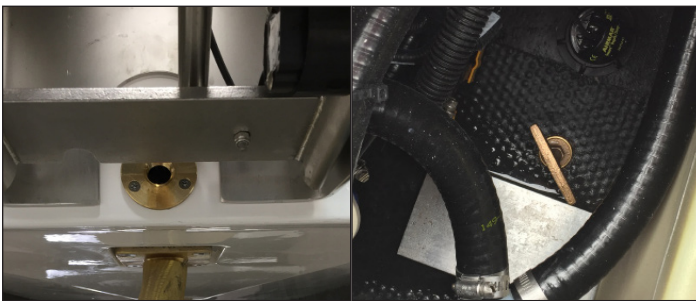

## NOTICE

The bilge system plugs should be removed at the conclusion of any boating outing in which the boat is removed from water. This assists in the draining process. Malibu recommends keeping the handles stored in a designated storage compartment on a routine basis so that they are always easy to locate prior to the next outing. Never launch a boat without ALL the drain plugs reinstalled; this should be part of the routine checks prior to launching the boat into the water. Failure to reinstall the drain plugs will result in water entering the bilge system and can sink the boat.

During storage or winterization, the batteries should be removed. This will cause the automatic bilge system to be temporarily inoperable. This adds to the importance to never leave the boat in a body of water without a fully charged battery installed.

Because of the frequent use of the bilge pump and its importance to the safe operation of the boat, the bilge pumps, which are in the center bilge area below the pie plate and engine (aft) area, should be checked by an authorized Malibu dealer as part of an annual maintenance routine.

In certain locales, the boat's bilge pump(s) may also be equipped with bilge pump filters, which, if equipped, require the following additional maintenance steps:

- *Every 30 Engine Hours:* Inspect all bilge pump filters for debris buildup, which can lead to decreased performance. Replace as needed.
- *After Operation In Water With Moderate Debris:* Inspect the bilge pump filters for debris buildup, which can lead to decreased performance. Replace as needed.
- *Annually:* Replace all bilge pump filters.
- *During Winterization:* Remove all bilge pump filters and store them in a clean, dry location.

## NOTICE

Automatic bilge systems require a small amount of electrical charge, which is drained from the battery or batteries on board. Eventually, the battery could become fully discharged, which means that the automatic bilge will no longer work. If the boat is left in a body of water during this period and water continues to enter the bilge system, water is not drained. This could lead to damage to components in the bilge and potentially to the rest of the boat. Such damage is not covered under warranty. Therefore, if a boat will be left unattended for a period, owners/operators should make regular checks of the system to ensure that the battery retains a charge.

## ⚠ DANGER

If the bilge system is not operating properly when a boat is launched, **DO NOT** continue with the outing. If the bilge system ceases to function properly during an outing, have all persons on board put on a PFD if they are not already wearing one. Return to shore immediately and disembark. Reduce the risk of sinking by ensuring the bilge system is functioning properly.

## Ballast System

Malibu's Quad Hard-Tank ballast system is the best, most discreet way to add significant weight or balance out your load to create the exact wake or wave you desire.

Hard tanks do not collect mildew on the outside and add to the maintenance requirements. Because the tanks are housed under the floorboard, storage is not compromised. The tanks also provide accurate level readings, which are displayed on the 15" display screen.

All Malibu boats are equipped with at least three ballast tanks and have an optional bow tank, plus optional plumbing for Plug 'n Play.

Most of the ballast system is invisible to the consumer, but its effects are obvious and enjoyable. The tanks are located beneath the deck in locations that assist in balancing and enhancing the wake.

## NOTICE

Optional plumbing for Plug 'n Play bags is available at the time of the original boat order. Malibu recommends choosing bags from a Malibu-approved ballast bag list for the corresponding model year (dealers have a list available). When bags from the approved list are used the bag weight does not need to be subtracted from the total boat capacity as that is already included. However, if bags are used that are not on the approved list, weight must be subtracted from the total allowable weight capacity for the boat. Weight distribution must also be considered. Exceeding the weight limits can lead to damage to the boat and contribute to more serious issues.

The tanks are filled and emptied by pumps that are controlled through the 15" display. See the *Dash and Displays* chapter of this manual for more details.

Be sure to empty the ballast tanks prior loading the boat onto the trailer and removing the boat from the water. Tanks **MUST** be empty prior to trailering the boat as the additional weight can cause damage to the trailer, tow vehicle and imbalance on the trailer that could affect safety or overload the trailer and cause damage that is not covered under warranty.

## ⚠ WARNING

Water in the ballast tanks should always be pumped out prior to removing the boat from the water. Never trailer the boat with water in the ballast tanks; residual water can cause an imbalance that alters the amount of weight on the trailer tongue. Without the proper weight percentage forward, the trailer tongue can become unstable and cause loss of control of the trailer and tow vehicle. Additionally, attempting to trailer your boat without the ballast tanks and/or bags emptied can overload the trailer and cause damage that is not covered under warranty.

When emptying the ballast tanks, watch the outlets on both sides of the boat and aft, depending on the model and number of outlets. If you are uncertain, check with your authorized Malibu dealer for assistance in determining the bilge outlets from the ballast outlets. Ballast pumps will continue working as long as the controller is on. Therefore, operators must ensure that the pumping is turned off when the outlets show only a minute amount of water is coming out. Leaving the pumps on will result in pump damage.

If the boat is equipped with additional ballast bags, Malibu recommends rechecking that the rear tanks are empty five (5) minutes after starting the drain process. This verifies that no extra water was left in the bags and has drained into the hard tanks.

*Models: All models are equipped with a ballast system, per the customer's order. Optional Plug n' Play plumbing must be part of the original order.*

## ⚠ CAUTION

All tanks must be emptied **BEFORE** the boat is loaded onto a trailer. It makes maneuvering much easier, plus it helps avoid damage to the trailer or the boat hull. Such damage is not covered under warranty.

## NOTICE

Boats that are going to be stored for more than a couple of weeks or prepared for winter must have all the water removed from the ballast tanks. Failure to do so can result in damage that is not covered under warranty.

## NOTICE

Ballast pumps must be turned **OFF** after emptying the tanks. When only a drizzle of water is coming from the outlets, manually turn **OFF** the ballast pumps via the 8" display. Allowing the ballast pumps to continue operating when there is no water to be pumped will result in the internal components being permanently damaged, which is not covered under warranty.

## Flushing the Ballast Tank System

### Prevent the Spread of Aquatic Invasive Species (AIS)

These procedures have been developed to help prevent the spread of aquatic invasive species, especially quagga and zebra mussels that attach and infest inside ski/wakeboard boat ballast tank systems. Flushing the system with hot water (120°F or greater) kill quagga and zebra mussel juveniles and larvae in seconds and protects water bodies from the many destructive invasive species that hitchhike on trailered watercraft. Finally, it enables boaters to comply with state and federal laws prohibiting the spread of quagga and zebra mussels. Failure to comply could result in the boat being impounded and the owner could be subject to criminal prosecution.

**In general, when a water body is known to be infested with invasive species:**

- Boats entering the water are not required to be inspected and cleaned.
- Boaters leaving the water should have their craft inspected, cleaned, and flushed according to these procedures (for ballast systems) and state/federal laws (for all boat and trailer requirements).


**When a water body is known to NOT be infested with invasive species:**

- Arriving boaters should be inspected according to state/federal laws (for all boat and trailer requirements) and these procedures (for ballast systems) before entering the water. If **ANY** mussel adults, juveniles or larvae are discovered, a complete cleaning of all equipment is required.
- Boats leaving the water are not required to be inspected and cleaned.
- Be sure to check state and federal laws and regulations to be sure you are complying with requirements when entering or exiting bodies of water known to be infested with invasive species.

### How To Flush (If Equipped With Ballast Flush System)

The boat may be equipped with a ballast flush system designed to completely flush the boat's entire ballast tank system, from the seacock to the thru-hull outlets, of potential Aquatic Invasive Species (AIS). The ballast flush system is controlled via the *Ballast Screen* on the 8" display—refer to the *Dash and Displays* chapter of this manual for more detailed information.

**Step 1:** Close all fill pump valves and remove T-handle.

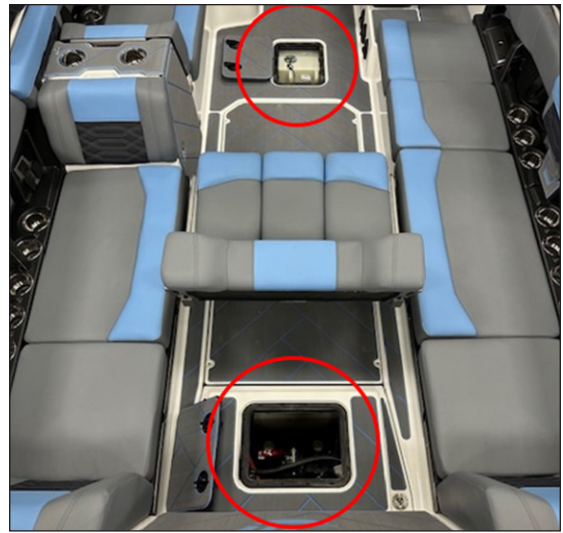

Fill pump valves and bilge T-handles are accessible through the fore and aft access panels (shown above, circled in red). Note: certain MY26 models (M230, M242) have **two (2)** fill pump valves for the center tank that must be closed before flushing the system.



1100 GPH Fill Pump Valve Handle.

2000 GPH Fill Pump Valve Handle.

**Step 2:** Connect the fresh water flush hose to the ballast flush kit port on the starboard side of the transom.



Ballast tank flush kit connection, located on starboard side of the transom.

**Step 3:** Turn on battery isolator switch (ISO) and power up the operating system.


**Step 4:** Turn on fresh water source.

- Note: Until the automatic flush sequence is initiated, flush water will bypass the system and drain into the center bilge



compartment, which can be useful for cleaning the interior surfaces of the bilge compartment if so desired. Once a tank is selected via the Ballast Screen, flush water will begin to fill the tank.

**Step 5:** On the 8" display, navigate to the automatic ballast system flush sequence controls (*Settings > Diagnostics > Ballast*).

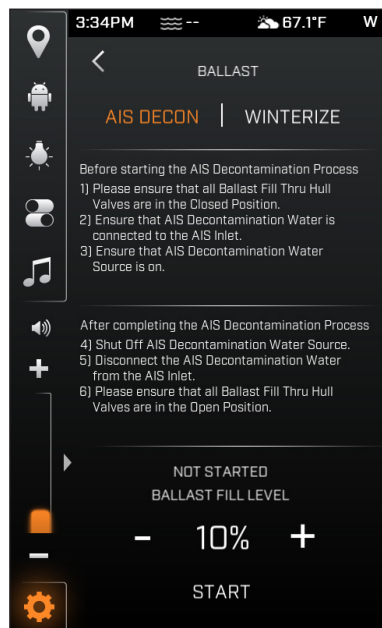

Use the (-) and (+) buttons to set the desired ballast fill level. **IMPORTANT: It is the responsibility of the operator to determine the appropriate fill level for AIS decontamination required by state and local laws.**

**Step 6:** Press *Start* to initiate the automatic flush sequence.

**Step 7:** Once the flush sequence is complete, shut off the flush water source and disconnect the flush hose from the flush kit port, allowing water in the system line to drain out.

*Note: It is possible that one or more tanks may not drain completely to zero percent during the automatic AIS flush sequence due to the angle of the boat on the trailer. If no change in water level is detected during the flush sequence, the tank drain pump will run for a maximum of two (2) minutes.*

**Step 8:** Open all fill pump valves.

**Step 9 (if winterizing):**

- **Step 9a:** Leave flush kit cap removed until completion of Step 9b.
- **Step 9b:** From the *Ballast Screen*, select *Winterization* to show the winterization flush sequence controls. Press *Start* to initiate the automatic winterization flush sequence.
- **Step 9c:** Once the flush sequence is complete, re-install flush kit cap.




**Step 9 (if NOT winterizing):** Re-install flush kit cap.

**Step 10:** Turn ISO to OFF and power down the operating system.


### How To Flush (If Not Equipped With Ballast Flush System)

Locate the thru-hull ports on the bottom of the boat upon arrival to the designated inspection/wash station.


See diagrams for model-specific thru-hull port locations:

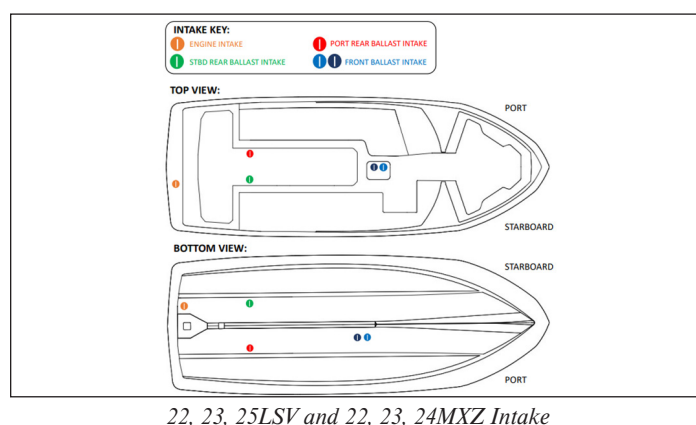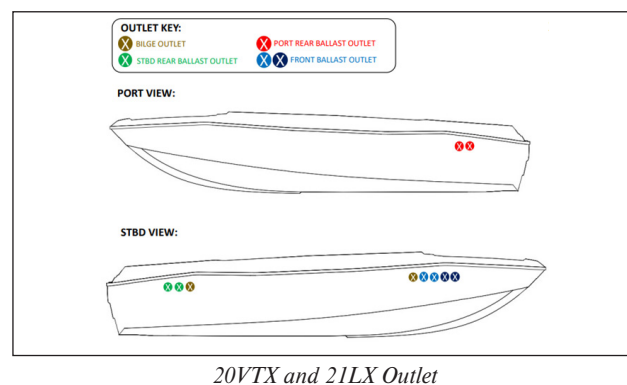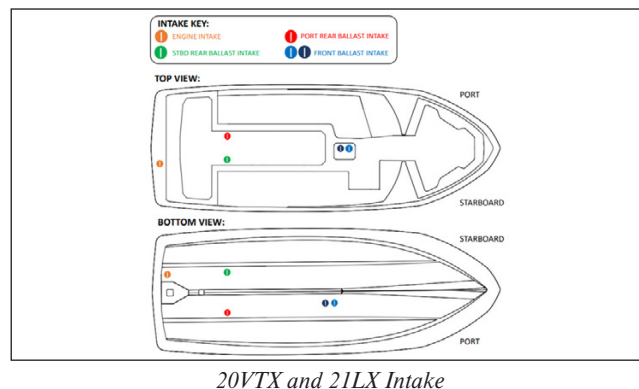




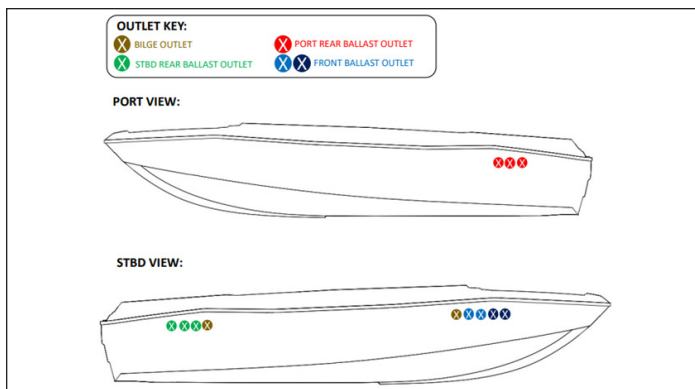


22, 23, 25LSV and 22, 23, 24MXZ Outlet

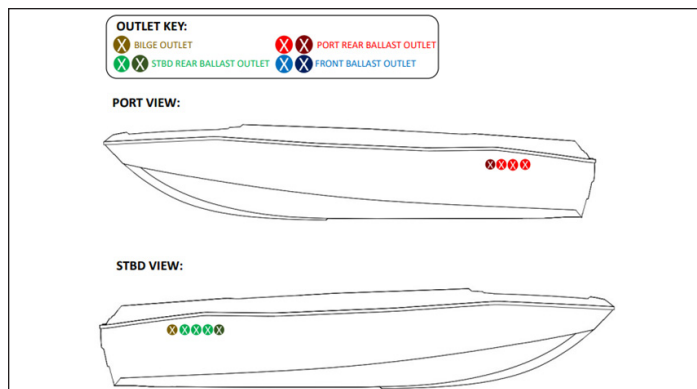


M230 and M242 Outlet (1/2)

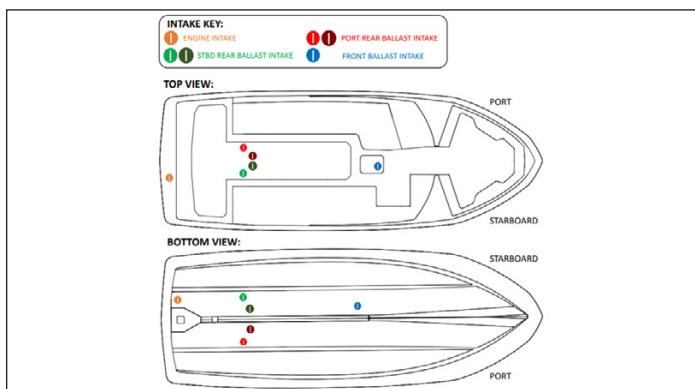

26LSV Intake

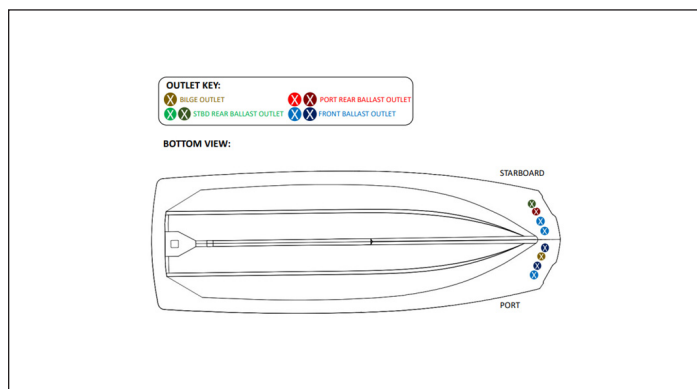

M230 and M242 Outlet (2/2)

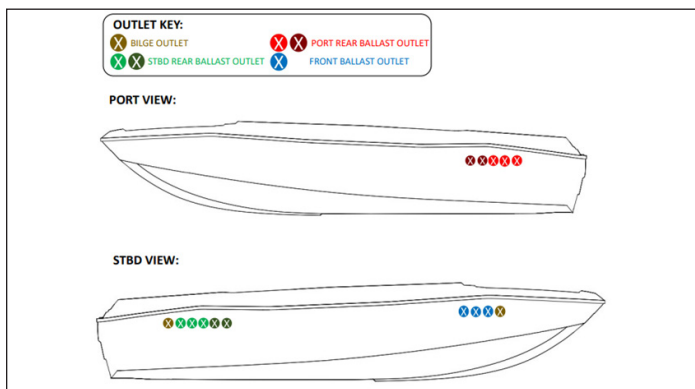


26LSV Outlet

- Fill each of these four (4) ports with hot water of at least 120°F. *Note: the M230 and M242 have six (6) ports to fill.*
- The corresponding ballast tank will completely fill with hot water and begin flowing out of the ports on the side of the boat.
- Allow the hot water to continually flow for 10-15 seconds before moving to the next port.
- After all four (4) locations have been successfully flushed for 10-15 seconds, the process is complete.

## Power Wedge III

The Power Wedge III has up to 1,500 pounds of wake-creating water displacement. The upward angle radically increases lift, allowing the driver to get a fully loaded boat on plane much more quickly. The Power Wedge III is teamed with Surf Gate to maximize the wake experience. The Power Wedge III is controlled through the 15" Display as explained in the *Dash and Displays* chapter of this manual. The Power Wedge can also be controlled by the optional rotary control knob offered in the Sport Package or the optional Surf Band. Because the water displacement affects how the boat handles, Malibu recommends practicing operations with the Power Wedge III and/or Surf Gate before deploying with riders/boarders/surfers behind the boat.

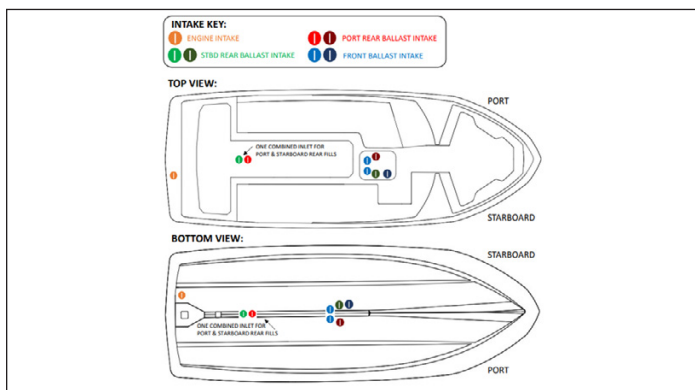

M242 Intake

The Power Wedge will not return to the Stow position unless the boat speed is above one (1) mph and below ten (10) mph. Always verify there is no person or object around the Power Wedge while it is stowing. If an object is obstructing the process, damage or injury could occur if caught between the wedge and the transom. The Power Wedge III has a pressure relief valve to allow the wedge to move manually and freely in the event of a fault. Information on how to use the pressure relief valve is provided in the *Care and Maintenance* chapter of this manual.

**Note that the Power Wedge III should always be retracted when not in use.**

## NOTICE

Never stand or sit on the Power Wedge plate or place objects on it. Never use the Power Wedge to mount the transom. The Power Wedge cannot sustain added weight on it, and subsequent damage to the Power Wedge or transom of the boat as a result will not be covered under warranty. Do not boat in shallow water, load the boat on the trailer or tow with the Power Wedge in the lowered position as it can cause damage to the Power Wedge that is not covered under warranty.

*Models: The Power Wedge III is available as option on most models and standard on a few.*

## Surf Gate®

Surf Gate, especially when teamed with the Power Wedge III, offers the most innovative wake production in the industry. As with the Power Wedge III, control of the two transom-mounted gates is through the 15" Display as explained in the *Dash and Displays* chapter of this manual. The Surf Gates can also be controlled by the optional rotary control knob offered in the Sport Dash or the Surf Band.

The gates are controlled by selecting the desired surf side of the boat (port/left or starboard/right). When a gate is deployed, the actual desired surf wake will be created on the opposite side of the boat. For example, when the left wake is desired, select the left arrow; the right/starboard gate will be the gate that will deploy. The gate will deploy only between the speeds of nine (9) mph and fifteen (15) mph. If a Surf Transfer is initiated, there is a tone played through the tower speakers that signals to boarders/surfers when the surf wake is about to transfer from one side to the other. This will only happen if tower speakers are equipped, and the stereo is powered on. There is also an indicator light, offered with the optional tower light package, that will also indicate the surf wake is transferring. This can be deactivated as explained in the *Dash and Displays* chapter of this manual.

Never place objects on a Surf Gate or try to use a gate

to support a person's weight. The Surf Gates are not manufactured or mounted to accept additional weight.

**The Surf Gates should always be retracted when not in use.**

*Models: The Surf Gates are optional on most models and standard on a few.*

## ⚠ WARNING

Always pay attention to how the weight is distributed in the boat, particularly when engaged in water sports. Too much ballast, gate, and passengers to one side of the boat could create an unstable condition that could create an unsafe situation for all. Even in making waves, care must be taken to put safe operation first.

## NOTICE

Never add any weight to a Surf Gate, nor use one to hold a person's weight. The Surf Gate cannot sustain added weight on it, and subsequent damage to the Surf Gate or transom of the boat as a result will not be covered under warranty.

## Underwater Gear

Beneath the boat are several critical components for the proper and safe operation of the boat. In general, consumers do not have to give these items attention beyond routine checks and maintenance, but if any of them are damaged, it can result in a truncated outing.

## Rudder

The rudder is part of the steering system. The steering wheel turns the rudder in the direction that the driver wishes to steer. More information about the steering system is available in the *Starting and Operation* section of *Get Ready* in this manual. Note that the rudder extends below the hull of the boat. This is critical to remember when boating in shallow water or water with obstructions. Even if the water appears deep enough for the hull, it may not be deep enough for the rudder to pass unimpeded.

## NOTICE

Do not operate the boat in water too shallow for the rudder to operate. Obstructions can also damage the rudder, rendering it inoperable. Such damage is not covered under warranty.

---

## Fins

The fins add tracking stability. As with the rudder, they extend below the hull and should be considered when boating in shallow water.

---

## Struts and Strut Housing

The strut and strut housing are fitted from the drivetrain to the propeller to create the propulsion that moves the boat forward and aft. As with the rudder, these components extend below the hull. Operation in water that is too shallow or among obstructions can damage the components and make it impossible to continue boating.

## NOTICE

Do not operate the boat in water too shallow for the strut, strut housing, and propeller to operate. Obstructions can also damage these components, rendering them inoperable. Such damage is not covered under warranty.

---

## Propeller

Different conditions, including altitude or specific characteristics of individual bodies of water can impact boating enjoyment. If environmental conditions are suspected of negatively impacting performance, discuss this with an authorized Malibu dealer, who may be able to recommend minor changes to the propeller, or replacement of a propeller at the consumer's choice and expense, that will improve circumstances for that application. There are limits to changes that are approved by Malibu engineers. Changes that exceed those standards will void the warranty. Extreme changes can also alter the safe handling of the boat and its maneuverability.

## ⚠ DANGER

Care must be taken to avoid being in the water forward or aft of the boat when the engine is running, even if the boat is not in a moving gear. If the shifter/throttle goes into gear, there may not be time for people to get out of the way. Propeller edges are sharp. With motion, propellers can maim or become lethal.

## NOTICE

Consumers may choose to change characteristics of propellers or even replace them. Malibu recommends doing so only after consulting with an authorized Malibu dealer as exceeding Malibu standards for the propulsion system will void the warranty.

**Never allow anyone to be in the water forward of the bow or behind the boat when the boat engine is running, even if the boat is in neutral gear. If the shifter/throttle is inadvertently put into gear, the boat could potentially run over persons in the water. A moving propeller is extremely dangerous and could cause serious injury or death.**

---

## Raw Water Intake / Sea Strainer



*Sea Strainer, M5/M6.*

*Sea Strainer, LT4.*

The raw water intake brings water out of the body of water for cooling circulation in the engine. It is circulated and returned to the body of water via the exhaust system.

The raw water intake/sea strainer must always be free of debris. Any boating that takes place in brackish water or water with flora should be interrupted periodically to be certain that no weeds have become tangled with anything under the hull. See the *Care and Maintenance* chapter in this manual for information on how to access and inspect the sea strainer using the sea strainer removal tool located on the aft starboard engine closeout.

## NOTICE

Debris in the body of water, including naturally occurring vegetation, can become entwined with the components under the hull. This can result in damage to the boat, particularly if the debris interferes with the raw water intake, starving the drivetrain of necessary cooling water. Such damage is not covered under warranty.

---

## Stern Turn

The stern turn (limited availability as an option) is a

propulsion device to aid in safer docking. Maneuvering in tight locations is easier by allowing the operator to turn the boat to port or starboard without forward motion. The thruster is operated by a switch on the shifter/throttle.

The stern turn should be operated only when the engine is running. Push the rocker switch on the handle UP to direct water out of the starboard side of the tunnel, which causes the boat stern to move to port. Pushing the rocker switch on the handle DOWN will direct water out of the port side of the tunnel, pushing the stern to the starboard side.

## Shower



The shower control panel is in the starboard motor-well storage area. The panel has an ON-OFF toggle switch. In the ON position, the knob rotates to the left for more hot water, and to the right to add colder water to the mix.

The shower nozzle pulls out of the deck at the transom. Twist the nozzle counterclockwise to start the stream of water. When finished showering, twist the shower nozzle clockwise to turn it off and return it to its retracted position. Reset the shower control knob to the center and then turn OFF the switch.

Note that the hot water comes from the engine manifold, and the cold water is brought on board through the starboard rear ballast tank's fill pump. The hoses connect to a pump that is located inside the engine compartment, aft of the engine and secured to the transom. The shower wand/nozzle connects to that pump.

Leaving the shower running can result in extra water intruding into the bilge compartment. This can cause issues that are addressed in detail in the *Bilge* information provided in this chapter of this manual. Please review that information prior to using the shower, especially the first time.

Extended use of the shower can also result in excessive discharge from the battery, which could leave the boat nonoperational, and could potentially damage the bilge pump, rendering it nonoperational. If the bilge pump does not operate, excessive water in the bilge system could sink the boat.

Showers should be as brief as possible. To have hot/warm water available, the engine must run, but as noted in many sections of this manual, the engine has carbon monoxide as a byproduct of running the engine for any period. The exhaust gases are released from the transom area, but even when released below the water line, those gases will work their way to the surface. The danger of breathing carbon monoxide fumes is addressed throughout this manual and should be viewed with the utmost caution by everyone onboard.

*Models: Available on all models except 21LX.*

## Engine Flush Kit

The engine flush kit is standard on all boats and is used to clean out the raw water pickup and operational areas of the engine. The kit attachment is located on the **port** side of the transom.

**NOTE:** The engine flush kit is distinct from the optional ballast system flush kit, which, if equipped, is located on the starboard side of the transom.

Before every outing, inspect the engine flush kit cap to ensure that it is tight. If the cap is not tight, it will inhale air, which could damage the cooling system. Such damage is not covered under warranty. Refer to the *Engine Flush Kit* section in the *Care and Maintenance* chapter of this manual for more information on how to use this feature.

### **⚠ DANGER**

Avoid running the boat's engine, if possible, while anyone is on the swim board or sun pad. Exhaust fumes are emitted from beneath the swim platform and the odorless, colorless carbon monoxide can sicken or kill before individuals are aware there is danger. If water for the shower needs to be heated, run the boat engine as briefly as possible, and shower quickly. NEVER shower for lengthy periods of time as one might onshore. Move away from the swim board and/or sun pad as soon as the shower is turned off and stowed, to allow time for the fumes to dissipate.

### **⚠ DANGER**

Even if people are not on the sun pad or swim board to avoid CO fumes, do not leave the shower running. Turn off as soon as possible. Leaving the shower running can result in damage to the pump, which is not covered under warranty. Excess water in the bilge system as a result could also swamp the boat, resulting in sinking, which could endanger the lives of all on board.




## NOTICE

The flush kit switch should ALWAYS be in the OFF position when there is no water in the tank. Allowing the pump to run without water can result in damage to the system, which is not covered under warranty.

## NOTICE

Ensure the flush kit cap is secure prior to every outing. If it is not, air can be introduced into the cooling system, resulting in damage that is not covered under warranty.

### Swim Board and Flip Step

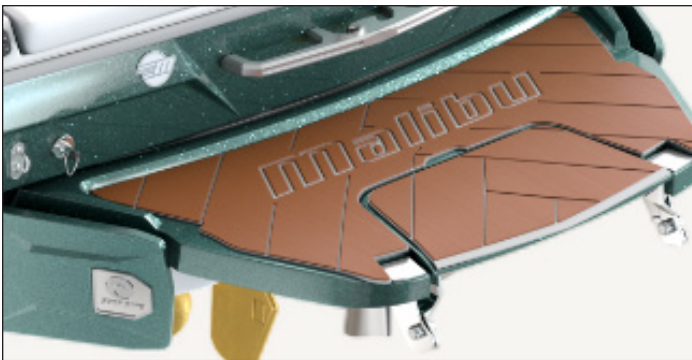

The swim board provides additional enjoyment of the Malibu experience. While the swim board, along with the optional flip-down step, can ease movement in and out of the water, Malibu reminds users to exercise caution. When jumping off the boat, always be certain that there is sufficient depth. Appearances can be deceptive, especially in clear water. Although the swim board is constructed with anti-skid properties, it is still the responsibility of users to use care when walking on it, using it to get on board, using it to get into the cockpit, standing or sitting on the swim board.

As noted multiple times throughout this manual, never allow anyone to be on the swim board when the engine is running, due to exhaust fumes.

Be certain the optional flip step is properly stowed before operating the boat. The flip step should be down (and usable) only when the boat is anchored or stationary. To use the flip step, pull the lever beneath the starboard side of the stepdown to release the step. Take care not to pinch fingers in the apparatus when opening or closing. Additional information regarding the routine maintenance of the swim board is available in the *Care and Maintenance* chapter of this manual.

*Models: All Malibu boats are equipped with a swim board. The flip step is an option on most Malibu boats.*

## ⚠ DANGER

Never allow anyone to be on the swim board when the engine is running, even at idle. Exhaust fumes can quickly overcome individuals, leading to serious injury or death. More information is available in the *Safety* chapter of this manual.

## ⚠ WARNING

Care should always be taken when entering or exiting the boat. The flip step on the swim board is the recommended egress when the boat is launched in water, and they should be used ONLY when the boat is stopped, and the engine is OFF. Even in instances when the boat is idling out-of-gear, an accidental engagement of the throttle into gear could result in serious injury or death to anyone entering or exiting the boat if the individual comes into contact with any of the underwater gear. Using the gunnels for egress is highly discouraged under any circumstances.

## ⚠ WARNING

Exercise care when deploying the swim step. Under no circumstances should anyone be standing, sitting, or laying on the step while it is in operation. In addition to possibly damaging equipment, persons on the flip step are subject to serious injury from pinching or falling. Prior to operating the flip step, the user needs to confirm that everyone's hands or feet are clear of the step's mechanical components.

## ⚠ WARNING

Use care when accessing the flip step to avoid pinching yourself or someone else in the apparatus or falling on the step, which could result in injury.

## ⚠ WARNING

The flip step must be in the stowed position whenever the boat is underway.

---

## Powered Swim Step



With a touch of a button located on the boat's transom, users can deploy the powered swim step to allow ease of movement into and out of the water.

---

### Operation

To store the step, press and hold the Up button. Hold the Up button beyond when the step stops moving and until the actuator stops making noise. It has an internal limit switch that if not activated the warning banner will be displayed on the 15" display at the helm when the boat exceeds 8 mph.

The swim step is only operational while the Up or Down button is being depressed. For added safety, the powered swim step can be locked out at the helm breaker panel.

When the button is fully depressed, the power swim step is operational. When the button is released then the power step is locked out. However, the power step can still be deployed manually (see *In Case of Emergency* below) while in locked-out mode. When transporting your boat, the powered swim step should be in the stowed position.

---

### Care and Maintenance

Along with the routine care and maintenance outlined in the *Care and Maintenance* chapter of this manual, Malibu recommends that anti-seize grease be applied to the gears of the powered swim step annually.


---

### In Case of Emergency

If you experience a loss of power to your boat or failure of the powered swim step actuator, the powered swim step can still be deployed or stowed manually.

To deploy the swim step, remove the wire locking clevis pin from behind the actuator (Fig. 3 following), deploy the swim step by pushing or pulling it into place (being careful not to pinch your fingers in the moving parts), and place the clevis pin in the hole located on the starboard swim step bracket (Fig. 4 following). To stow the swim step, reverse the procedure by removing the wire-locking clevis pin from the swim step bracket, push the swim step up to the stowed position, and replace the clevis pin in the swim step bracket.

Note: When the wire-locking clevis pin is removed, the actuator will lower slightly. For this reason, Malibu recommends that you **DO NOT** operate your boat at speeds in excess of ten (10) mph until repaired by an authorized Malibu dealer. Failure to operate at speeds below ten (10) mph may result in damage to the boat that may not be covered under warranty.

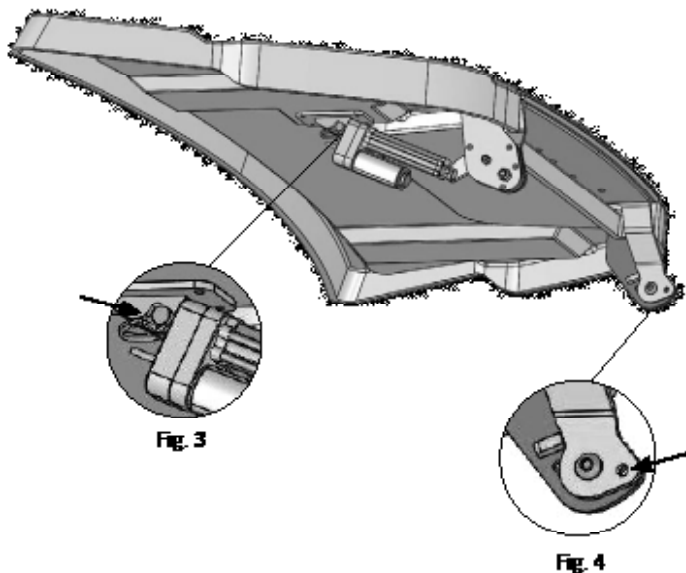

---

## SALTWATER SERIES

**IMPORTANT:** Review the information that appears in the *Care and Maintenance* chapter of this manual for specifics regarding the proper maintenance to reduce corrosion damage to boats operated in salt or brackish water.

The Saltwater Series is a package available that ensures the appropriate options for salt/brackish operation are met in a single package rather than having to order these components separately.

Boats that will be operated in saltwater—or brackish fresh water—require several alterations to ensure that they will continue to operate properly. While care and maintenance are critical for all boats, those that are run in saltwater require even more attention to detail.

Salt or polluted fresh water can quickly damage the boat, including corrosion that may result in a serious threat to the well-being of boaters.

## ⚠ WARNING

Boats that have been operated in polluted fresh water or salt water should be thoroughly rinsed with clean, fresh water after an outing. The corrosive properties of saltwater can cause damage that is not covered under warranty. Hardware that is damaged by brackish or salt water can eventually fail, which could cause malfunction of the hardware, even hardware chosen for its anti-corrosive properties, and/or the components that are held in place by the hardware, which could result in serious injury or death to persons onboard.

Among the components that are changed or adjusted for operation in salt water during construction are:

- stainless steel gas shocks;
- grounding and bonding of all components below waterline;
- the addition of sacrificial zinc anodes.

One of the most important saltwater components is the sacrificial zinc anodes. These are attached to the exterior of the boat, below the water line.



The purpose of an anode is to be sacrificial. There is a greater degree of attraction between the anode's metal and the corrosive action of the saltwater than between the boat's metal parts and the water. In the most simplistic terms, both rust (oxidation) and metal reduction are the effects of operating in saltwater. To reduce these naturally occurring results on boat components, the sacrificial anodes attract and reduce most of the effects.

***Important Note: The sacrificial zinc anode does not eliminate the corrosion process. Therefore, it is important to flush and rinse the boat after use.***

As part of the routine maintenance, regularly check the anodes, which are located on the transom, driveshaft, and rudder, where equipped. Verify with your authorized Malibu dealer the appropriate reduction at which it is time to replace the anode.

*Models: Available on all models.*

## NOTICE

Reduction of the sacrificial zinc anode because of operation in brackish fresh water or salt water conditions is normal as it protects to some degree the rest of the boat. Replacement of the anode is considered part of the routine maintenance procedure and is not covered under warranty.

## Reporting Safety Defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Malibu Boats, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Malibu Boats, LLC.

To contact NHTSA, you may call the vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY:1-800-424-9153); go to <http://nhtsa.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue SE, Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

## MALIBU TRAILER

### Legal Requirements for Towing

Be aware that many state and local jurisdictions in North America have specific laws and/or ordinances regarding towing. As the owner and/or operator, it is your responsibility to research and become familiar with specific requirements that are in effect in the areas in which the trailer will be operated, especially if you are unfamiliar with the area.

Law enforcement officers will expect you to have knowledge of applicable laws and ordinances. Laws can cover, but are not limited to, such components and matters as lights, brakes, safety cables, driver's license requirements, trailer licenses and permits, and overall size. Such information may be found online or by contacting the area-specific motor vehicle office.

Some areas may also have insurance requirements. Determine whether the owner must carry liability insurance specifically for towing. If the boat and/or trailer are financed, the financing lender may also require full coverage.

It is the owner's responsibility to obtain insurance if required; it is the operator's responsibility to verify that all required insurance documentation is current and on-hand when operating. Malibu Trailers does not assume any responsibility for the owner and/or operator's knowledge and confirmation that the requirements have been met.

### Basic Safety Rules

Make sure you understand all operating instructions prior to attempting to operate the trailer. Accidents are generally caused by the operator's failure to follow basic safety rules or written precautions. Most accidents can be avoided if the operator is completely familiar with the trailer and its

operation, follows recommended practices, and is able to recognize and avoid potentially hazardous situations.

**Prior to operation of the trailer, Malibu strongly encourages all operators (including non-owners) to:**

1. read all available safety material,
2. become familiar with laws and ordinances pertaining to towing within any applicable jurisdictions,
3. research insurance requirements and, if necessary, fully insure the trailer and boat, and
4. review the tow vehicle's owner's manual.

Failure to observe the safety recommendations contained in this manual may result in severe personal injury or death to you or to others. Use caution and common sense when trailering—avoid taking unnecessary chances.

## CONNECTION TO THE TOW VEHICLE

### Preparation

#### WARNING

Never tow the trailer and contents, including the boat, behind a vehicle that is not rated to tow the vehicle's specified GVWR weight.

The Gross Vehicle Weight Rating (GVWR) is the total estimated weight that a road vehicle loaded to capacity (including the vehicle weight itself) can be expected to tow safely. This includes the trailer, boat engine, any liquids including fuel, and items carried on and in the tow vehicle and the boat. This is a maximum established by federal mandate and enforced by law enforcement authorities.

Overloaded capacity can cause the trailer to disengage from the hitch, which could result in serious injury or death, in addition to damage that is not covered under warranty.



On the left front side of the trailer is a certification label that shows the maximum load-carrying capacity of the trailer. The GVWR will be indicated on this label.



Many truck stops offer complimentary weigh scales. If you are not able to locate scales or compute the total GVWR from the individual components being towed, contact the area's motor vehicle office for assistance in finding scales.

## ⚠ WARNING

Prior to towing, remove all wakeboards and skis from above the boat deck (i.e., from the tower). Even with careful attachment to the racks, these paraphernalia can disconnect and become projectiles that threaten people and other vehicles.

## ⚠ WARNING

Never tow with water in the ballast or bilge systems! All water must be released prior to loading the boat on the trailer. Water onboard can cause the trailer to be improperly balanced, increasing the likelihood of an accident due to loss of control, especially when there is insufficient percentage of weight at the tongue and hitch.

## Trailer Hitch

A **weight-carrying** hitch should be used for towing the trailer. No other hitch type meets the requirements for safely operating the trailer. Additionally, the tow vehicle may have specific hitch requirements; verify by reading the tow vehicle's owner's manual.

Hitch up with the trailer in a level position relative to the tow vehicle. Note that attempting to tow with a trailer that is not level across the length of the trailer could either cause the brakes to prematurely activate or not activate at all, potentially causing a loss of control. If the hitch height is incorrect and does not allow the trailer to be level, it may be necessary to install air-pressure adjustable shock absorbers on the tow vehicle.

In general, for Class 4 rigs, (5,000-10,000 lbs.) a ball of 2" or 2-5/16" is required.

## Safety Cables



The trailer's safety cables can prevent the trailer from totally disengaging from the hitch. If it becomes necessary to replace the cables, ensure that the replacement cables:

- meet the Society of Automotive Engineers (SAE) J684 standard for trailer hitching and coupling and
- match or exceed the trailer's GVWR.

Cables must be as centrally attached as possible to the bumper or frame of the tow vehicle. The hitch should provide a location through which the safety cables can be attached, either holes or rings on both sides of the hitch ball.

Most states require that the safety cables should be crisscrossed under the trailer tongue prior to being secured to the other hole or ring location. If the trailer disengages, these cables should prevent the trailer tongue from falling onto the tow surface.


The safety cables should be attached as tautly as possible, but still allow for turning, including close quarters turns.

A truck or van with a step bumper requires an eyebolt or equivalent safety cable attachment in compliance with the Society of Automotive Engineers: SAE J684 Standard. Refer to the tow vehicle's owner's manual for additional details. (This is critical as some tow vehicle's safety cable attachments may be too small.)

## ⚠ WARNING

Safety cables and the breakaway cable must be securely attached to the tow vehicle, while allowing for turns. Failure to do so could result in serious injury or death, as well as property damage to other persons and vehicles on the road if the trailer becomes disengaged from the tow vehicle.

## Breakaway Cable

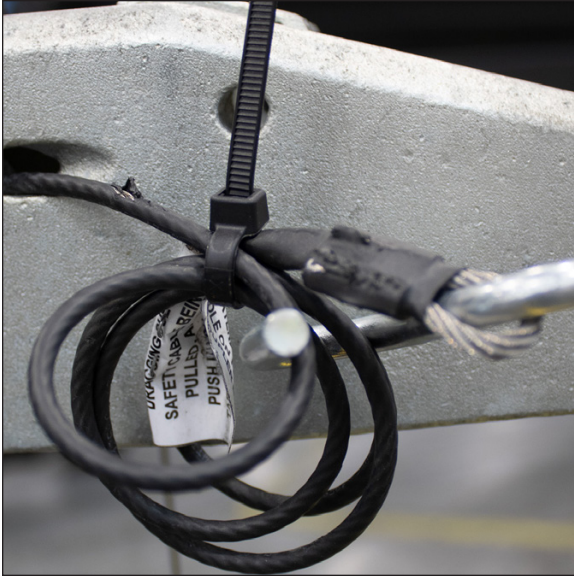

In addition to safety cables, the trailer is also equipped with a surge brake breakaway cable. The breakaway cable should be attached as tautly as possible but still allow for turning, including close quarters turns. The breakaway cable should **NEVER** be used as a substitute for braking or as a parking brake.

### ⚠ WARNING

Note that if the breakaway cable has been engaged—even slightly, as can happen when the trailer is disengaged from the tow vehicle and the cable is tripped over—it can cause the cable clip to break. If the cable clip is broken or missing, the breakaway cable cannot operate properly. Such failure could result in serious injury or death.



*Example of a broken clip.*

If the cable clip is missing or broken, first check and attempt to release the emergency brake mechanism by pressing up on the brake release tab under the actuator nose, right behind the tow ball insert location.

- If you hear a metallic clunk or sound of a spring releasing, that means the emergency brake mechanism had previously been engaged.
- If the brake release tab freely moves up and down, i.e., with just the resistance of its spring, then the emergency brake system was likely not previously engaged.

Be sure the emergency brake mechanism is not engaged prior to towing. If the clip is broken, both the cable and clip must be replaced, and the actuator checked for proper function. Your authorized Malibu dealer can obtain a cable replacement kit specific to the actuator model for the trailer.

## Weight Distribution

Between 5 to 10 percent (5%–10%) of the total weight on the trailer must rest at the coupling ball when the tongue is parallel to the ground. This determination can be made with a vehicle scale, often available at truck stops on a complimentary basis. If you are not able to locate a scale, contact the local motor vehicle office for assistance.

To find the percentage of the total trailer weight on the coupling ball, perform the following steps:

1. Weigh the tow vehicle with the trailer connected, making sure the trailer wheels do not touch the scale. Record the scale reading. ( $W_{VC}$ )
2. Pull forward and weigh the complete tow package—tow vehicle, trailer, and boat. Record the scale reading. ( $W_T$ )
3. Disconnect the trailer and weigh the tow vehicle alone. Record the scale reading. ( $W_{VA}$ )
4. Compute the percentage:

$$W_{VC \text{ (Vehicle, connected)}} - W_{VA \text{ (Vehicle, alone)}} = W_{TG \text{ (Tongue)}}$$

$$\% \text{ (percentage of total weight at tongue)} = (W_{TG \text{ (Tongue)}} \div W_{T \text{ (Total)}}) \times 100$$

### ⚠ WARNING

Failure to properly distribute weight in the boat and across the trailer can result in the trailer fishtailing (swaying from side-to-side) in a dangerous fashion that puts not only the total rig at risk but also other vehicles and persons on the road. Adequate download on the hitch ball is critical!

# HOW TO CONNECT TO THE TOW VEHICLE

## Connecting to the Tow Vehicle

1. Before attempting to connect, ensure that both the trailer and tow vehicle are positioned on as level ground as possible. Then, chock the trailer tires to help prevent the trailer from unintentionally moving.
  - i. Inspect the ground and use the level located on the frame to determine which direction the trailer is most likely roll toward, i.e. downhill.
  - ii. If the front of the trailer is inclined slightly downhill, wedge chocks firmly behind the *front* tires of the trailer; if the rear of the trailer is inclined slightly downhill, chock the *rear* tires.
  - iii. **NOTE:** If the trailer and/or tow vehicle are not level, e.g., on a hill, the coupler mechanism may not properly close over the hitch ball.
2. Open the coupler mechanism. To open the coupler:
  - i. Remove the hitch pin from the hole or ring in the side of the coupler.
  - ii. While holding the button (if equipped), raise the handle.



*Coupler from above.*

*Coupler from below.*

3. Back the tow vehicle **SLOWLY** up to the trailer and position the hitch ball under the coupler.
  - i. If necessary, use the trailer jack to adjust the trailer coupler's height to just above the hitch ball. Hitch **ONLY** to a ball that is sized properly for the coupler—the ball size is stamped on top of the actuator housing.
  - ii. As you maneuver the hitch ball into position, it can be helpful to use the tow vehicle's back-up camera (if equipped) and/or ask a second person—standing in a safe position—to offer hand signals.
4. Lower the coupler onto the hitch ball, then close the coupler mechanism. To close the coupler:
  - i. Close the handle, listening for an audible sound from

the mechanism. If you do not hear a sound or if the handle does not close easily, the hitch ball may be the wrong size or not properly seated within the socket. **DO NOT FORCE** the handle to close.

- ii. Ensure the hitch pin fits easily into the hole; if it does not, then the latch is not completely closed. Double-check that the hitch pin is properly inserted and the coupler handle is secure. If the hitch pin is damaged or lost, replace it prior to operating the rig.
5. Cross the safety cables under the coupling—allowing just enough slack to enable turning when the rig is in operation—and attach the trailer's breakaway cable to the tow vehicle.
6. Connect the trailer's seven-wire connector to the tow vehicle's seven-wire connector and verify that the lights are working correctly. (See *Trailer Components and How They Function* section of this chapter).
7. Before moving the rig, be sure to remove all chocks from behind and/or in front of the trailer tires.

## ⚠ WARNING

When using a second person to assist in the backing up process to hitch the trailer to the tow vehicle, always watch in your mirror. Do not allow the person to stand between the tow vehicle and the trailer, as they can be struck by the vehicle or caught between the tow vehicle and the trailer. Such activity requires common sense and care to avoid injury.

## NOTICE

Never move the trailer toward the tow vehicle. When the trailer is not fully hitched up, the brakes are not operational.

## ⚠ WARNING

The hitch pin must be properly installed and secure prior to operation. Never operate without the hitch pin, as the trailer and contents can become disengaged from the tow vehicle, which may result in an accident or damage that causes serious injury or death.

## ⚠ WARNING

Never tow with the coupler handle open or partially open. If the handle will not remain closed, go back through the steps to ensure that it will close and stay closed. If you are unable to get the system to perform correctly, see an authorized Malibu dealer for assistance. Failure to secure the coupler secure could result in the trailer disengaging, which could lead to serious injury or even death.



## Disconnecting from the Tow Vehicle

1. As in Step 1 of *Connecting to the Tow Vehicle*, position the trailer and tow vehicle on as level ground as possible, identify which end of the trailer is most downhill, then chock the tires accordingly.
2. Reverse Steps 2–7 of *Connecting to the Tow Vehicle*. Leave safety cables attached until the trailer is completely disconnected.

### ⚠ CAUTION

The trailer requires a seven-pin connector. Some older tow vehicles may have a five-pin connector instead of a seven-pin connector. An adapter is available through the tow vehicle's manufacturer. This is required to allow the back-up lights and solenoid to operate correctly. Failure to ensure that the entire lighting system on the trailer is operating correctly can mean that other vehicles following or in the vicinity of the rig may not be alerted when you shift into reverse. This could lead to vehicle damage or injury.

### ⚠ WARNING

Late-model tow vehicles are usually equipped with a sensor that reports when the trailer lights have been connected to the tow vehicle's connector. However, the LED light on the trailer sometimes does not pull a sufficient load on the tow vehicle's electrical system to register. This situation can be simply remedied by the tow vehicle's dealership.

## LOADING THE BOAT

### Trailer Winch



The trailer winch is a manually operated device to assist loading the boat onto the trailer and maintaining it in position for proper towing. The following information is important in assuring control and protection for you and the boat:

- **Inspect the winch prior to every use.** Never use the winch if there is any sign of damage. Your authorized Malibu Trailer dealer can assist you in repairs.
- **Firmly grip and hold on to the winch handle when the handle is not locked!** Letting go can cause the handle to spin wildly out of control if there is tension on the line. Lock the ratchet lever on the winch any time you will not be using it to load or unload the boat.

### ⚠ WARNING

Failure to lock the ratchet lever on the winch when the boat is being loaded or unloaded, or when there is tension on the line, can result in loss of control and spinning of the handle, which could result in serious injury. Also, the boat could slip off the trailer and cause damage, which is not covered under warranty.

- **The winch will have a rated capacity, which must not be exceeded.** This includes the weight of all items onboard. Water in the ballast and bilge systems should be released prior to loading to avoid exceeding weight limits.
- **The winch should not be fully extended prior to loading.** To operate properly, leave at least a couple of turns of strap on the winch.
- **The boat should be partially loaded on the partially submerged trailer by engine power.** More on this technique is explained later in this section. Using the winch as the sole loading method puts undue strain on the winch strap and results in excessive wear.
- **Check the straps prior to each loading.** The straps will wear with age, use, and exposure to the elements. Because of the importance in holding the boat secure for loading, unloading, and towing, never use worn straps. If you require replacement straps, please contact an authorized Malibu dealer.
- **Regularly lubricate the winch gears with a heavy-duty, marine-grade grease.** This allows for continued proper operation and will help in the ease of operating the handle as well.
- **Attach the winch to the bow eye on the boat for loading.** The winch should never be attached to any other component of the boat.
- **Do not rely on the winch to be the only manner in which the boat is held on the trailer.** Use all other tie-downs as described in this section. The winch is insufficient to hold the boat in place.



## ⚠ WARNING

Attaching the winch to any component of the boat other than the bow eye, and attempting to load the boat, can result in damage to the boat, which may result in serious injury or death. This is not covered under warranty.

## Tie-Downs



For additional security while towing, the trailer may optionally be equipped with ratchet-style tie-downs that can be attached to certain points—called *eyes*—on your boat.

The location(s) of tie-down attachment points vary by boat model; consult the *Quick Reference Guide* chapter of this manual or ask your authorized Malibu dealer to determine your boat's exact configuration.

Before operating tie-downs, seek instruction for the proper way in which to tie or hitch the lines for both a more secure boat and ease of unloading.

## TRAILER COMPONENTS AND HOW THEY FUNCTION

### Trailer Jack



The trailer is equipped with a trailer jack designed to hold and lift the trailer into position for lowering on the hitch ball of the tow vehicle. The jack is also useful for assisting and balancing whenever the trailer is free of the tow vehicle.

The trailer is also equipped with a level, located on the frame behind the jack, to help ensure the boat is level prior to towing.

Before placing *any* kind of load on the trailer jack:

- rotate the trailer jack so that it is vertical,
- then snap the locking pin.

Always retract and rotate the trailer jack back into the horizontal position before stowing or towing.

## ⚠ WARNING

Snap the locking pin on the trailer jack prior to placing any kind of load on the jack. Failure to do so could result in the trailer jack collapsing or otherwise failing, which could lead to serious injury or death.

## NOTICE

Failure to properly stow the trailer jack in a horizontal position and lock it in place could result in damage to the jack or other trailer components that is not covered under warranty.

Periodically lubricate the drive gear, rack-and-pinion mechanism, wheel bearings, and coaster of the trailer jack with a marine-grade grease to ensure these components continue to function as designed.

### Removable Guide Poles

The trailer is equipped with removable guide poles. Located on each side of the trailer, the guide poles help the operator assess the total width of the rig when operating the trailer, especially when backing up and/or parking the trailer and boat inside/under shelter such as a garage.

Please note that, depending upon the jurisdiction in which the trailer is being operated, you may need to remove the guide poles whenever the trailer is in transit. **It is the responsibility of the operator to determine whether the total width of the trailer at the guide poles exceeds legal limits and, if necessary, remove the guide poles.**

The poles are secured to the trailer with quick-release pins. When the guide poles are removed, the poles and pins must be stored in a clean, dry location that can be readily accessed by the operator.

## Lights



The trailer is equipped with running lights, brake lights, and, optionally, landing lights.

Prior to each use of the trailer, verify:

- proper function of **ALL** lights and
- that the ground wire (white) at the trailer tongue is properly connected to the tow vehicle's wiring harness.

If the trailer is equipped with the optional landing lights, be sure that the landing lights are **OFF** when operating the trailer on highways and public roads, as operation of the landing lights over the road is illegal in some jurisdictions.

If the exterior lens cover of any of the trailer's lights is damaged or broken, the entire one-piece unit will need to be replaced by an authorized Malibu dealer.

### ⚠ WARNING

**NEVER** operate the trailer, even during daylight, without verifying proper function of the trailer's brake lights. It is critical that traffic following the rig can see the brake lights on the trailer whenever the rig is slowing and/or stopping.

### ⚠ WARNING

Most jurisdictions require trailers to be equipped with running lights for use in low-visibility conditions (night, rain, fog, etc.). **NEVER** operate the trailer, even during daylight or ideal weather conditions, without verifying proper function of the trailer's running lights. Never assume the environmental conditions or time of day in which you will be operating the trailer.

The trailer will integrate with most tow vehicle wiring harness requirements. If the tow vehicle's wiring harness will not connect to the plug, contact either a authorized Malibu dealer or the tow vehicle's authorized dealer for assistance. A different harness or an adapter may be necessary; these should be installed only by authorized service technicians. Never use any harness or adapter that is not specified by the tow vehicle manufacturer and Malibu Trailers.



*Seven-pin connector.*

### ⚠ WARNING

Late-model tow vehicles are usually equipped with a sensor that reports when the trailer lights have been connected to the tow vehicle's connector. However, the LED light on the trailer sometimes does not pull a sufficient load on the tow vehicle's electrical system to register. This situation can be simply remedied by the tow vehicle's dealership.

### ⚠ CAUTION

The trailer requires a seven-pin connector. Some older tow vehicles may have a five-pin connector instead of a seven-pin connector. An adapter is available through the tow vehicle's manufacturer. This is required to allow the back-up lights and solenoid to operate correctly. Failure to ensure that the entire lighting system on the trailer is operating correctly can mean that other vehicles following or in the vicinity of your tow equipment may not be alerted when you shift into reverse. This could lead to vehicle damage or injury.

## Axles

The trailer is equipped with the VAULT™ bearing protector. The VAULT uses only UFP Hybrid Oil™ lubricant, which combines the benefits of oil and grease. The VAULT protects the wheel bearings in a sealed, pressurized chamber that is unaffected by outside elements. For optimal performance, only UFP's Hybrid Oil lubricant should be used in this system.



The system has several unique features not found on conventional trailer axles. Every possible leak point on the front and rear of the hub is sealed. (The slight pressure inside the hub is needed to keep water out of the hub chamber when the hub is submerged underwater during loading and unloading).

**Inspection or replenishment of the lubricant is not required as part of the routine maintenance for the first five (5) years.**

## NOTICE

Adding or changing the lubricant in the VAULT system is neither necessary nor recommended during the first five (5) years of service. After that time, the maintenance requirements should be undertaken only by an authorized Malibu dealer, and only the UFP's Hybrid Oil Lubricant should be used.

If the bearings need to be adjusted or replaced, the work should be done only by an authorized Malibu dealer. Failure to contact Malibu for preapproval during the warranty period will void the warranty.

The wheel bearings have been precisely torqued at the factory. To ensure the bearings are in good working order, check the bearing adjustment at least once a year by following this procedure:

- Jack up on one side of the trailer. (Be certain to use jack stands and chock the trailer wheels to keep the trailer from moving during the inspection.)
- Grip the edge of the tire and see if it can be rocked or moved.
- If the outer edge of the tire moves more than 1/8", the bearings may need to be readjusted.
- A slight amount of oil seepage at the rear seal is normal

and necessary to lubricate the wiper lip of the seal for long life. If excessive leakage is occurring, however, contact an authorized Malibu trailer dealer.

---

## Wheels and Hubs

Because the trailer wheels and hubs will be frequently submerged in water, they require more attention than those found on a tow vehicle. Wheels should be regularly washed with mild soap or detergent to retain the finish and remove any corrosive elements. Never use harsh detergent or scrub brushes that can damage the appearance.

If your boat is stored in an area that experiences snow or ice, Malibu highly recommends periodically checking and cleaning your wheels during the winter.

Even following inclement winter weather, salt and chemical treatments used to remove snow and ice from roads and parking lots can settle on the wheels and cause damage to the finish. Such damage is not covered under warranty.

---

## Lug Nuts

Prior to each outing, check that the lug nuts have retained the correct torque (120 ft. lbs).

When tightening or loosening lug nuts, it is critical to use a wrench of the correct size. The wrong size wrench can cause the lug nuts to become rounded off, which can make them impossible to use. **Your trailer is equipped with 3/4" lug nuts.**

**Never operate the trailer with one or more missing lug nut(s).** Operating the trailer with the complete number of lug nuts—properly torqued—is critical for both long-term use of the product and for road safety. Even one fewer lug nut can apply stress to the remaining lug nuts and the hub, which could result in failure.

Do not replace lug nuts, even missing ones, with lug nuts other than those available through an authorized Malibu dealer. The wheel assembly uses a specified lug nut selected for the kind of use the trailer will need; even if the threads match, unapproved lug nuts may not hold the wheel securely enough. Lug nuts on each wheel should always match. **The lug nut seat angle must match the wheel seat angle.**

The specific torque applied when securing the lug nuts is extremely important. If under-tightened, a lug nut could work loose during operation and fall off; if over-tightened, a lug nut could strip the threads and fall off.



## ⚠ DANGER

Check the lug nut torque:

- after the first fifty (50) miles of trailer use,
- for every month afterward that the trailer is operated, and
- prior to use if the trailer has been in storage or not used for a period of at least two weeks.

Failure to do so could result in lug nuts loosening or dislodging from the wheel assembly. Such activity can have catastrophic results, including loss of tow vehicle and/or trailer control, which could result in serious injury or death.


## ⚠ DANGER

Lug nuts must also be correctly sized and specified for each trailer wheel. Failure to properly install and maintain the lug nuts could result in the trailer wheel coming off during operation. Such failure can result in serious injury or death, as well as property damage.


### Lug Nut Installation

Follow these instructions for ensuring proper installation and torque for the lug nuts:

- Use a torque wrench. No other wrenches or similar tools are appropriate for use, except in an emergency.
- Keep a record of readings. If a lug nut or nuts routinely loses torque, it is symptomatic of a bigger problem that should be brought to the attention of an authorized Malibu dealer.
- Use the sequences shown below to tighten lug nuts: On the first round, tighten to 45 ft. lbs. Tighten a second time to 70 ft. lbs. Tighten again to 90 ft. lbs. And on the final time, tighten to 120 ft. lbs. Do this in a star pattern; do not simply go around clockwise or counterclockwise. The cross effort will ensure a correct reading.

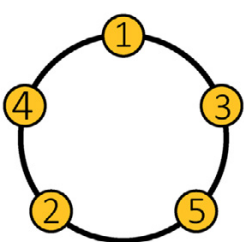

Sequence For 5 Lug Nuts

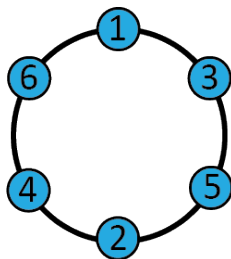

Sequence For 6 Lug Nuts

manufacturers will indicate the proper air pressure on the sidewall of the tire; this information is also available on the tire manufacturer's website.

Be sure to have a spare tire on all outings. Even new tires can be damaged or lose air.

## ⚠ WARNING

Follow the tire manufacturer's requirements to properly maintain tires. Failure to do so will cause tire failure while in use. This will result in loss of control of the trailer, which can lead to serious injury or death.

When storing the trailer, periodically check the tire inflation. Loss of inflation can signal a problem and can shorten the duration of the tire's life. Also shield tires from UV rays, which can significantly damage rubber. If it is possible to support the trailer frame during storage with jack stands or concrete blocks, this can help lengthen the life of the trailer's springs on trailers so equipped, as well as relieving pressure on the tires.

When replacing any of the trailer's tires, **DO NOT mix radial and bias-ply tires. This could affect handling and, ultimately, safety. Be certain that the replacement tires meet the trailer requirements and integrate with the remaining tires.**

The following information provided about tires is presented courtesy of the National Highway Transportation & Safety Administration (NHTSA). (Reprinted by permission.)

### Tire Safety: Everything Runs On It

Studies of tire safety show that maintaining proper tire pressure, observing tire and vehicle load limits (not carrying more weight in your vehicle than your tires or vehicle can safely handle), avoiding road hazards, and inspecting tires for cuts, slashes, and other irregularities are the most important things you can do to avoid tire failure, such as tread separation or blowout and flat tires. These actions, along with other care and maintenance activities, can also:

- Improve vehicle handling.
- Help protect you and others from avoidable breakdowns and accidents.
- Improve fuel economy.
- Increase the life of your tires.

The following section presents a comprehensive overview of tire safety, including information on the following topics:

- Basic tire maintenance.
- Uniform Tire Quality Grading System.

## Tires

Always keep tires to the specified inflation. The tire



- Fundamental characteristics of tires.
- Tire safety tips.

Use this information to make certain tire safety is a regular part of your vehicle maintenance routine. Recognize that the time you spend is minimal compared with the inconvenience and safety consequences of a flat tire or other tire failure.

---

## Safety First – Basic Tire Maintenance

Properly maintained tires improve the steering, stopping, traction, and load-carrying capability of your vehicle. Underinflated tires and overloaded vehicles are a major cause of tire failure. Therefore, as mentioned above, to avoid flat tires and other types of tire failure, you should maintain proper tire pressure, observe tire and vehicle load limits, avoid road hazards, and regularly inspect your tires.

---

## Finding Your Vehicle's Recommended Tire Pressure and Load Limits

Tire information placards and vehicle certification labels contain information on tires and load limits. These labels indicate the vehicle manufacturer's information including:

- Recommended tire size.
- Recommended tire inflation pressure.
- Gross Vehicle Weight Rating (GVWR – the maximum occupant and cargo weight a vehicle is designed to carry).
- The gross axle weight rating (GAWR – the maximum weight each axle is designed to carry).

Both placards and certification labels are affixed to the trailer. The recommended tire pressure is on the tire, and the tire pressure and load limit appear on the trailer label.

---

## Understanding Tire Pressure and Load Limits

Tire inflation pressure is the level of air in the tire that provides it with load-carrying capacity and affects the overall performance of the trailer. The tire inflation pressure is a number that indicates the amount of air pressure—measured in pounds per square inch (PSI)—a tire requires to be properly inflated.

The proper tire pressure for the trailer is referred to as the “recommended cold inflation pressure.” As you will read below, it is difficult to obtain the recommended tire pressure if your tires are not cold.

Because tires are designed to be used on more than one type of vehicle, tire manufacturers list the “maximum permissible inflation pressure” on the tire sidewall. This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

---

## Checking Tire Pressure

It is important to check your trailer's tire pressure at least once a month or every 50 miles, whichever comes first, for the following reasons:

- Most tires may naturally lose air over time.
- Tires can lose air suddenly if you drive over a pothole or other object or if you strike the curb when parking.
- With radial tires, it is usually not possible to determine under-inflation by visual inspection.

For convenience, purchase a tire pressure gauge to keep in your tow vehicle. Gauges can be purchased at tire dealerships, auto supply stores, and other retail outlets.

The recommended tire inflation pressure that manufacturers provide reflects the proper psi when a tire is cold. The term “cold” does not relate to the outside temperature. Rather, a cold tire is one that has not been driven on for at least three (3) hours. When you drive, your tires get warmer, causing the air pressure within them to increase. Therefore, to get an accurate tire pressure reading, you must measure tire pressure when the tires are cold or compensate for the extra pressure in warm tires.

---

### Steps for Maintaining Proper Tire Pressure

**Step 1:** Locate the recommended tire pressure on the trailer label.

**Step 2:** Record the tire pressure of all tires.

**Step 3:** If the tire pressure is too high in any of the tires, slowly release air by gently pressing on the tire valve stem with the edge of your tire gauge until you get to the correct pressure.

**Step 4:** If the tire pressure is too low, note the difference between the measured tire pressure and the correct tire pressure. These “missing” pounds of pressure are what you will need to add.

**Step 5:** Add the missing pounds of air pressure to each tire that is under-inflated.

**Step 6:** Check all the tires to make sure they have the same air pressure.

If you have been towing your trailer and think that a tire is under-inflated, fill it to the recommended cold inflation pressure indicated on your trailer label. While your tire may still be slightly under-inflated due to the extra pounds of pressure in the warm tire, it is safer to drive with air pressure that is slightly lower than the vehicle manufacturer's recommended cold inflation pressure than to drive with a significantly under-inflated tire. Since this is a temporary fix, don't forget to recheck and adjust the tire's pressure when you can obtain a cold reading.

---

## Tire Size

To maintain tire safety, purchase new tires that are the same size as the trailer's original tires, or another size recommended by the manufacturer. At present, the trailer manufacturer is not recommending any size differential than was originally equipped. If you have any doubt about the correct size to choose, consult your authorized Malibu Trailer dealer.

---

## Tire Tread

The tire tread provides the gripping action and traction that prevent your vehicle from slipping or sliding, especially when the road is wet or icy in general. Tires are not safe and should be replaced when the tread is worn down to 1/16". Tires have built-in tread wear indicators that let you know when it is time to replace your tires. These indicators are raised sections spaced intermittently in the bottom of the tread grooves. When they appear even with the outside of the tread, it is time to replace your tires. Another method for checking tread depth is to place a penny in the tread with Lincoln's head upside down and facing you. If you can see the top of Lincoln's head, you are ready for new tires.

---

## Tire Balance

To avoid vibration or shaking of the vehicle when a tire rotates, the tire must be properly balanced. This balance is achieved by positioning weights on the wheel to counterbalance heavy spots on the wheel and tire assembly.


---

## Tire Repair

The proper repair of a punctured tire requires a plug for the hole and a patch for the area inside the tire that surrounds the puncture hole. Punctures through the tread can be repaired if they are not too large, but punctures to the sidewall should not be repaired. Tires must be removed from the rim to be properly inspected before being plugged and patched.

---

## Tire Rotation

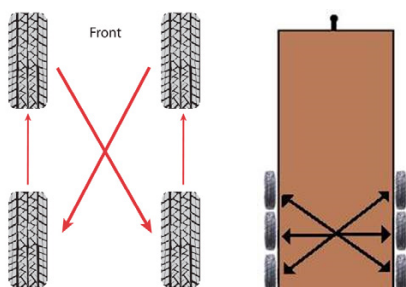

Rotating tires from front to back and from side to side can reduce irregular wear (for vehicles that have tires that are all the same size). The generally recommended rotation period is every 5,000 miles.

---

## Uniform Tire Quality Grading System (UTQGS)

To help consumers compare tread wear rate, traction performance and temperature resistance, the federal government requires tire manufacturers to grade tires in these three areas. This grading system, known as the Uniform Tire Quality Grading System (UTQGS), provides guidelines for making relative comparisons when purchasing new tires. You also can use this information to inquire about the quality of tires placed on new vehicles.

Although this rating system is very helpful when buying new tires, it is not a safety rating or guarantee of how well a tire will perform or how long it will last. Other factors such as personal driving style, type of vehicle, quality of the roads, and tire maintenance habits have a significant influence on your tire's performance and longevity.

Tread wear grades are an indication of a tire's relative wear rate. The higher the tread wear number is, the longer it should take for the tread to wear down. For example, a tire grade of 400 should wear twice as long as a tire grade of 200.

Traction grades are an indication of a tire's ability to stop on wet pavement. A higher graded tire should allow you to stop on wet roads in a shorter distance than a tire with a lower grade. Traction is graded from the highest to lowest as AA, A, B, or C.

Temperature grades are an indication of a tire's resistance to heat. Sustained high temperature (for example, driving long distances in hot weather), can cause a tire to deteriorate, leading to blowouts and tread separation. From highest to lowest, a tire's resistance to heat is graded as A, B, or C.

---

## Tire Fundamentals

Federal law requires tire manufacturers to place standardized information on the sidewall of all tires. This information identifies and describes the fundamental characteristics of the tire and also provides a tire identification number for safety standard certification and in case of a recall.

---

## Information on Trailer Tires

Please refer to the following photo:



**ST:** The ST indicates that the tire is for trailer use.

**Next number:** This three-digit number gives the width in millimeters of the tire from sidewall edge to sidewall edge. In general, the larger the number, the wider the tire.

**Next number:** This two-digit number, known as the aspect ratio, gives the tire's ratio of height to width. Numbers of 70 or lower indicate a short sidewall for improved steering response and better overall handling on dry pavement.

**R:** The R stands for radial. Radial ply construction of tires has been the industry standard for the past 20 years.

**Next number:** This two-digit number is the wheel or rim diameter in inches. If you change your wheel size, you will have to purchase new tires to match the new wheel diameter.

---

## Tire Safety Tips

Preventing tire damage:

- Slow down when crossing over a pothole or other object in the road.
- Do not run over curbs or other foreign objects in the roadway and try not to strike the curb when parking.

---

## Tire Safety Checklist

- Check tire pressure regularly (at least once a month or every 50 miles, whichever comes first), including the spare tire.
- Inspect tires for uneven wear patterns on the tread, cracks, foreign objects or other signs of wear or trauma.
- Remove bits of glass and other foreign objects wedged in the tread.
- Make sure all tire valves have valve caps.
- Check tire pressure before going on a long trip.
- Do not overload the tow vehicle. Check the tire information placard for the maximum recommended load for the vehicle.
- When towing the trailer, remember that some of the weight of the loaded trailer is transferred to the towing vehicle.
- For more information, visit [www.nhtsa.gov](http://www.nhtsa.gov) or call (888) 327-4326.

---

## Brakes



The trailer is equipped with hydraulic “surge” brakes. As the tow vehicle slows or stops, the trailer’s momentum moves against the hitch ball and causes hydraulic pressure in the master cylinder (located in the trailer’s tongue) to transfer pressure through the brake lines and engage the brakes. (*NOTE: Not every jurisdiction allows surge brakes. Check with authorities in the area in which you will be towing.*)

Trailers may be equipped with optional electric brakes instead; see *Optional Electric Brakes* for more information about that braking system.

The trailer brakes should always be maintained in top condition. This includes regularly checking the fluid level in the actuator. The loss of brake function can result in loss of control or the inability to stop the trailer, which could lead to serious injury or death.

---

### Surge Brake Breakaway Cable

The trailer is equipped with a surge brake breakaway cable. See the *Breakaway Cable* section of this chapter for more information.

Note that brakes will be submerged when the trailer is backed into the body of water to unload or load the boat. If the brakes (and/or wheels) are hot, it is recommended to wait briefly and allow them to cool before submerging.

Excessive heat in the wheels as a result of road use, meeting cooler water can cause damage to the components, especially the calipers and rotors. Also, if the trailer is submerged in salt or brackish water, be sure to carefully and completely rinse the entire trailer after the outing. Salt and exceptionally dirty fresh water can cause damage to the trailer components, which is not covered under warranty.

## NOTICE

Salt and brackish fresh water can damage trailer components, which is not covered under warranty. Always clean the trailer with a freshwater rinse and/or use of mild soap after an outing in which parts of the trailer have been submerged.

Regarding routine maintenance, be aware that small amounts of rust will build up on the brake's rotor surface if the trailer sits for a fairly short period of time, as little as a week. The brake's pads will eliminate the rust after several applications of braking, but if the trailer has been sitting for a more-extended period of time, and especially following long-term storage such as over the winter off-season, the brakes may be significantly corroded. This can also happen if the trailer has been submerged in saltwater and has not been sufficiently rinsed with fresh water afterwards. Greater concentrations of rust may require assistance from your authorized Malibu dealer to ensure ongoing proper functionality.

If there is any concern about the condition of any component of the braking system, have an authorized Malibu trailer dealer review and rectify the matter before towing the boat.

## Optional Electric Brakes

The trailer may optionally be equipped with electric brakes.

The electric braking system uses electric power from the towing vehicle to drive the hydraulic power source. In a breakaway situation, the electric power is supplied by a breakaway battery connected to the towed vehicle brake actuation system. This battery is charged by a charger built into the control circuitry.

The actuator reacts in one of three ways: primarily, it turns on when the brake pedal of the towing vehicle is depressed. If due to road conditions it is desirable to apply only the towed vehicle brakes, this is achieved by applying the manual override on the in-cab brake controller. In a breakaway situation, the towed vehicle braking system is applied by the breakaway switch, which is explained elsewhere in this section of the manual.

The system requires an in-cab electric brake control not provided as part of the system. The system will operate from most electric brake controllers **when properly installed**.

Proper electrical wiring is **critical** for the performance of the braking system. Improper wiring can result in damage to the actuation system or system failure after initial use. A pure ground and direct power (+12 VDC) with fuse or circuit breaker (30 amp) are necessary to ensure good performance. Line losses and poor grounding will result in poor performance or total loss of towed vehicle braking. The

connection for the system is provided by prewired harnesses, and the plug connectors are keyed so that they cannot be connected incorrectly. However, if the plug between the towing and towed vehicles is not wired properly, the unit will either not function at all or will function improperly.

## When Towed by 2006 Mid-Year or Later Ford, Chevy, GMC Truck Equipped with a Factory Brake Controller

Any Malibu trailer with the electric over hydraulic brake system installed and towed by a 2006 mid-year or later Ford, Chevy or GMC truck may experience towing issues if the truck is equipped with an optional factory-integrated trailer brake controller.

These trailer brake controller systems are intended to assist with the trailer braking process. Because of the way these systems are designed, however, they can prevent the electric trailer braking system from engaging as intended. **This is NOT a malfunction of the trailer.**

New in model year 2021 was an electric over hydraulic brake system equipped with an adapter for 2006 mid-year or newer Ford and Chevy factory-integrated trailer brake controllers. If you have a newer model year vehicle, test the brakes before leaving the dealership. If the brakes are not working correctly, it takes only a matter of minutes to plug in the adapter.

## ⚠ WARNING

The trailer brakes should always be maintained in top condition. This includes checking the fluid level in the actuator regularly. The actuator access location is via a cap on top of the trailer tongue. The loss of brake function can result in loss of control or the inability to stop the trailer, which could lead to serious injury or death.

The breakaway cable should **NEVER** be used as a substitute for braking or as a parking brake.

Periodically inspect the electrical connector, wiring, brake lines, and hose for the entire brake system to ensure there are no abraded or bare wires, damaged steel lines, or cracked and damaged hoses. During inspection, verify that there are no loose or hanging lines or wire that might drag or catch on objects/debris while being towed.

If there is any concern about the condition of any component of the braking system, have an authorized Malibu trailer dealer review and rectify the matter before towing the boat.

Prior to **EACH** towing:

- Check the fluid level in the reservoir on the trailer frame. The fluid level must be maintained with 3/8" to 1/2" below the filler opening. If brake fluid is needed,



add only new, clean DOT3 Premium Brake Fluid. Use caution when removing the filler cap to prevent the introduction of dirt and/or contaminants into the fluid reservoir.

## ⚠ CAUTION

Do not use brake fluid drained from the brake system to refill the master cylinder reservoir, as such fluids contain contaminants from the system that may result in brake failure or costly repairs.

- Check to be certain the breakaway battery is charged and that the breakaway works. This is accomplished by pulling the cable on the breakaway switch. If the vehicle has been parked for extended periods of time, the breakaway battery may be discharged. If that occurs, charge the breakaway battery in accordance with the manufacturer's recommendations prior to operation. If the battery is allowed to discharge in a cold environment there is a possibility of freezing, which could cause damage to the battery. Such damage may not be covered by warranty.
- Again, use caution when handling brake fluid as spilled fluid will damage paint.

## ⚠ WARNING

Appropriate installation, maintenance, and repair procedures are essential for the safe, reliable operation of vehicle brakes. Anyone who undertakes to maintain or repair vehicle braking systems must neither compromise their personal safety nor the vehicle integrity by their choice of methods, tools, or parts.

## ADDITIONAL OPTIONS

### Back-up Camera

To assist with safe backing, the trailer may optionally be equipped with a back-up camera.

Using an app on your mobile device, images are delivered directly to assist during low-speed maneuvers, stationary position, or for surveillance. For more information about the back-up camera, consult the manufacturer's user guide enclosed in your owner's packet.

### Depth Alarm

To assist with backing into the water to a depth sufficient to allow safe unloading of the boat, the trailer may optionally be equipped with a depth alarm.

When the correct depth has been achieved, a sensor sends an alert to an alarm on the bow stand. The alarm will sound until the tow vehicle is placed in Park (or a forward gear on manual transmission-equipped tow vehicles).

### Tire Pressure Monitoring System (TPMS)

The trailer may optionally be equipped with a Tire Pressure Monitoring System (TPMS).

The TPMS comes with a component-specific manual as part of the trailer owner's packet. The TPMS manual contains important safety information and should be reviewed by all owners and operators prior to operation of the trailer.

- Complete the TPMS App set-up before driving.
- The driver or owner does not need to constantly view the TPMS App. Warning notifications will be issued when abnormal conditions are found in the tires. TPMS sensors transmit only when installed on a vehicle moving at more than twenty (20) miles per hour.
- The smart device with app installed needs to have Bluetooth turned on and the TPMS App needs to be running in the background in order to receive on-screen and audible warning notifications when the device volume is turned on.
- The smart device should be in a viewing area that does not affect normal driving.
- Check for any air leakage from the tires after the TPMS sensors have been installed.
- The TPMS does not have a warning notification for sidewall failure.
- However, the warning notifications for irregular tire pressure and temperature may help prevent a failure.
- Regular maintenance and visual inspections of the tires is still necessary.

## ⚠ WARNING

Failure to follow the directions and instructions in the TPMS manual can result in component or tire failure, which can lead to serious injury or death, and damage to the trailer that is not covered under warranty.

---

## Bow Safety Strap



The bow safety strap is a secondary point of security in case the bow winch should fail or not be secured properly. When installed and used, be sure to attach the clip to the bow eye of the boat.

While the strap is sold as an option, some states require a bow safety strap. Verify with your authorized Malibu dealer whether this is necessary.

### **⚠ WARNING**

Failure to properly attach the bow safety strap clip to the bow eye of the boat could result in the boat becoming unattached during operation of the trailer. Such failure could result in damage to the boat and/or trailer, which is not covered under warranty. Under extreme conditions, the boat could become unattached to the trailer and damage to other vehicles on the road, which can result in serious injury or death.

---

## Wheel Chocks



Wheel chocks, where equipped, are stored under the trailer fender (one on each side) and secured with a pin. The chocks can be especially helpful in maintaining position when parking on hills or in areas in which parking needs to be firmly fixed. The chocks should be placed on the downhill

side of the rear tire, and then returned to the stowing position under the fender, when not in use.

---

## Electric Jack

The trailer may be equipped with an electric motorized jack featuring automatic extend/retract functionality, vehicle memory settings, and a manual override socket.

For operating instructions, please refer to the manufacturer-specific owner's manual provided alongside this manual at time of delivery.

---

## TOWING ADVICE

---

### Prior to Towing

Verify that you have a jack and lug wrench that are both compatible with the tow vehicle and the trailer—the same ones may not work on both.

In addition to the spare tire that can be mounted on the trailer spare tire mount, also have available in your tow vehicle's storage area such useful additional items as:

- Extra lug nuts;
- Wheel chocks (especially important in areas in which there are hilly or mountainous driving conditions). The wheel chocks are also offered as a hidden wheel chock option;
- Wheel bearing grease;
- Marine-grade grease;
- Spare tie-down straps;
- Additional brake fluid for the actuator;
- A torque wrench to check and ensure the lug nuts are properly torqued;
- Road flares.

---

### Pre-Tow Check List



- Verify the coupler, hitch, and hitch ball are the correct, specified size and fit.

- Be certain the safety cables and breakaway cable are correctly attached.
- Check that tie-downs and the winch strap are secure.
- The wheel lug nuts are properly torqued.
- The tires are inflated to the air pressure level stamped on the sidewall.
- The trailer lights are operating properly.
- The brakes are functioning as designed.
- If the boat is equipped with a tower, it must be either upright and locked, or lowered and secured. If the tower is upright, you will need to determine that the total height of boat, trailer, and tower will be able to clear power lines, bridges, overpasses, or any other impediment.
- The total load does not exceed the GVWR.

## Underway

Towing is more challenging than driving down the road in a single vehicle. Therefore, you would be well-advised to practice before undertaking a genuine tow to a body of water for an outing.

**We cannot anticipate every possibility that will arise and assume no responsibility for the operation of your tow vehicle and/or trailer, but the following are some recommendations that can enhance the towing experience and better prepare you:**

**Drive sensibly.** You will have a substantially greater length and weight to maneuver. This means you need more time and space to accelerate or to stop. Weather conditions are amplified. Wind especially can create more challenges in maintaining control.

**Use those mirrors.** Most tow vehicle manufacturers recommend adding oversized mirrors. Some legal jurisdictions require it. Regardless, the better you are able to see, the more control over the total rig you'll have. Larger mirrors can also assist you in keeping an eye on the trailer and boat to be aware of how well they are moving down the road.

**Allow extra room when making turns.** Turns, especially right turns, take more space. You've seen this with tractor-trailer units and other tow vehicles.

**Think twice and allow extra room when passing other vehicles.** It will take longer to accelerate to passing speed, and you will need considerably more room when moving back into the driving lane. Passing on grades is not recommended as it is more difficult to maintain overall control. It may be necessary to downshift gears in the tow vehicle when passing, too. Avoid road shoulders, especially narrow ones. If you go off the paved surface, especially at highway speed, you may

lose control or even jackknife the rig.

**Use common sense.** All the potential issues that cause potential problems when driving a regular highway vehicle are exaggerated when towing. Avoid tailgating, jackrabbit starts and stops, or any maneuver that exceeds the capabilities of your rig. Any time your rig fish-tails, stop and determine what the cause is. Often it is shifting weight, particularly within the boat or on the trailer. Readjusting the towed items may take a few minutes but can save your life and others'.

## LAUNCHING AND RELOADING THE BOAT FROM THE TRAILER

Unloading the boat from the trailer into the water requires skill, experience, and constant awareness of your surroundings. Conditions vary by location, so it is important to pay attention and plan ahead in order to avoid damage to the boat and trailer, as well as the ramp. Correctly loading and unloading the boat from the trailer takes practice, but is critical for both the safety of you and others as well as protection of the boat and trailer.

First, examine the ramp. Ramp types range from unimproved (dirt, sand) to paved (concrete, asphalt), to, as is often the case, an in-between type or a combination of multiple types (gravel, crushed stone, concrete with wooden planks, etc.). Always be sure to take note of the ramp's:

- **steepness**, as that affects how far you will need to back the trailer into the water;
- **construction**, to determine if the ramp surface will support the weight of the trailer and boat such that you will not bog down in the water when backing up;
- **width**, especially if you are inexperienced; and
- **material**, as certain ramp types may be slippery when wet, which can affect control over the rig.

Before backing into the water, double-check that the boat is ready for launch. Ensure that all drain plugs are installed on the boat to avoid swamping and potentially flooding.

Then, release all tie-downs except the winch.

If possible, have a second person standing by (but never directly in back of the rig) to help guide you down the ramp. Remember: when backing up, the trailer will move in the opposite direction to the direction in which the tow vehicle steering wheel is turned.

Slowly back the trailer and boat down the ramp until the trailer's rear tires touch the water. Examine the boat to see whether its stern has visibly started to float; if not, slowly back up in small increments until you see the stern of the boat begin to float. Then, place the tow vehicle in Park (or a forward gear if the tow vehicle has a manual transmission),

shut off the tow vehicle engine, and set the parking brake.

After verifying that the water depth is sufficient for the boat's hull—it should not contact the ramp surface or ground underwater—release the trailer winch latch-and-hook. Back the boat into the water and either secure it to a dock or deploy the boat's anchor while you remove the tow vehicle and trailer from the ramp.

To reload the boat onto the trailer, reverse the process described above.

Once the trailer is in position on the ramp, verify that the trailer bunks are free of dirt, sand, or other debris that could scratch the boat hull. Back the trailer up such that the trailer bunks are completely wet—this will help protect the hull once the boat is loaded.

Prior to towing, verify that all tie-downs are secure.

## ⚠ CAUTION

Submerging part of the trailer in water will cause the brakes to be wet. See the *Brake* information in this section of the manual regarding care following an outing. Also, be aware that while the brakes are wet, they will not work as quickly or efficiently as normal. As soon as they dry, the brakes should resume their normal characteristics.

## CLEANING, MAINTENANCE, AND STORAGE



**STOP AQUATIC  
HITCHHIKERS!™**  
Be A Good Steward.  
Clean. Drain. Dry.  
[StopAquaticHitchhikers.org](http://StopAquaticHitchhikers.org)

Aquatic invasive species (AIS) are plants and animals that occur in waters in which they are not native and whose introduction causes or is likely to cause economic or environmental damage or harm to human health. AIS have a negative impact on the waterway, its native species, and recreational and commercial uses of the waterway. As responsible boaters and citizens, each boat owner should do their part to prevent the spread of these aquatic hitchhikers. In many cases, it is also required by law.


One common way that species may be moved during recreational boating and other activities includes attaching to watercraft and trailers. Just one organism, or in some case a piece of a plant, is enough to start a new invasion. Please insure you clean off visible aquatic plants, animals, and mud from all equipment before leaving water access. For more information on flushing the ballast system, please see the *How it Works* section of this manual.

Proper cleaning, including corrosion prevention, and maintenance are critical to ensuring the long life of your Malibu trailer. That information, along with requirements for storage (periods of time exceeding a week) are found in the *Care and Maintenance* section of this manual.

Please carefully review that information and follow it throughout the time of trailer ownership. Note that failure to follow the care and maintenance procedures as described in the *Care and Maintenance* section of this manual can result in damage to the trailer that could cause component failure over time. Damage due to neglect is not covered under warranty. It can also result in trailer failure that could potentially cause serious injury or death, not only to those in the tow vehicle but also to others on the road in the vicinity.

## Trailer Flush Kit

The trailer may be equipped with an optional flush kit that may be used to flush fresh water through the trailer frame, assisting with the removal of aquatic invasive species (AIS).

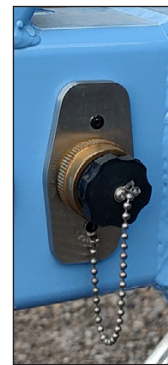

1. Remove the flush kit connector cap. Make sure the rubber gasket stays in the female side of the flush kit connector.
2. Screw a threaded hose, connected to a fresh water source, into the flush kit connector.
3. Turn on the water source (use hot water if available).
4. Run the water for 10–15 minutes.
5. Turn off the water source.
6. Unscrew the hose from the flush kit connector.
7. Make sure the rubber gasket is still seated in the flush kit connector, then re-insert the cap and tighten securely.



## MALIBU FUEL SYSTEM

Malibu models are equipped with the most up-to-date fueling system available in the marine industry. The boats feature pump-in-tank (PIT) fuel systems, which means the fuel pump is located securely inside the fuel tank rather than at the engine. There are many benefits to the PIT system, most significantly in the prevention of vapor lock and improved filtration of contaminants.

To maximize the benefit of this type of fuel pump, the entire system is under high pressure. That means that access to the pump and fuel filter is only through fuel lines with a significant pounds-per-square-inch (PSI) pressure to ensure proper operation. As such, no one can or should ever attempt to access any portion of the fuel system without proper training and proper equipment. **The fuel lines are covered in orange “fire-sleeve” protective covering so that they are easily identifiable, and consumers should always avoid these lines, unless it is noted that one is squeezed or pinched.** If it is possible to alleviate this situation safely, then do so. The preferable method, however, is to have an authorized Malibu service technician do so and verify that no damage has been done to the line or other equipment.

Normally, if there is any issue arising from damage or leakage in the fuel system, a strong odor of gasoline will be present and signifies that the engine should not be started due to the danger of explosion from fumes. Even in the absence of a gasoline odor, always visually check the fuel system prior to operation as directed in the *Care and Maintenance* chapter of this manual.

### **⚠ DANGER**

The fuel system, including the fuel lines, filter, and pump, should never be serviced by any person other than an authorized Malibu-trained service technician. Special tools and training are required to safely service the fuel system on all models. When opened or penetrated, the high-pressure lines can cause serious injury or death.

### **⚠ DANGER**

If fuel is spilled, always clean up with dry rags and dispose of properly on shore.

### **⚠ DANGER**

The flammability of gasoline and its explosive properties must always be respected. At the first odor of gasoline, the engine should be shut off and remain off until the source of the odor has been identified and the issue has been rectified.

### **⚠ DANGER**

Never smoke or operate any spark-producing object within a 50-foot range of the boat when fueling. Fumes from gasoline are more likely to produce an explosion and/or fire than the actual fuel.

### **NOTICE**

Use of incorrect fuel can result in damage to the engine that is not covered by Malibu or the engine manufacturer if such is other than Malibu. Failure to follow maintenance requirements may also void the warranties.

### **NOTICE**

Review the *Engine and Powertrain* chapter of this manual for important information regarding the proper fuel to use, how to maintain the fuel in use, how to maintain the fuel if the boat will not be used for a period of time, and other important information regarding the safe use of gasoline in the boat.

Malibu recommends returning to shore and refueling whenever the fuel gauge indicates that the fuel load has fallen below one-quarter (1/4) of a tank full. **It has been determined that continuous operation with ballast significantly loaded either port or starboard (rather than evenly distributed) can result in damage to the fuel pump as it attempts to compensate.** Also, even with the best of care, some water may get into the fuel tank or separate from the fuel that is pumped into it. If there is water present, it will settle on the bottom of the tank. If the pump begins to reach any water, it may cause malfunctioning in the engine.

When pumping fuel, do not leave the nozzle unattended in the fuel fill. Although the fuel system has been manufactured to avoid spit-back of fuel, and most gasoline dispensers will shut off if removed from fuel fill, it is always a wise consideration to provide full attention to the process.

---

## OPERATIONS

---

### Final Checks Before Starting

Before getting underway, operations checks should be completed to ensure a safe and enjoyable outing. Verify that:

- All safety requirements as outlined in the *Safety* chapter of this manual have been met.
- Review the prelaunch requirements as outlined by the trailer manufacturer, and the preparations as required by the engine/drivetrain manufacturer.
- The total number of people and gear onboard does not exceed the maximum allowed and as indicated on the capacity plate. These informational plates are located in the interior walk-thru.
- All gear is properly stowed. Gear that is left loose on the deck can become dislodged, move about during operation and could potentially go overboard or strike an individual onboard, resulting in potential injury.
- A float plan or outing information has been left with someone ashore. This means that if any issues arise, there is a person to raise an alarm if you do not return as planned. (Cell phones are helpful, but sometimes service is not available, so this should not be the only plan in the event of problems.)
- Ensure there is sufficient fuel in the fuel tank for the outing or have a plan for refueling.
- Be sure that the weather forecast does not include threatening conditions. Also check predicted wind and water conditions.
- Check that the drain plugs are fully and correctly installed.
- Ensure that PFDs and other safety gear are onboard.
- Be sure that all onboard fire extinguishing equipment is fully charged and easily accessible.
- Go through the pre-outing maintenance checklist, as outlined in the *Care and Maintenance* chapter of this manual.
- Give all the onboard equipment and components (such as the tower) a final check to be certain that everything is secure and ready for the expected boating conditions.

---

## STARTING AND OPERATION

Prior to starting the boat for the first time, read this entire manual. Before towing to the body of water the first time,

read the entire *Trailers* chapter of this manual as there is important safety information contained within it also. If the boat came with additional handout materials or other owner's manuals specific to various boat components, also read that material in its entirety.

All of these publications have been developed to protect boaters, their passengers, other people on the highways on the way to the body of water, and others who are also boating. Information is provided to enhance enjoyment of the Malibu experience, as well as how to care for and maintain the boat, engine, drivetrain, components, and trailer so that this will be a long-term, ongoing source of enjoyment.

---

### Starting the Engine — Wakesetter & M-Series

---

#### Step 1

Be certain the boat's shifter/throttle is fully upright in the neutral position. Additional information follows regarding shifting and throttle response.

---

#### Step 2

Perform the pre-start routine, including the bilge inspection and engine compartment inspection. (Details are provided in the *Care and Maintenance* chapter of this manual.) Leave the engine compartment open for the starting process.

---

#### Step 3

Attach one end of the Emergency Safety Lanyard to the Engine Cut-Off Switch (located near the Shifter/Throttle), and the other end of the Lanyard to the operator.



*Emergency Safety Lanyard.*

---

#### Step 4

Turn on the battery isolator switch. Press the Power button and ensure the 8" display powers up. After the display boots, the blower should start automatically. Allow the blower to run for at least four (4) minutes with the engine compartment open while the boat is in the water. It is extremely important for any accumulated fumes to be vented in this way, as accumulation of fumes in the engine compartment can also lead to an explosion. Pay attention while the blower is running so you can note any new issues with the engine, fuel system, and/or ventilation system that may have arisen.

---

### Step 5

Press the Start/Stop button for approximately one (1) second and enter the Start Code on the 15" display. **The default is 1-2-3-4, but boat owners can change this by following directions provided in the *Dash and Displays* chapter of this manual.**

There is also a back-up ignition key on the starboard shifter panel, next to the breaker panel. Start this as you would a land-based vehicle. If using the key switch to power ON the system, please be aware that a safety feature will be enabled that turns the navigation and anchor lights on.

---

### Step 6

If for some reason the engine does not start, repeat Step 5. Never press the button for an extended period. If the engine does not start as it should, make sure the throttle/shifter is in neutral. If it still does not start, then refer to the *Troubleshooting* chapter of this manual for assistance in determining the cause. If any alarms sound or warning lights appear, turn OFF the engine and troubleshoot.

## ⚠ DANGER

To prevent a possible explosion, always operate the blower for four (4) minutes prior to starting the engine and continue to operate with the engine compartment open for several minutes after starting the engine. Always operate the blower when the engine is idling or at a low running speed. Improper ventilation can lead to accumulation of gasoline or exhaust fumes in the compartment.

---

## Starting the Engine — Response TXi

---

### Step 1

Be certain the boat's shifter/throttle is fully upright in the neutral position. Additional information follows regarding shifting and throttle response.

---

### Step 2

Perform the pre-start routine, including the bilge inspection and engine compartment inspection. (Details are provided in the *How It Works* chapter of this manual.) Leave the engine compartment open for the starting process.

---

### Step 3

Attach one end of the Emergency Safety Lanyard to the Engine Cut-Off Switch (located near the Shifter/Throttle), and the other end of the Lanyard to the operator.

---

### Step 4

Turn on the battery isolator switch. Press the Power button

and ensure the 8" display powers up. After the display boots, the blower should start automatically. Allow the blower to run for at least four (4) minutes with the engine compartment open while the boat is in the water. It is extremely important for any accumulated fumes to be vented in this way, as accumulation of fumes in the engine compartment can also lead to an explosion. Pay attention while the blower is running so you can note any new issues with the engine, fuel system, and/or ventilation system that may have arisen.

---

### Step 5

Begin a check of the system to make sure all components are functioning as intended. After the blower turns off, press the START/STOP button and enter the Start Code on the 7" display. **The default is 1-2-3-4, but boat owners can change this by following directions provided in the *Dash and Displays* chapter of this manual.**

There is also a back-up ignition key on the starboard shifter panel, next to the breaker panel. Start this as you would a land-based vehicle. If using the key switch to power on the dash, be aware that a safety feature will be enabled that turns the navigation and anchor lights on.

---

### Step 6

If the Start Code was entered successfully, press and hold the START/STOP button for approximately one (1) second and then release. The engine starter should engage and begin the process that will allow the engine to run. If for some reason the engine does not start, repeat Steps 5 and 6. Never press the button for an extended period. If the engine does not start as it should, make sure the throttle/shifter is in neutral. If it still does not start, then refer to the *Troubleshooting* chapter of this manual for assistance in determining the cause. If any alarms sound or warning lights appear, turn OFF the engine and troubleshoot.

---

### Step 7

Allow the engine to run for several minutes, at least four (4) minutes, with the engine compartment open. It is extremely important for any accumulated fumes to be vented in this way. It also assures that any new issues that arise involving the engine, fuel system and ventilation system are noted. Accumulation of fumes within the engine compartment can also lead to an explosion.

---

## To Turn Off — All Models

To turn OFF the engine, press the Start/Stop button and hold for approximately one (1) second. If the backup key switch was used to start the boat, ensure that the power button is OFF and then turn the key to OFF. Failing to verify that the power button is off means the electrical system will continue to function and the engine will continue to run.

Note that, unlike a dry-land vehicle, turning off the boat

does **NOT** immediately stop its momentum. The boat will continue to move. Shifting to neutral will slow progress, but allowance must be made for continued movement. See information following for suggestions regarding docking. The power button is a safety measure. It allows the operator an opportunity to briefly and visually check the electrical system operation prior to starting. The key also reduces the likelihood of boat theft or unauthorized use. Always remove and take the key with you when the outing is done.

## BREAK-IN PERIOD — ALL MODELS

The first hours of boat operation have critical requirements for engine break-in; this information is contained in the *Engine* chapter of this manual, where appropriate. Be sure to review this information carefully. **Failure to follow the instructions will void the engine warranty!**

During operation, pay close attention to the displays and monitor the readings. Pay particular attention to the oil pressure and engine temperature information as these are the earliest warnings when something is going wrong with the drivetrain. Alarms will sound if serious problems are encountered.

Also, check carefully for leaks. The break-in period is the most likely time for leaks to appear, whether fuel, oil, water, or exhaust.

## SMART OPERATIONS

Newcomers to boating are strongly encouraged to take a U.S. Coast Guard boating class before operating the boat. Reading about boating conditions and operations from websites such as the National Marine Manufacturers Association (NMMA) and the many yachting association sites can be very helpful.

**Practice, practice, practice!** Begin in optimum weather and water conditions, avoiding tight quarters until you are comfortable. The boat actually steers more easily when the boat is on plane. This is achieved by speeding up briskly from idle. By throttling and increasing the speed, the boat will ride up higher on the body of water. With less friction between boat hull and water, the boat will maneuver more easily. At slower speeds, the boat is less responsive, so practice is important to achieve the kind of maneuverability that is desirable.

Remember that steering in a boat is from the rear (stern). The unseen rudder operates from the steering wheel, but the actual steering through the rudder is different from a car. Note that stern control means that the boat will push away

from the direction of the turn. The bow will follow a smaller turning circle than the stern does.

Note that the propeller does not move the boat directly forward. Due to the rotation (generally, counterclockwise), the boat's natural progress will have a slight tracking to the port side (when in forward gear) and starboard side when in reverse. At slower speeds, this phenomenon is more pronounced. Depending also on the body of water depth and width, it may be necessary for the operator to compensate for this natural movement.

## STOPPING

The lack of brakes requires the operator to think and react to hazards more quickly to avoid damaging contact with other boats, docks, and the shore. When stopping the boat, it is acceptable to use reverse gear (much as airplanes use reverse thrust). This is a technique that takes time and practice to master.

Slamming from forward to reverse gear can damage the system. Allow sufficient time to move the shifter from forward to neutral, briefly pausing with each shift, and then ease into reverse. Always slow to a no-wake speed before attempting these shifts and do not shift into reverse if the boat is moving faster than two (2) mph (3.2 km/h).

### WARNING

Do not disconnect the Emergency Safety Lanyard as a method to stop the boat. Doing so impairs the ability to restart the engine quickly or it may create a hazardous swamping condition.

## HIGH SPEED MANEUVERS

Competitions may showcase the driving skills of professional operators. Tempting as it may be to try the same kind of extraordinary maneuvers, the vast majority of operators should avoid boating at top speed. Professionals are trained to plan and prepare in the event something goes wrong.

The engines are built and tuned to run at the optimum speed range for water skiing, wakeboarding, wake surfing, and similar activities. Higher speeds are achievable, but the intent is only brief bursts of speed in those instances where the operator needs to move quickly to get out of a potentially dangerous situation.



## **⚠ DANGER**

Attempting to replicate the high-speed maneuvers of professional boat drivers can lead to loss of control, damage to the boat, and serious injury or death to the operator and passengers.

Weather conditions and altitude can affect the best operating range for the engine. If you feel that you are not getting the expected performance from your boat, contact your authorized Malibu dealer to discuss changing or adjusting the propeller to compensate. Do not attempt to do this without assistance as it may void the boat and/or engine warranty.

## **SPECIAL CONDITIONS**

Boating regularly on the same body of water will assist the operator in anticipating conditions under normal circumstances. But for boaters who try different locations or even in instances where conditions are abnormal at a known location, operators should seek advice from local sources. Do not launch when threatening weather is in the area. If there has been recent flooding, there may be additional floating debris. If a drought is occurring, a lowered water level may result in submerged hazards becoming exposed. Avoid brackish or weedy areas, too. The flora can become entangled in the propeller and cause problems. Smaller material can become lodged in the water intake for the engine and transmission. Fouling from natural materials can result in damage to the drive train that is not covered under warranty.

## **TOWING AND INTERACTION**

Activities behind the boat require interaction between the driver, an observer, and the sport participant. See the *Safety* chapter of this manual for information about hand signals and safe pick-up of a downed skier/boarder/swimmer. The operator is responsible for the well-being of all aboard, plus any people outside the boat who are engaged in sports that are a result of operating the boat.

Under normal circumstances, the boat should not be used to tow other boats. Towing other boats should be undertaken only as a last resort, when other, more appropriate, towing is unavailable. The stress caused by towing lines, along with the difficulty in controlling the disabled boat, could cause damage to the towing boat as well. Always attempt to secure assistance from shore and rescue organizations such as the

U.S. Coast Guard. Never tow a boat that is the same size or larger. A tow line should attach only from the stern eyes to the bow eye, with sufficient line to avoid contact between the two boats. Do not use three-strand twisted nylon rope, as it has too much elasticity. Lines need to stay free of propellers on both boats. Never hold on to the rope after it is taut.

Only boat operators with knowledge of correct technique should undertake to tow. Move slowly to prevent strain on the line and be ready to cast loose or cut the line if conditions become hazardous.

## **ANCHORING**

Consult with your authorized Malibu dealer regarding the best selection for an anchor and how to properly attach it to your boat. Always anchor from the bow of the boat, as it has less chance of breaking free if a heavy wind occurs or water conditions worsen.

## **DOCKING AND TIE-UP**

Docking the boat requires considerable practice to be effective and avoid damage. Docking must always be done at slow speed.

Before attempting to dock, practice in an open body of water. Slow the throttle to no-wake speed, then shift into neutral and drift slowly toward the dock. If necessary, shift the boat into reverse to further slow or stop the boat.

## **⚠ WARNING**

Never insert a hand, arm or other body part between the dock and the boat or attempt to keep the boat from hitting the dock. The boat could push against the dock, pinning the appendage, and cause severe injury.

The following are recommended guidelines for docking:

- Approach the dock with the starboard side of the boat, if possible. You will be able to see the edges of the dock and boat better.
- Come to a stop at a short distance from the dock, and then proceed slowly (no wake).
- Have fenders (where equipped), mooring lines and crew ready.
- Observe how the wind and current are moving the boat. Approach the dock with the boat pointed into the wind, if possible. If the wind or current is pushing you away from the dock, use a sharper angle of approach. If you

must approach the dock downwind or down current, use a slow speed and shallow angle. Be ready to reverse to stop and maintain position.

- If there is no wind or current, approach the dock at a 10-to-20-degree angle.
- If possible, throw a line to a person on the dock and have that person secure a bow line.
- With the bow secure, swing the stern in with a slight throttle and turning of the steering wheel, or pull it in with a boat hook.

Before tying up the boat, it is advisable to use enough fenders (an additional, optional purchase) to protect the boat from damage. It is necessary to tie up with some slack in the line, as tying tightly will cause the boat's finish to rub repeatedly against the dock due to wave or tidal action, but if there is too much slack the side of the boat may hit (and damage) the finish.

Tie up with the bow toward the waves, if possible, with a good-quality, double-braided nylon line. Tie up only to the lifting eye (under the forward bow point) or tie-down eyes (each side of the transom), or optional cleats. Never use the handrails, windshield frame, or any other component of the boat. If the boat will be moored for an extended period of time, use chafing protectors on the lines to protect the gel coat finish.

When leaving the dock, untie the lines and return them to the boat deck to avoid snagging on any object on the dock. (Also, stow the lines so that the operator and any passengers will not trip on the lines or become entangled.) Move very slowly away from the dock, unless the wind/current are naturally pushing the boat away from the dock, where it is possible to drift until safely free of the dock.

Always be certain to visually check that the center and transom drain plugs are installed and secured prior to deploying the boat in any body of water. The boat operator must still physically check that the drain plugs are installed and properly secure.

## AQUATIC INVASIVE SPECIES

Aquatic invasive species (AIS) are plants and animals that occur in waters in which they are not native and whose introduction causes or is likely to cause economic or environmental damage or harm to human health. AIS have a negative impact on the waterway, its native species, and recreational and commercial uses of the waterway. As responsible boaters and citizens, each boat owner should do their part to prevent the spread of these aquatic hitchhikers. In many cases, it is also required by law. Check local regulations for any waterway where you will boat. After each

boating trip, follow these three simple steps before you leave the water access to stop the spread of AIS: Clean, Drain, and Dry. This is the boater's way to help protect the environment from the damage that AIS can cause.

## Pathways of Aquatic Invasive Species

We are living in a very different era where goods, people and services are being shipped around the world. Because of this globalized economy, different species are hitchhiking through many different pathways. Species can be moved to new locations in many ways, and most are a result of human activity, including recreational activities. Some common ways that species may be moved during recreational boating and other activities include:


- Attaching to watercraft, trailers, motors, and fishing gear.
- Transport by ballast, bilge, and other water containing devices.
- Dumping of unwanted live bait.
- Tangled in fishing lines and downrigger cables
- Sticking to the soles of waders
- Trapped in mud on a dog's paws

Just one organism, or in some cases a piece of a plant, is enough to start a new invasion.

## General Clean, Drain, Dry procedure

Clean, Drain, Dry... In every waterbody, every time.

Preventing the spread of aquatic invasive species starts with you. A cooperative effort is necessary by all persons and agencies involved with recreational activities to achieve the best results and protect our aquatic resources and recreational opportunities. The general Clean, Drain, Dry procedure is described below:

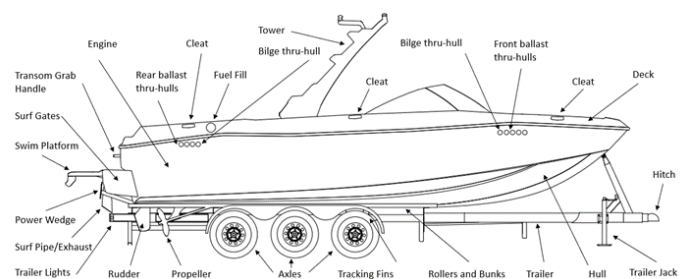

## Clean

Clean off visible aquatic plants, animals, and mud from all equipment before leaving water access. Inspect and clean engine area, including the transmission and motor mounts;

trailer, including axles, bunks, and rollers; power wedge, dock lines/cleats, surf pipe/exhaust, surf gates and actuators, propeller, rudder, transom grab handle, tower, tracking fins, and equipment before leaving the water body.

- Rinse equipment and boat hulls with high pressure, hot water (140°F) when possible.
- Rinse interior compartments of boats with low pressure, hot water (120°F) for a minimum of 130 seconds contact time.
- Flush motor with hot water (140°F) for 2 minutes (or according to owner's manual). See *How It Works* chapter for information on flushing the engine.
- Flush ballast system with hot water (120°F). See *How It Works* chapter for information on flushing the ballast system.
- If the boat's trailer is equipped with a flush kit, flush the trailer with hot water (120°F). Refer to the *Trailers* chapter of this manual for operating instructions.

---

## Drain

Drain the engine cooling system, bilge, ballast system, and other water containing devices before leaving water access.

---

## Dry

Allow the boat to completely dry OR wipe with a towel before reuse, before visiting any other bodies of water.

---

## AIS Summary

Together the three steps of Clean, Drain, Dry greatly minimizes the risk of spreading Aquatic Hitchhikers into new locations.

- Cleaning will remove visible large-bodied organisms attached to or in watercraft or recreational equipment. Rinsing with water removes organisms, while hot water often kills them. Water at least 120°F is recommended; be sure to avoid contact with skin and check manufacturers' recommendations to ensure equipment can withstand high temperatures. If hot water is not available or may cause damage, rinsing with tap water and completely drying will help prevent spread of aquatic invasive species.
- Draining removes small and nearly invisible organisms such as zebra mussel larvae (veligers) potentially entrained in water containing devices.
- Drying is necessary as many organisms can survive in standing water.

A note about chemicals. The use of chemical prophylactics

or disinfectants (e.g., bleach) are not recommended for treating watercraft and recreational equipment. Chemicals may:

- Damage equipment or components, which is not covered under warranty.
- Cause environmental damage
- Harm human health
- May not be effective against many aquatic invasive species

Report new sightings. If you think you have found an invasive species, note its exact location and, if possible, take a photo. Report new sightings to the appropriate authorities or use the USGS Sighting Report Form.

Know the rules! Specimens are needed to confirm sightings, but some jurisdictions prohibit possession and transport of invasive aquatic plants and animals. Before collecting specimens, contact your local natural resource management agency for instructions. Unauthorized introduction of plants, fish, or invertebrates into the wild is illegal in most states. Protect your property and our waters.

Remember that AIS threaten the environment, recreation, economy, and human health. Refer to the *Stop Aquatic Hitchhikers!* Website for more details ([www.StopAquaticHitchhikers.org](http://www.StopAquaticHitchhikers.org)).

# CARE AND MAINTENANCE

## ONGOING CARE

### General Cleaning

Malibu recommends always keeping the boat clean. Immediately after an outing, the boat's exterior and interior should get a thorough rinsing with clear, fresh water, and then should be allowed to air dry prior to covering with canvas. If this is not possible, the boat's cover should be removed as soon as you arrive at your destination and allowed to dry.

### NOTICE

Boats must be thoroughly rinsed inside and out with clear, fresh water following all outings and then allowed to completely dry prior to storage or parking. Failure to do so could result in damage to the finishes and the development of mold or mildew, or permanent stains. Such damage is not covered under warranty.

### NOTICE

Consumers should never add aftermarket waterproofing to canvas. The canvas must "breathe" to avoid mold and mildew. If any spray-on waterproofing has been added after delivery, it will void the warranty.

If the boat will be left in water, the exposed areas should be wiped down with clear, fresh water and allowed to dry before boat covers are installed.

### Canvas

The boat may be equipped with various accessories constructed with canvas, including:

- a mooring cover,
- Bimini top, and
- tower speaker covers (REV 12 only).

Canvas, a type of fabric, requires special care and maintenance to ensure longevity and prevent damage. Please read this entire section and follow all provided canvas care and maintenance instructions.

### Mooring Cover

#### Installation

1. Buckle the front of the mooring cover to the bow eye or trailer strap.
2. Unroll the cover towards the aft of the boat.
3. Attach the hang-tight to the tow pylon on the top of the tower.
4. Velcro and buckle the mooring cover around the port and starboard sides of the tower (if applicable).
5. Use the provided pull strap (if provided) around the aft corners of the boat.
6. Use the ratchet straps to tighten the mooring cover. The ratchet should click when sufficient tightness is achieved; however, it can be tightened further.
7. To remove the cover, reverse Steps 1–6.

#### If Trailering or Storing Long-Term

If the boat is being trailered or going into long term storage such as for the winter, it is recommended to add the support poles to the cover to provide extra support. If the boat is equipped with REV12 tower speakers, it is also recommended to install speaker covers (available as a separate option).

All towers are equipped with a bow and aft pole.

- The bow pole should be installed between Steps 3 and 4—flip the cushion under the bow pole upside-down to protect the vinyl.
- The aft pole should be installed between Steps 4 and 5.
- The Response TXi no-tower mooring cover has three poles that should always be installed. The rear and center poles can be installed at the same time.

**NOTE:** The Response TXi no-tower mooring cover has three (3) poles that should always be installed. The rear and center poles can be installed at the same time.

### Breathability of Fabrics — Air Permeability

Air permeability is an important factor in the performance of outerwear where the wind resistance helps keep the user warm. Fabrics that have high air permeability usually have low water repellency, the latter being an important feature for mooring covers. When in a slip, mooring, or parked on a trailer, the cover is not experiencing any pressure that would



force air through the fabric so breathing or air permeating will not occur.

In all cases, vents that are often placed on covers provide more ability for air to move out from under the cover than the fabric's ability to breathe. It is important to note that in this "static" condition air under the cover is stagnant.

Where air permeability is most important is when towing. This is a dynamic condition and high air permeability will cause the cover to billow and buffet, lowering its life, and potentially causing damage to the surfaces it touches.

---

## Mold & Mildew Cause and Prevention

Mold and mildew spores are ever present in air and soil, and most will germinate when exposed to temperatures above 75° F and relative humidity of 50%, with rapid spread occurring at 80%; however, some can grow in significantly lower temperatures and RH levels.

All fabrics will support growth but natural fibers like cotton, due to their cellulose component, are more susceptible than synthetics. Some synthetics are treated with an anti-microbial agent which adds to their growth resistance. Anti-microbial treatments protect the base surface itself, so that alone won't support spore growth. However, organic soiling on top of those surfaces will. Once a population is established on the cover, vinyl seating or gel coat, an irregular stain will appear which ranges in color from gray to black; however, yellow, orange, and red stains are possible. Sometimes UV exposure can fade them but most often they remain permanent stains.

---

## Treatment

(Canvas manufacturers acknowledge this is difficult and very time-consuming, with limited expectations of success. Therefore, it is desirable to avoid the necessity of mold and mildew treatment.)

- If growth is established, vacuuming with a HEPA filter unit would be the first step followed by cleaning.
- For fabric and vinyl surfaces, shampoo lightly with an upholstery shampoo.

---

## Focus on Prevention

The key in eliminating mold growth is controlling moisture. Remove it as a factor and growth simply will not occur, so maintaining a cool and dry condition with clean surfaces is paramount. Using a dehumidifier isn't practical for boat storage, but a simple remedy can be using desiccant bags. They must be monitored as they will absorb moisture and become ineffective, but they can be replaced, and this is a relatively inexpensive method. They are available in packs for a normal-sized boat and called Boat Dry, purchasable

from Sun Solutions at [www.sunsolutionproducts.com](http://www.sunsolutionproducts.com).

When the boat is ready to store, the best practices are:

- Clean and dry the boat thoroughly.
- Place a Boat Dry set of desiccant bags throughout the boat.
- Put the mooring cover on with included support poles and tightly ratchet (seal will be created at the rub rail).

Drying out a boat is difficult but the extra care you take will keep your boat looking new for a long time.

---

## Condensation Cause and Protection

Water vapor in the atmosphere will condense onto another surface only when that surface is cooler than the dew point temperature, or when the water vapor equilibrium in the air has been exceeded. The dew point temperature is based on the air temperature and relative humidity. A typical example is with 90°F air temperature and 50% RH, the dew point temperature is about 73°F.

Many times, through the evening dew will condense onto all outdoor surfaces like grass, cars, patio furniture, toys, bikes, and the like as the air temperature and surfaces cool below the "dew point." Once the morning sun heats the air temperature or those surfaces heat up enough, the dew will evaporate back into "humidity" and this cycle continues as long as the weather conditions permit.

When you cover your boat, you are sealing the outside air in its present state under the cover. Also, if the boat wasn't dried out, that additional moisture will add to the wetness of the trapped environment. As the air and surface temperatures cool below the dew point the water vapor in that air will condense onto all surfaces inside the boat. In the morning, it will take longer to heat the air and surfaces under the cover as it affords protection, thereby lengthening the time it takes to have the condensation evaporate. It's very possible if weather conditions change that the condensation may not return to vapor for quite some time.

This condition is often misunderstood as the cover "leaking" water through the fabric, but because of the fabric's high hydrostatic water resistance (160 cm) this is not possible. It's understandable to think that having the cover wet underneath is somehow due to it allowing water through, but it is just condensation forming on its surface. It's like camping in a synthetic tent; if you've ever done it, you'll remember water beads form on the tent surface, and bumping the tent would cause them to "rain" on you.

---

## Pooling Water

Water can pool on a cover for various reasons. However, the Malibu cover is designed to combat this by having

the overall features and characteristics work in concert to maximize its resistance. The fabric choice requires it to be lightweight, high strength, coated, water repellent treated, and dimensionally stable. This minimizes the fabric adding weight, and its strength and stability allows for the necessary tight fit.

The “face” surface is treated with a water repellency, lowering the surface tension so water beads up and runs off. The “back” surface is urethane coated, providing additional defense against water penetrating the cover. The new water repellent lowers the surface tension further over traditional treatments where the water beads move sooner joining with others making them run off the cover sooner and faster. It also increases hydrostatic water resistance (the ability of fabric to resist water penetration) from about 100 cm to 170 cm.

All “face” water repellent treatments wear off and the “water beading” will lessen eventually, allowing water to be absorbed by the fabric fibers, but the “back side” urethane coating will provide the second defense of penetration.

A traditional “face” treatment lasts about six to nine months, and tests on the enhanced treatment (BW+) show it will last three to four times longer.

In all cases durability of the treatment is very dependent on the environment and use the cover experiences. Providing the enhanced water repellent as a reapply alternative isn’t possible because it requires a controlled bonding process to properly attach it to the fabric surface. There are various aftermarket repellents available, but because they are mechanically attached, they usually only last about one month or so.

Installing the support poles may also help prevent water pooling on the mooring cover.

---

## Maintaining Zippers and Hardware

- Lubricate zippers periodically using a clear silicone spray.
- Spray silicone on the zipper and work the zipper back and forth.
- Lubricate fasteners periodically using a clear silicone spray to keep corrosion to a minimum. Replace any missing or corroded fasteners.
- Do not use petroleum-based products, i.e. petroleum jelly.

---

## Maintenance Tips

- The real key to canvas longevity is like all things in life: maintenance. Keep the canvas clean of dust, dirt, and environment residue on a regular basis.

- Top fabrics should be cleaned of any dirt buildup at regular intervals.
- We recommend applying a mild, lukewarm soap solution, such as a liquid dishwashing soap, with a soft brush or sponge. Water temperature is not to exceed 100°F. **DO NOT** allow the soap to dry. The fabric must then be carefully rinsed with clear water in order to remove any remaining soap residue. Allow canvas to dry thoroughly. **Do not use detergents.**
- The use of abrasive detergents and/or substrates containing solvents or gasoline will damage the fabric. If using high-pressure or steam-cleaning devices, use caution as improper use could damage the vinyl coating and/or fabric.
- Using harsh chemicals could void the fabric warranty on your top if not recommended by the manufacturer.
- **DO NOT PUT MARINE CANVAS IN YOUR HOUSEHOLD DRYER.**
- **DO NOT DRY CLEAN BOAT CANVAS.**

## NOTICE

The performance results shown in this information are not guaranteed for all upholstery products. The evaluations are indicators after laboratory tests and may not be indicative of field performance.

---

## Upholstery

Even if you do not have or use canvas covers, read the previous material about canvas care as there is information that is applicable to upholstery use as well.

**NOTE:** Topical cleaners must be wiped off with clean water and dried with a clean cloth after application. If not rinsed after direct contact, the cleaner residue on the surface can cause product failure.

---

## Mold and Mildew

As noted in the *Canvas* information above, mold, and mildew problems in the marine upholstery industry have been well documented. The objective of this overview is to review the causes and cures of the unsightly and odoriferous problems, and to suggest actions to reduce their impact on the quality of goods as perceived by the consumers.

---

## The Cause: Micro-organisms

The two principal causes of offensive odors and unsightly stains and growths are bacteria and fungi, commonly

called micro-organisms. Bacteria are simple, single-celled organisms. Fungi, referred to as mold and mildew, are significantly more complex.

A subset of fungal organisms is a type that produces colored byproducts as part of its digestive process. These byproducts are recognized as stains and are typically pink, yellow, purple, or black.

All micro-organisms require a source of energy, carbon for cell structure, nitrogen for amino acid synthesis, essential minerals, and water.

Organisms causing problems in the marine, industrial, health care, hospitality, and home environments are frequently very self-sufficient in synthesizing required bio-chemicals from the most basic molecules. Micro-organisms are ubiquitous. They are everywhere, and thus, microbial contamination is the rule. The total absence of microbes—sterility—is the exception.

### Current Reality

To have a mildew problem, four elements are required. For mildew to proliferate, spores, food, warmth, and moisture are necessary. Elimination of one of these elements would break the cycle, and the mildew problem would be eliminated.

The most likely element to control is moisture. Keep surfaces dry and the ambient air dry, and you can break the link. This is very difficult. Marine upholstery may be dry when one sits on it, but it is constantly exposed to rain, splashes, and wet bathing suits.

Dirt carried by the wind or a sudden shower will carry the spores or seeds to begin the process, inoculating the surface. Surface debris can easily be washed off, but what happens to the contamination that gets into a seam or stitch holes?

A closer examination reveals that a marine seat is a very complex construction. The vinyl that you look at or sit on is a minute part of the total construction. The vinyl is usually attached to a fabric to give it dimensional stability and physical strength. Urethane foam of various thicknesses provides a cushion, and the whole seat is usually built on a piece of plastic.

If contaminated dirt carried by rainwater gets inside the cushion, the biological growth cycle can begin. It is quite common for soil organisms growing in the foam cushion to produce colored by-products, the most notable of which is a pink compound.

This dye is soluble in plasticizer (an ingredient in flexible PVC) and will diffuse and migrate to the vinyl surface. Even though the vinyl compound is adequately protected against mildew growth, pink staining can occur if contact is made with components of a seat which support mildew growth. This stain cannot be removed by washing.

### The Solutions

As in most complex problems, there are a variety of actions one can take to prevent microbial problems. These actions must be directed to the components of the product and the total construction. Working together, they will assure the highest probability of success in eliminating quality problems associated with mildew contamination. The solution consists of four components:

- Keep seats clean.
- Remove or kill any surface growth.
- Use materials that are treated to inhibit fungal growths.
- Keep surfaces covered, if possible, when not in use.

### APPROVED CLEANERS FOR MALIBU UPHOLSTERY (Except Cool Tech\*)

- Formula 409 Antibacterial All-Purpose Cleaner
- Fantastik Multi-Surface Disinfectant
- Armour All Leather Care

The cleaning products above are recommended for use ONLY if diluted per the manufacturer's instructions.

For more approved cleaners, visit [www.morbern.com](http://www.morbern.com). Do not use any product not listed or directed to herein.

*\* If your boat is equipped with Cool-Tech Upholstery, then the ONLY approved cleaning product is water with mild dish detergent. Do not use any product not listed herein.*

### Common Stains and Steps to Treat

- **A:** Medium-soft brush, warm, soapy water, rinse/dry
- **B:** Formula 409 or other approved cleaner, rinse/dry
- **C:** Wipe or scrape off excess (chill gum with ice)

After all cleaning methods, rinse well with clear, warm water.

Stain Type	Step 1	Step 2	Step 3
General Care	A	B	
Dirt Buildup	A	B	
Ballpoint ink*	B	A	
Chewing gum	B	A	
Coffee, tea, chocolate	B	A	
Grease	C	B	A
Household soil	A	B	
Ketchup	A	B	
Latex paint	A	B	

Lipstick	C	A	B
Mildew or wet leaves*	B	A	
Motor oil	C	B	A
Oil-based paint	C	B	A
Permanent marker*	B	A	
Spray paint	B	A	
Suntan lotion	A	B	
Tar/asphalt	C	B	A
Yellow mustard	A	B	

*\* Suntan lotion, tree pollen, wet leaves, and some other materials, including waxes, can contain dyes that stain permanently. These stains are not covered by warranty.*

*\* No warranties or claims are hereby made that the cleaning methods will completely remove the stains and return the material to its original state.*

*\* Attempting to clean Malibu upholstery with any unapproved product may void the warranty and permanently damage the material. Failure to properly clean and maintain the upholstery will also void the warranty.*

## ADDITIONAL ROUTINE CARE

### Soft Grip

The soft grip available through Malibu is constructed of durable, marine-grade material. Occasionally washing with a mild detergent (such as Dawn dishwashing soap) and warm water is required. After cleaning, thoroughly rinse the detergent or cleaner out of the mat and into the bilge.

Allow the boat to remain uncovered for several days to air dry and avoid mold and mildew. See the *Canvas and Upholstery* sections for more information on mold and mildew development and how critical it is to avoid.

### Swim Board

Malibu uses high quality composites to construct swim boards. These durable boards should also periodically receive a thorough cleaning. Use only mild detergents and warm water or marine industry based cleaners that are approved for use on fiberglass and EVA foam.

## NOTICE

Avoid using unapproved products in attempting to clean. These will actually accelerate deterioration of the product, rather than protecting it. Such damage is not covered under warranty.

## Hull and Deck Finishes

Much of the finish surface of the hull and deck is a fiberglass-reinforced resin. While the boat material is sturdy, to ensure an enjoyable experience while boating, the fiberglass and resin layers and gel coat finish (where the paint is embedded) is very thin—only a few millimeters in depth. To keep it looking like new, it is important to keep it clean and waxed.

Only a mild detergent and warm water should be used to clean these surfaces. Avoid all harsh cleaners as they will quickly erode the finish.

If you choose to wash the boat at a car wash, do so with care. Stay back from the boat surface to avoid potential damage from the high-pressure sprayer, and do not use the soap setting as most car-wash soaps are intended to deal with highway-type debris such as salt, road tar, and similar environmental hazards. Wash the boat by hand with mild detergent as noted above, and then rinse carefully.

## NOTICE

Use only a mild detergent, such as dishwashing soap, and warm water to wash the fiberglass and resin and gel coat finishes on the boat. Harsh detergents and cleaners will quickly damage the finish, and this is not covered under warranty.

## SALTWATER CARE AND MAINTENANCE

When boating in brackish or salt water, the post-outing cleaning is critical for the protection of the finishes. The cleaning process, internally and externally, are critical to maintaining the warranty in effect and to preserving the engine components. This is a safety matter.

The potential for corrosion means that boats operating in this type of condition must be equipped with self-sacrificing zinc anodes. These anodes are attached in several locations, including the transom, driveshaft and rudder. Check with your authorized Malibu dealer to be certain that you are aware of all locations of these as they will require periodic



replacement. The anodes serve to significantly reduce the potential for corrosive damage to the permanent metal components on the boat.

Malibu boats are equipped with a closed cooling system (see the *Engine* chapter of this manual) which reduces the amount of water utilized from the body of water during operation. However, some water is necessary and must be drawn onboard and circulated. This function exposes interior portions of the boat, particularly some engine components, to operational exposure to salt or brackish water. The explanation of how to properly flush the engine following an outing appears later in this chapter.

## NOTICE

Failure to follow ANY of the *Saltwater Care and Maintenance* instructions for care and maintenance will void the warranty. Significant damage occurs to the engine and boat if proper maintenance is not followed as outlined in this Owner's Manual.

## Stainless Steel, Chrome, and Aluminum Components

The boat has been constructed with various metal components, all of which require special attention during routine care. Decomposition occurs, resulting in rust and/or corrosion, and it is accelerated when the boat is operated in salt water. (Read carefully the *Saltwater Care and Maintenance* information that follows.)

## NOTICE

Damage that occurs to the boat because of corrosion is not covered under warranty.

While Malibu uses quality metal components chosen for their durability as well as attractive appearance, all metal eventually reacts to water exposure. Therefore, part of the care and maintenance of metal requires that it is kept clean and dry.

After an outing, rinse the metal pieces as well as the rest of the boat, allowing a thorough air drying. To avoid spotting and discoloring, drying with a soft rag or towel will keep the new boat look for many seasons to come. It is also recommended to wash all metal components when you wash your boat as this will help prevent moisture from affecting the surface. Waxing these metal components will also help to preserve the finish. Do not wax powder-coated surfaces as the wax will collect in the textured surface and be extremely hard to remove.

If the boat owner notices rust or deterioration of metal components below the water, even when operated regularly in fresh water, this should be brought to the attention of the authorized Malibu dealer. In some instances, it is necessary to attach self-sacrificing zinc anodes, even when operated in fresh water. Be safe, rather than sorry.

## Routine Salt Water/Brackish Water Protection

After every outing perform a general cleaning of the entire boat, interior and exterior, with clean water. (See flush kit instructions, which follow.) Then reapply the Corrosion Block or WD-40 Long-Term Corrosion Inhibitor or as described in the following instructions, to the exterior of the engine.

## ⚠ WARNING

Boats operated in salt water, brackish water or polluted fresh water must be thoroughly rinsed with CLEAN, fresh water after EACH outing. The corrosive properties of these types of water will cause damage that is not covered under warranty! Hardware—even hardware chosen for its anti-corrosive properties—that is damaged by salt/brackish/polluted water may eventually fail, which could result in serious injury or death to persons onboard.

Although every component on the boat, including the engine, can be adversely affected by salt/brackish/polluted water, upgraded components in the Saltwater Series building process include:

- Stainless steel gas shocks;
- Grounding and bonding of all components below the waterline; and
- A sacrificial zinc anode.

Especially important to the entire protection is the sacrificial zinc anode. The anode is attached to the exterior of the boat, on the transom below the waterline. Other metal components are attached to the transom zinc anode via grounding wire. Anodes are also affixed to the exhaust manifolds.



These anodes provide a greater degree of attraction between the anode's metal and the corrosive action of the body of water than that occurring between the boat's metal parts and the water. Simply, both rust (which is oxidation) and metal reduction, are the result of operating in salt water, and the anodes' purpose is to attract and draw away much of the corrosion from the boat's metal components.

## NOTICE

The sacrificial zinc anodes do not totally eliminate the corrosion process from the rest of the boat and its components. It is critical for the boat to be rinsed and flushed after EACH use. Failure to do so will void the warranty.

Malibu has determined that the use of Corrosion Block is necessary to ensure long life for metal components. The use of Corrosion Block, available at [www.corrosionblock.com](http://www.corrosionblock.com), as directed on the bottle or can is required to keep the warranty in force. (While Corrosion Block is the recommended product, WD-40 Long-Term Corrosion Inhibitor may be used. Regular WD-40 cannot be used as it does not contain all the protective ingredients of the Long-Term Corrosion Inhibitor.)

**Avoid getting Corrosion Block on other, non-metal surfaces, particularly vinyl seats or soft-grip flooring. If this occurs, clean immediately as directed by the product's directions to avoid stains that are also not covered under warranty.**

## NOTICE

Failure to use Corrosion Block as directed on the product label will result in the nullification of the Malibu warranty in instances of corrosion damage. Failure to clean Corrosion Block off non-metal surfaces can result in damage that is not covered under warranty.

## NOTICE

Malibu uses only marine-rated and marine-grade fasteners on all models. If, at any time, it is necessary to replace any fasteners, seek guidance from an authorized Malibu dealer to ensure that such replacements meet the requirements for operation in a marine environment.

To properly protect and ensure long life for vulnerable components, following the operation in salt or brackish water, provide extra attention to the cleaning process.

## ⚠ WARNING

Boats operated in salt water, brackish water or polluted fresh water must be thoroughly rinsed with CLEAN, fresh water after EACH outing. The corrosive properties of these types of water will cause damage that is not covered under warranty! Hardware—even hardware chosen for its anti-corrosive properties—that is damaged by salt/brackish/polluted water may eventually fail, which could result in serious injury or death to persons onboard.

You will need microfiber towels and WD-40 Long-Term Corrosion Inhibitor or Corrosion Block.



The following areas, where equipped, should always receive special attention when cleaning after boating in salt/brackish/polluted water:

**Bow area:** bow grab handles, front cup holders.

**Helm:** windshield bracket, throttle, subwoofer plate, and the driver seat mount.

**Lounge:** cup holders, center plate, grab handles, ski pylon, and tower release hinges (varies by tower).

**Exterior:** front cleat, front ballast drain, navigation light, middle cleat, wakeboard tow mount, rub rail, rear cleat, rear ballast drain, rear cup holders, rear lifting eyes, Surf Gate logo, blower plate, tower speaker mounts, docking lights, front ladder (where equipped), and board racks.

**Under the swim board:** Surf Gate mounts, rudder, swim board mounts, powered swim step mounts (where equipped), propeller, underwater lights, strut, surf pipe exhaust, driveshaft, Power Wedge, and the thruster.

**Other components requiring extra attention:** Any metal seacocks or ball valves, any stainless steel or aluminum screws, stainless steel hose clamps, gas shocks, hinges, tracking fins, buss bars, power terminals, trailer tongue assembly, helm seat slides, starter, engine mounts, alternator, transmission coupler, Bimini metal moving parts, trailer swing-tongue pin, and the underside of the trailer.

Also treat exposed metal inside the engine compartment, paying close attention to the engine and transmission

mounts, and all exposed metal hardware. Even though this area of the boat is not directly exposed to water, there is enough salt in the ambient atmosphere to cause corrosion. Therefore, Corrosion Block should be sprayed on a cloth and then applied to these areas at least once a month.

**Be especially careful to avoid getting Corrosion Block on the areas of the pulleys that make contact with the belt. Corrosion Block could cause belt slippage.**

**Examine all metal components on the boat trailer for signs of corrosion. Corrosion Block should be used on metal trailer parts, too, paying attention to components that become submerged during boat launching and loading. Avoid the brake components (rotors, calipers, and pads).**

Examine the sacrificial zinc anodes. An authorized Malibu dealer can offer guidance regarding the appropriate reduction rate, as well as the time at which anodes need to be replaced. Please note that because this is a natural function of operating in certain bodies of water, the cost of replacement is not covered under warranty.

## Engine Flush Kit

The engine flush kit is used to clean out the raw water pickup and operational areas of the engine. The kit attachment is located on the port side of the transom.

Before beginning this procedure if the boat is in water, be sure the raw water pickup under the boat is closed. If it is not and the boat is in water, raw water will become mixed with the clean water and will diminish the cleaning process.

Open the fixture by twisting the cap counterclockwise. The cap is attached to the fixture by a chain. Attach a garden hose with a fresh water source (without water running) to the fixture. When it is secured, fully turn on the hose (less water flow will be inadequate to flush the system and could result in damage to the system that is not covered under warranty). Water will flow through the water pickup.

Turn the engine on to move water through the system. At no time should you ever exceed 1,100 rpm. The water flow is insufficient to cool the engine via the flush kit if the rpm exceeds 1,100. Water will exit through the surf pipe in approximately 20 seconds while reducing the flow out the pickup.

**Run clean water through the system for approximately 8-10 minutes.**

After running clean water through the system as prescribed, turn the engine off. Turn off the water source for the hose. Disconnect the hose and reinstall the cap securely on the engine flush kit connector at the transom. If the cap is not secure, air will be introduced into the system that will adversely affect the boat's cooling system.

**Before boating again, be sure the raw water pickup is opened.**

## NOTICE

Inspect that the flush cap is tight before every outing or it will suck air and could damage the cooling system. Such damage is not covered under warranty.

## Corrosion in Fresh Water

The immediate previous information covers care and maintenance in salt or brackish water conditions. However, it has been demonstrated that corrosion can occur in any water. As noted at the beginning of the *Care and Maintenance* chapter, keeping your boat and trailer clean—and dry, when not boating—is critical to a satisfactory experience. Corrosion can occur in any humid atmosphere. Even when boating in clean water, part of the care and maintenance should include regularly reviewing all metal areas on the boat and trailer for signs of corrosion. Any sign of corrosion requires immediate attention. Corroded components must be treated and/or replaced to avoid further corrosion. Note that corrosion is not covered under warranty.

## ⚠ WARNING

Corrosion can occur to any metal component of the boat and/or trailer if care is not taken to keep such components clean and dry when not boating. Such corrosion is not covered under warranty. Deterioration of components due to corrosion can result in component failure, which can lead to serious injury or death.

## ROUTINE MAINTENANCE

Attention to the mechanical components of the boat is as critical as any matter in ensuring a long, enjoyable ownership. Some boat maintenance is required prior to and following every outing, some must be done on a regular schedule, and some must be done in accordance with proper storage and winterization. Because of the complexity of some components, such as the fuel system, you will need to seek assistance from an authorized Malibu dealer's service department. Other issues can be easily accomplished by the boat operator.

The following engine and drivetrain-related information appearing in this chapter of the manual is intended for Malibu-built engines and drivetrains. The instructions must be followed in order to keep the warranty in effect.

Note that these instructions should be followed even after the warranty period has expired. The instructions developed

for the powertrains and drivetrains in Malibu boats function as the guidelines to a long-term, positive boating experience.

## ⚠ CAUTION

Failure to follow the care and maintenance instructions as provided in this chapter of the Owner's Manual can result in damage to the engine and transmission that is not covered under warranty. The rest of the care and maintenance information provided for the boat is also critical to long-term success in boat operations. Under some circumstances, failure to follow the instructions, especially as noted on a timely basis, could result in the boat becoming inoperable, stranding boaters and/or placing those onboard in situations that could result in difficult situations.

**The following engine-related information is provided for the Monsoon Engines. Unless otherwise directed, the instructions are applicable to all engines. Detailed information follows this chapter.**

### Before Starting the Engine

- Check coolant level.
- Inspect the sea strainer.
- Check the engine oil level.
- Check the battery holders and the connections.
- Check for odors, particularly fuel odors.

### After Starting the Engine

- Check for odors, particularly from exhaust emissions.
- Be certain that the battery registers as fully charged and that there is enough fuel for the outing.

### After the Outing

- Give the engine compartment a general inspection.
- Check the other components.
- Note how much fuel was used and the state of charge on the batteries.
- Give the boat a good general cleaning as outlined in the *Ongoing Care* information that precedes this section.

### After 10 Hours on the Hourmeter

- Check the safety equipment.
- Have the oil changed by an authorized Malibu dealer. The dealership will also do several other critical inspections of the drivetrain.

### After 50 Hours or Annually (whichever comes first):

- There are certain maintenance routines that must be performed. Due to the complexity of this maintenance, Malibu recommends it be completed by your authorized Malibu dealer.

### Storage and Winterization

This is critical to the life of the boat. These steps include ensuring that all water has been evacuated from the boat, the battery is properly stored, and the boat finishes are protected. Information is also provided regarding the proper lifting of the boat from the water if it will be stored at any time by that method instead of resting on a custom-built Malibu trailer.

## NOTICE

Failure to follow the maintenance instructions provided in this manual will result in the voiding of the *Malibu Limited Warranty Statement*.

## BEFORE STARTING THE ENGINE

## ⚠ DANGER

Before starting the engine, run the bilge blower for about four (4) minutes with the engine compartment open, to ensure the fuel vapor is dissipated prior to operation.

### Check Coolant Level

Be certain the Emergency Safety Lanyard is disconnected, and the shifter/throttle is in neutral. Open the engine compartment hatch and locate the coolant reservoir. The reservoir will be located on the port side of the engine between the manifold and the intake diagonally behind the alternator. The reservoir features a **FULL** marking.

This is not the same as filling the reservoir until it is completely full. The reservoir requires expansion room while in operation; therefore, the full marking is slightly lower than the top of the tank.



## ⚠ WARNING

Never open the coolant reservoir when the engine has been running. This check should be done prior to starting the engine. During operation, pressure builds up in the reservoir. Opening it before the cooling system has had time for pressure relief likely will result in an eruption of fluid. It will also be sufficiently hot to seriously burn skin. Always allow sufficient time for the fluid to cool and return to pre-operation levels.

It may be necessary to periodically add coolant as a small amount of evaporation occurs naturally. When adding coolant, use only a 5-year, extended warranty antifreeze (propylene glycol), either a premixed 50/50 mix or create a mix of 50 percent extended warranty antifreeze plus 50 percent distilled water. (Do not use tap or other water as other elements in the water can cause build ups or deposits within the closed cooling system. This can interfere with proper operation and resulting damage is not covered under warranty.) **The coolant must be propylene glycol coolant only. Never use ethylene glycol or Dex-Cool, nor ever attempt to mix coolants as they will not properly mix. Use of unapproved coolant will void the warranty.**

## Inspect the Sea Strainer



*Sea Strainer, M5/M6.*

*Sea Strainer, LT4.*

Raw water from the body of water is drawn into the boat as part of the cooling system for the engine and drivetrain. Even with the closed cooling systems, it is necessary to circulate additional water as part of an effective cooling system. To protect the system, a sea strainer is installed near the raw water intake, located at the transom next to the steering tiller arm. The sea strainer serves the purpose of keeping debris from entering the raw water-cooling system and causing eventual engine failure. As with any kind of strainer, it is necessary to regularly clean it so that water can flow unimpeded.

When operating the boat in water that is brackish or has

a noticeable degree of weeds and other flora, it may be necessary to clean out the strainer in boats equipped with sea strainers even during an outing. Pay close attention to the engine temperature, which appears on the 15" display. (See the *Dash and Displays* chapter of this manual for more information.) An overheating engine is probably due to inadequate water flow.

## NOTICE

Continuing to operate a boat that is overheating the engine and drivetrain will result in engine failure eventually. Boat operators should routinely review the engine temperature information provided on the 15" display on the instrument panel. Ignoring or failing to take proper steps to reduce the engine temperature, resulting in damage, is not covered under the warranty.

To access the sea strainer, remove the tub located under the starboard transom cushion, revealing the ballast storage compartment. Locate the sea strainer access plate on the rear engine closeout. A removal tool is mounted nearby to help remove the strainer. If you cannot locate the sea strainer, ask for assistance from your authorized Malibu dealer.



*Sea Strainer Access Plate and Removal Tool.*

*Removal Tool.*

To inspect the sea strainer, **leave the engine off** and open the engine compartment. Note the sea strainer's appearance. This step is critical and cannot be overlooked.

Open and lift the cover to expose the filter. Remove the filter and examine for any debris that has accumulated within it. Clean out the filter and then reinstall it in the housing. Hand-tighten the lid to prevent water leakage into the engine compartment.

If it is necessary to check the sea strainer during an outing, turn off the engine first and then close the valve on the water pickup feeding the sea strainer. Make sure to open the valve prior to running the engine; otherwise, it will overheat. Whenever the engine is running, water is being drawn in and you will not be able to inspect the sea strainer.

## Check the Engine Oil Level

With the engine off, remove the engine oil dipstick from the top side of the engine.

With a clean, dry cloth, wipe the dipstick free of residual oil and reinsert it into the engine.

Withdraw the dipstick and note where the measurement reaches on the dipstick.

If the engine oil level is at or below the fill line, add new oil as described in the *Oil Change* information in this chapter of the manual. Never reuse oil or overfill as either can damage the engine, and it is not covered under warranty. Use only the oil specified for your installed engine.

---

## Check All Batteries and Connections

Because batteries contain fluid that is caustic and potentially dangerous to skin and body parts, boat operators need to ensure that the batteries are securely in place. Also, if the connections are loose, erroneous readings may be sent to the boat system, which can cause running and functionality problems. To avoid becoming stranded during an outing, it is important to have accurate voltage readings throughout the time the boat is in use.

To check the batteries, be sure the engine is off.

Locate the batteries—refer to the *Quick Reference Guide* chapter of this manual to determine the correct model-specific location.

- If the posts show signs of corrosion or other debris, remove the battery and clean carefully. To do so, follow these steps.
- Turn the engine off, as well as any systems that are operating on the boat.
- Make sure the battery switch is in the off position.
- Loosen and remove the negative (-) black terminal connection first. If you are using a wrench for this process, be careful to avoid touching the positive (+) red terminal connection as you may receive an electrical shock as a result.
- Next, loosen and remove the positive (+) red terminal connection.
- Disconnect the hold downs that are holding the battery in place.
- Remove the battery.
- Using a battery terminal cleaner, carefully clean the corrosion/debris from the battery posts.
- Using a baking soda and water mix, clean the battery case, taking care to avoid splashing any of the solution inside the battery vents. Rinse with clear water again, avoiding the vents.

## ⚠ CAUTION

Inside the battery is an electrolyte fluid that allows the chemical reaction to provide power. The fluid is comprised of several components, one of which is sulfuric acid. As with most acids, this is caustic and corrosive. If it comes in contact with skin, immediately flush the area with copious amounts of fresh, clean water. Follow up with medical assistance.

- A battery terminal brush may be necessary to remove corrosion from the inside of the battery terminals. Use the same type of baking soda and water mix and rinse with fresh water. Dry with a clean rag.
- Check the box in which the battery is held to be certain that it is not showing signs of corrosion or dirt. Clean, if necessary, as with the above instructions for cleaning the battery. Be sure that the holding box is dry prior to reinstalling the battery.
- Repeat the steps with the second battery.
- After placing the battery back in the holding box, reconnect the hold down. Then reconnect the positive (+) red battery cable connection first. Follow with the negative (-) black battery cable connection.
- Tighten both terminals and then coat with a thin covering of marine dielectric grease. Be sure that the positive terminal rubber boot completely covers the terminal.

## ⚠ DANGER

If it becomes necessary to re-charge a battery from an external source, DO NOT attempt to charge using automotive battery cables or use another boat battery as the source for charging. Some amounts of hydrogen gas are emitted during the charging process. This can be very dangerous. It is critical to keep all sparks, including smoking cigarettes, lighters, or any type of flame, well away from a charging battery. Use the optional battery charger sold by authorized Malibu dealers, or a similar aftermarket battery charger. Using the wrong type of charging procedure or improperly charging a battery can result in an explosion and/or fire that could lead to serious injury or death.

---

## Check for Odors

An unexpected or strong odor can be the first sign of leakage. Both exhaust and fuel leaks have distinctive odors and should never be ignored. If either is present, do not start the engine until the source of the odor has been determined and corrected.

## **⚠ DANGER**

Because gasoline is highly flammable and vapors are more dangerous than the actual liquid fuel, never introduce flame, spark, or electrical ignition into an unknown source of a fuel emission or leak. Always verify the source of and correct any leakages prior to use of the boat.

### **Check Engine Flush Kit Cap**

## **NOTICE**

Inspect that the flush cap is tight before every outing or it will suck air and could damage the cooling system. Such damage is not covered under warranty.

### **AFTER STARTING THE ENGINE**

#### **Check for Odors, Particularly from Exhaust Emissions**

As before starting, an unexpected or strong odor can be the first sign of leakage. Both exhaust and fuel leaks have distinctive odors and should never be ignored. If either is present, do not start the engine until the source of the odor has been determined and corrected.

## **⚠ DANGER**

Because gasoline is highly flammable and vapors are more dangerous than the actual liquid fuel, never introduce flame, spark or electrical ignition into an unknown source of a fuel emission or leak. Always verify the source of and correct any leakages prior to use of the boat.

#### **Verify Batteries Register As Fully Charged And Fuel Level Is Sufficient For The Outing**

Battery voltage and fuel levels are registered on the 15" display. (See the *Dash and Displays* chapter of this manual for details.)

In verifying the battery charge, look for a reading around 13 volts, but no lower than 10.5 volts or higher than 16 volts. Erratic readings are usually a sign of low voltage or loose connection(s). Even if the reading appears correct, if

there were any symptoms of voltage insufficiency or error during a previous outing, check with an authorized Malibu dealer before undertaking another outing. You do not want to become stranded with a dead battery away from the dock.

The current boat models are equipped with a low voltage alarm. Even with a fully charged battery onboard, it is possible to discharge so much that the boat becomes disabled. If running the stereo components with the engine off, periodically check the voltage reading to ascertain how much has been discharged. To avoid difficulties in restarting the engine, the system will shut off the stereo and sound an alarm if the voltage level falls below 10.5 volts. The alarm will continue for approximately two (2) minutes to allow everyone out of the water around the transom, and the boat operator to restart the engine to allow the engine alternator to recharge the battery.

The engine will not start if the battery cables are not secure on the battery posts. Check this first. If the cables are tight on the battery posts and the engine still will not start, the battery may need an assist from an approved battery charger.

As noted above, do not attempt to jump-start a dead battery. This is not only dangerous but puts undue stress on the boat engine's alternator, which may cause it to fail. This is not covered under warranty.

## **NOTICE**

Attaching the wrong battery cable or using jumper cables can result in damage to electrical components on the boat. Such damage is not covered under warranty.

Fuel levels should be noted prior to an outing. Malibu recommends starting all outings with a full tank and returning to shore to refuel whenever the fuel readings drop into the one-quarter ( $\frac{1}{4}$ ) range as falling lower can result in engine issues. (See *Fueling* information in the *Engine* chapter of this manual.) Failure to pay attention to the fuel level can result in the boat's fuel pump failing to maintain its prime or running out of fuel and leaving the boat stranded. Malibu does not pay for towing.

### **AFTER THE OUTING**

#### **Give the Engine Compartment a General Inspection**

Look for signs of leaks or anything abnormal. It's a simple thing, but often the simplest, quick look can pinpoint an issue before it becomes a problem.



---

## Check Other Components

This is a common sense approach. If you've been boating in dirty water, cleaning out the sea strainer now instead of waiting until the debris inside it has dried (and therefore becomes more difficult to remove) makes sense. You want to check the rudder, propeller, and driveshaft to make sure they appear intact, too, especially if you suspect that you may have struck something submerged during the outing. These are easy checks after the boat has been loaded on the trailer and removed from the water.

Check anything else on the boat that did not function as expected during the outing and seek assistance from your authorized Malibu dealer about any concerns and issues prior to the next outing.

---

## Note How Much Fuel and Battery Charge Were Used

Malibu recommends keeping a chart or binder with information from your outing. If you note the conditions during the outing, the length of time, and the final readings, you'll have a much better idea of normal operations. That gives you the clues you need when readings are different, or you are anticipating an outing that will be different and you need to prepare for those conditions.

---

## Give the Boat a Good General Cleaning

*(Outlined in the Ongoing Care information that precedes this section)*

As noted earlier, ongoing care is important. Read that section to determine the normal expectations regarding routine care. Read the Saltwater Series maintenance information that appears earlier in this chapter. Even boating in "clean" water, you add protection and quality care for your boat by following the cleaning requirements. The same components that need added protection from salt/brackish water will also retain their luster and live longer if the same attention is applied to them.

---

## AFTER 10 HOURS ON THE HOURMETER HAVE THE ENGINE OIL CHANGED BY AN AUTHORIZED MALIBU DEALER

**Do not perform your first oil change before 10 hours or later than 15 hours.**

The boat must be returned to an authorized Malibu dealer

for the first service/scheduled maintenance. The purpose is to allow a trained technician to interpret any signs of malfunction or anomaly that may have occurred. Catching these symptoms early is critical to avoiding potentially damaging events that might not be covered under warranty.

The dealer will change oil, transmission fluid, inspect the cooling fluid, clean the sea strainer, inspect the air filter, check the heat exchanger, and perform an alignment check on the engine among a variety of checks and inspections that will yield diagnostic clues to how well the engine and drivetrain are performing during the break-in period.

---

## Check the Safety Equipment

If you have not done so previously, check the fire extinguishers and personal flotation devices. Check the condition of (and replace as necessary) drain plugs, bilge pumps, and exhaust flaps. Repair or replace anything that appears damaged or incapable of performing its function.

---

## AFTER 50 HOURS OR ANNUALLY (WHICHEVER COMES FIRST)

There are certain maintenance routines that must be performed. Due to the complexity of this maintenance, Malibu recommends it be completed by your authorized Malibu dealer.

Your dealer will verify many functions of the boat for you, some of which should never be tested or checked by the consumer, such as the pressurized fuel system that requires unique tools.

Even when an authorized Malibu dealer performs the annual maintenance work, consumers are well advised to pay attention to several components on the boat. These include:

---

## Engine Mounts and Engine Alignment/Propeller

Your engine is held firmly in place by special marine-grade engine mounts that are built and installed to withstand the kinds of stresses unique to a boating environment. Drivetrain alignment is critical to providing a reliable on-water experience. At any time during operation, regardless of the amount of time on the hourmeter, if there is excessive vibration, the boat should be presented to an authorized Malibu dealer to check the alignment.

Note that vibrations can also be caused by a dented or bent propeller, loose propeller or propeller nut. Debris/plant material/ropes wrapped around the propeller shaft can also cause vibrations. Check the propeller for damage.



Continued operation could result in damage to the drivetrain that is not covered under warranty. Not every vibration is the result of misalignment, which can occur even during normal operation, but all vibrations should be checked by an authorized Monsoon Engine dealer to confirm or rule out the alignment as the cause.

## ⚠ CAUTION

Vibrations are a symptom of a concerning issue involving your boat. When a vibration is detected, the boat needs to be analyzed, particularly the engine and drivetrain alignment. Misalignment can cause significant damage to the drivetrain, and such damage is not covered under warranty.

In checking the engine mounts, be sure to do this before starting the engine. Components on the engine can become hot enough to burn skin. Avoid this by checking before starting.

## NOTICE

Any time you suspect an engine mount is loose, it must be tightened. Allowing the engine to shake or move during operation, adversely affects the entire drivetrain and could cause damage that would not be covered under warranty.

### Steering System

Malibu offers two types of steering systems, a standard, manual system, and an optional hydraulic system. The latter is pressurized, and the consumer cannot access or alter the system, nor should they try.

### Shift and Throttle System

As with the steering, never ignore suspicious issues with the shifter/throttle. Anytime the lever does not move smoothly, or the boat does not shift/accelerate/decelerate with ease and smoothness, it is a matter to be resolved by an authorized Malibu dealer. Do not wait for the annual maintenance period to verify safe operations.

### Battery

Verify that battery cables are tight and securely attached to the battery terminals.

Your authorized Malibu dealer can check to see that the battery(ies) appear to be holding charge properly. Unless a battery has fully expended its life cycle, it's impossible to guarantee that the battery will continue to serve, but experience helps the dealer to anticipate whether there is

still service to be expected from the battery.

When it is necessary to replace a battery, be certain to select a marine-grade battery with at least eight hundred (800) cold cranking amps (cca) at zero degrees Fahrenheit.

Considerably more information about batteries is available in the *Dash and Displays* chapter of this manual.

Refer to your battery supplier for advice regarding long-term storage and/or winterization. If your battery manufacturer recommends removing the battery(ies) from the boat, verify whether the manufacturer requires that the battery(ies) is/are fully charged.

## ⚠ WARNING

Follow common sense safety instructions regarding the removal or installation of batteries. Due to potentially explosive fumes and corrosive battery acid, failure to wear protective items and follow instructions correctly could result in serious injury or even death.

- Because of corrosive and explosive qualities in battery acid and fumes, put on safety glasses and mechanic-type safety gloves.
- Determine the size socket required to disconnect the battery cables and bracket nuts. Extensions may be required.
- **ALWAYS DISCONNECT THE NEGATIVE (-) CABLE FIRST.**
- Ensure that the negative cable will not come in contact with the positive (+) cable during the rest of the procedure.
- Disconnect the positive (+) cable, **TAKING CARE TO AVOID ANY CONTACT BETWEEN THE POSITIVE BATTERY CABLE AND ANY METAL.** There may be residual charge still in the electrical system, which could result in a serious electrical shock or burns.
- Batteries should always be stored in a cool, dry location. Manufacturers generally prefer batteries be stored on shelving above floor level.
- Using a brush and a mix of baking soda and water, clean off the battery terminals and cable ends if they show any signs of corrosion. A small amount, especially as batteries age, is not uncommon, but excessive corrosion could be a sign of future service interruptions, and it should be brought to the attention of your authorized Malibu dealer. Allow the terminals and cable ends to air dry.
- Clean the battery lugs with a wire brush.

*Following the storage period, reverse the above steps to reinstall the battery(ies).*

---

## Pumps

The authorized Malibu dealer can inspect and repair/replace ballast and bilge pumps that are not functioning properly. This is both a safety matter and adds to the life of the boat's systems. All pumps will lose functionality over time as the internal components are designed to be self-sacrificing during use, rather than allowing debris to foul and damage more expensive and complex components of these systems. Insist upon pump evaluations during annual maintenance.

---

## Coolant System



There are two elements to the coolant system in Malibu boats: the closed-cooling system and the raw water intake system. Both require attention on a regular basis. Depending on the body of water, attention may need to be frequent.

Instructions for inspecting and cleaning the sea strainer (raw water intake) are provided above, under *Before the Outing*.

The following information concerns the closed cooling system, which should be checked at least annually, even if there have been no instances of overheating during outings.

### NOTICE

Any time the engine temperature rises above normal operating levels (approximately 155-175 degrees) operators must determine the source of the overheating and address the issue. Often, it may be caused by debris in the sea strainer (raw water intake). If cleaning the sea strainer does not result in lower operating engine temperature, have the boat towed to shore and take it to an authorized Malibu dealer for analysis. Failure to immediately address overheating issues can void the warranty.

The closed cooling operates on a 50/50 mix of marine-grade coolant (propylene glycol) such as Peak Sierra brand and clean, distilled water. (Some brands sell coolant conveniently pre-mixed. Be sure to read the label carefully, and do not add any water to coolants that are pre-mixed. This will dilute them to unacceptable levels of mixture.) When mixing coolant and distilled water, do so in a clean container. Dirt,

oil, or other contaminants can cause damage to the cooling system, which may not be covered under warranty.

In the LT4 engine, check both cooling containment units.

The coolant should be inspected after the first 25 hours and annually. It should be changed every two (2) years, or if the propylene glycol does not meet the minimum freezing requirements for a given area when tested with a refractometer, test strips, or ball tester.

---

## Oil System

Replacing the oil filter and oil is an important part of the annual maintenance. Due to environmental concerns, Malibu recommends having an authorized Malibu dealer complete this important function. For those who feel confident they can complete this maintenance step with guidance, the following steps must be followed.



**Have nine quarts of 5W30 synthetic engine oil available for the 5.3L or 6.2L M-Series engines, and nine quarts of 0W40 full synthetic dexos™gen2 oil for LT4 engines. *The use of any other oil or fluid may void the warranty.*** Malibu boats offers a full synthetic oil blended specifically for Malibu engines. For more information about purchasing this oil for use in your boat, contact your authorized Malibu dealer.

Whenever possible, run the boat for approximately five (5) minutes on the water. This will heat up the oil to a better viscosity for draining.

---

### Draining the Oil



- Have a drain pan or container ready. Never pour used oil on the ground or into the water. This is illegal in most

instances and has a negative environmental impact. The oil drain line is located on the side of the engine oil pan through a fitting, and it is approximately four (4) feet long.

- If a siphon pump is not available for use in this process, run the drain hose through the transom drain plug location (with the boat out of the water; removing the transom drain plug while in the water could result in the boat taking on water and sinking). Because the line will not feed through the drain plug with the line cap on, raise the line above the oil pan. This creates a P-Trap as the end of the drain hose is fed through the transom drain plug to allow the gravitational flow of used oil.
- If a siphon pump is available, remove the drain line cap, create a seal on the siphon hose and start the pump. About eight-to-nine (8-9) quarts of used oil should drain into the catch container. Typically, engines burn a small amount of oil during operation. An authorized Malibu dealer technician can advise you whether you should be concerned about the amount of oil used between oil changes.

---

### Replacing the Oil Filter



- Oil filters are located on the front of the engine.
- Remove the oil filter housing cap.
- Use a tool designed for removal or installation of oil filters only. Other tools may crush the filter and release used oil into the engine compartment, the boat or the work area. Remove the cap by turning counterclockwise and replace by turning in the opposite direction. Never force the oil filter housing cap. It should be on the engine securely, but it should release with only hand force when using tools. Some small amount of residual used oil may be inside the filter. Keep a shop rag or similar catch under the filter as it is removed from the boat.
- Some mechanics choose to inspect the oil filter to examine for any evidence of metal shavings or other unwanted signs of engine wear. If you choose to do so, be sure to do so over a container. Clean up any oil that ends up spilled.

- Also examine the O-ring on the cap. If it is damaged, it should be replaced.
- Secure the oil filter housing cap in place on the engine. Tighten securely by hand, but do not force the filter as it may damage or break the seal if over-tightened.

---

### Adding New Oil

- Replace the drain line cap on the drain line and thread the drain line back to adjacent to the oil pan.
- Remove the oil fill cap on top of the valve cover.
- Place a clean funnel within the oil fill cap.
- Pour approximately eight (8) quarts of oil in the engine through the funnel, allowing time for the fill to occur. (Having nine [9] quarts on hand allows you to top off as needed as the system could hold this much with all lines filled). As you approach the eighth quart, slow down (it takes a little time for the oil to move through the oil system) and start watching the fill line on the dipstick. Always clean the dipstick between readings to ensure accuracy.
- **Stop filling oil into the system when you reach the FULL mark on the dipstick, regardless of how much oil has been added. Over-filling can damage the system. NEVER REUSE OIL. ONLY NEW OIL SHOULD BE USED. ONLY 5W30 SYNTHETIC DEXOS™ GEN2 ENGINE OIL SHOULD BE ADDED TO THE OIL SYSTEM OF AN M-SERIES ENGINE AND 0W40 FOR AN LT4 ENGINE.**

---

### Transmission/V-Drive System

Transmission fluid checks must be done **ONLY** when the transmission fluid is heated. Therefore, the boat should be run in a body of water for at least five (5) minutes, and then shut down.

- Remove and wipe down the transmission dipstick.
- Reinsert, but **DO NOT SCREW DOWN FLUSH WITH THE HOUSING AS THIS WILL CAUSE AN ERRONEOUS READING.** Check the level.
- Transmissions should register approximately two-and-a-half (2.5) quarts of automatic transmission fluid.
- V-drive boats: Remove the stick, wipe down, reinsert unseated. Remove and check the level.
- V-drives should have one-and-a-quarter (1.25) quarts of **Mobil SHC 630 Gear and Bearing Oil.**





- If the ATF fluid and Mobil SHC 630 Gear and Bearing Oil appear clear, add the specified fluid only to the full line. **DO NOT** add any fluid other than the specified fluid as it can damage the system and void the warranty. **OVERFILLING CAN DAMAGE THE SYSTEM.**
- Even if the fluids appear clear, replace transmission fluid annually, and V-drive fluids every 1200 hours or every three (3) years, whichever occurs first.

---

## Fuel System

**This is important.** Debris and water may enter the fuel system, even with the careful protection built into the system. Periodic replacement of the fuel filter is required to protect the fuel pump and provide the proper fuel pressure to the engine. Due to the need to use only specialized tools that are not available to the public, and because the fuel lines are pressurized, no fuel system maintenance can be completed by a consumer. One fuel filter is located within the fuel tank. Even though it is more accessible, because it is under pressure this also is restricted to replacement by an authorized Malibu dealer.

While some boat owners may not have a dealer close at hand, this maintenance needs to be completed only by trained technicians with the appropriate, specialized tools. We apologize for any inconvenience.

**An annual replacement is recommended for both filters.**

---

## Hydraulic Steering System

The steering in Malibu boats may feature a hydraulic system that can be maintained or repaired only with specialized tools. Because of the potential for physical harm when working on this system, it cannot be checked, changed or repaired by consumers. Only an authorized Malibu dealer has access to the tools and system.

---

## Safety Equipment

If you have not done so previously, check the fire extinguishers and personal flotation devices (PFDs).

Check the condition of (and replace as necessary): drain plugs, bilge pumps, Repair or replace anything that appears damaged or incapable of performing its function.

---

## Power Wedge III and Surf Gate Manual Extension and Retraction



*Power Wedge*

*Surf Gate(s)*

For boats equipped with these features, it is important for the authorized Malibu dealer to verify the manual extension and retraction function is operational, in case the consumer ever has to perform this due to the failure of the automated system controlled via the 15" display.

For the Power Wedge III, using a small (stubby) straight screwdriver, loosen the small red screw on the actuator beneath the swim board until it stops. Lift or lower the wedge to the position desired and then tighten the screw snugly (but do not over-tighten). Manually cycle the wedge a couple of times after doing this to ensure that the screw is snug, and the wedge moves correctly.

For the Surf Gate, there is a red hex bolt on the side of the actuator. Opening this valve with a 3/8" wrench will allow the Surf Gate to be moved into a closed position. Be sure to re-tighten the bolt to prevent it from drifting open while operating the boat.

---

## For Saltwater Boats

Perform the normal cleaning procedures described above in the salt water/brackish water maintenance information. Boats operated in salt/brackish/polluted water are especially vulnerable to accelerated wear and tear. Never ignore the care and maintenance required to keep your boat under warranty and in good condition for the life of the boat.

Because the process of preparing a boat for long-term storage (more than two weeks) and/or winterization is extremely important and takes some time to accomplish, this is often paired with the annual maintenance preparation. Regardless of timing, however, storage and winterization must never be overlooked, especially in climates where the temperature will fall below freezing.



If the boat will not be used for an extended period, regardless of season, or if the boat will be left in water fulltime during boating season, there are precautions which should be taken.

## STORAGE AND WINTERIZATION

### Hull Gel Coat

If a boat will be left in the water all the time during boating season, Malibu recommends using a bottom, hull paint to protect it. Even with the highest grade of gel coat, continuous exposure to water, even fresh water, will eventually result in damage to the finish. Therefore, in these circumstances, boat owners must protect the finish with an approved hull paint. Your authorized Malibu dealer can direct you to the correct paint and can complete the preparation for you.

### NOTICE

Failure to protect the hull from excessive exposure to water or foul weather can result in damage to the hull paint and gel coat that is not covered under warranty.

### Extended Non-Use

If a boat is not used for an extended period of time—**more than fourteen (14) days**—owners should remove the boat from the water if possible. Perform the expected storage preparations, including removal of all ballast water, water from the bilge area, and periodically check the battery status as certain automatic functions are performed even when the boat is out of the water and the battery switch is in the off position. It may be necessary to occasionally charge the battery. See information above and in the *Electrical Components* section of the *Dash and Displays* chapter of this manual regarding battery maintenance and the proper way to ensure batteries remain charged.

### Lifting the Boat

Many boat owners remove the boat from water by way of a trailer, which allows for transport as well as an excellent way to store the boat if the trailer was designed and built for that boat model. Incorrect fit means that there will be undue stress on the boat's structural unit. Over time, these components could potentially fail, which would not be covered under warranty.

However, some boaters, especially those who are privileged to live on a shoreline or due to the methods of extracting

boats from specific bodies of water, must lift the boat to suspend the boat or use a boat cradle.

When the boat must be lifted, use the lifting eyes only. The boat may not be able to withstand the gravitational forces if it is not lifted properly, and any resulting damage is not covered under warranty.

### NOTICE

Never use the ski pylon or tower as part of the lifting process. These components are not designed to be utilized at any time or any point in the lifting process. Never use the cleats for lifting either. Never lift the boat with any water in the ballast or bilge systems of the boat. The additional weight could cause failure also.

When using the lifting eyes on the boat, an overhead hoist should be used to lift the boat, coupled with appropriately rated capacity straps. Each strap must be rated for the boat weight or higher. See the *Quick Reference Guide* in this manual to determine the boat's base weight, without any added gear. Spreader bars should also be used to prevent side loading of the stern eyes as well as damage to the rub rail on the bow. When lifting the boat, keep the bow slightly higher than the stern to avoid having any water run into the engine exhaust system. Suspension from the lifting eyes is not intended for extended periods.

If using a storage cradle, it must provide proper support to the boat, meaning the boat cannot be supported by resting the hull on the keel. There can be no gaps between the hull and the cradle supports.

Protect all underwear gear protruding from the boat hull from damage. None of these components are rated to support any of the boat's weight.

## Winterizing the Engine — Flush Kit




### To flush the engine:

- Locate the flush kit connector on the port side of the transom, above the swim platform.

- Connect a fresh water source to the flush kit system via a garden-type hose and turn on the fresh water source.
- With the boat shifter in neutral, start the engine and allow it to idle. During the entire process, **DO NOT EXCEED 1,100 RPM** on the engine. The freshwater hose cannot provide sufficient water supply to adequately cool the engine at higher RPMs. Also, never take the boat out of neutral gear.
- After approximately two-to-three (2-3) minutes of flushing, shut off the engine.
- Turn off the freshwater supply.
- Disconnect the hose and reinstall the cap on the flush kit connector.

## NOTICE

Inspect that the flush cap is tight before every outing or it will suck air and possibly damage the cooling system. Such damage is not covered under warranty.

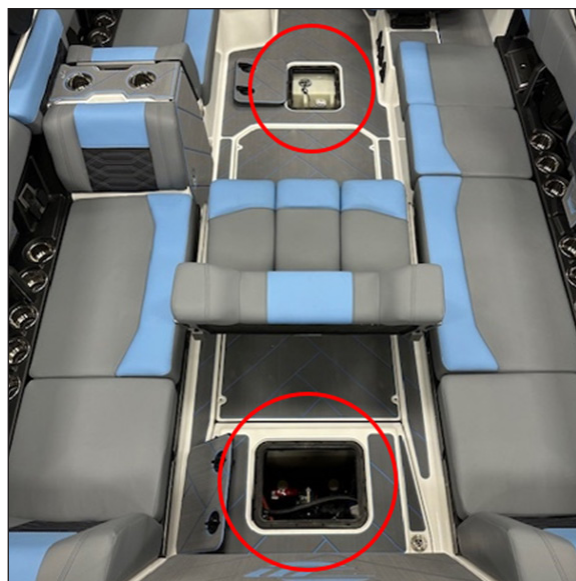


Fill pump valves and bilge T-handles are accessible through the fore and aft access panels (shown above, circled in red). Note: certain models (M230, M242) have **two (2)** fill pump valves for the center tank that must be closed before flushing the system.

### After flushing the engine:

- Remove the T-handle drain plug in the bilge compartment, as well as the engine drain plugs located on the V-drive under the coupler, bottom of the heat exchanger, and both manifolds. This will allow any water in the system to drain out.
- All drain plugs should be placed in a plastic bag and stored in a visible location so they are not overlooked when recommissioning the boat.
- With the boat shifter in **neutral**, start the engine and allow it to idle for 5-10 seconds or until there is no longer water visibly draining from the system.
- While running the engine, do not exceed 1,100 RPM or take the boat out of neutral gear. Do not run the boat for longer than 30 seconds.
- Once water has stopped visibly draining from the system, stop the engine. Leave the drain plug open for the duration of storage/non-use.



1100 GPH Fill Pump Valve Handle.

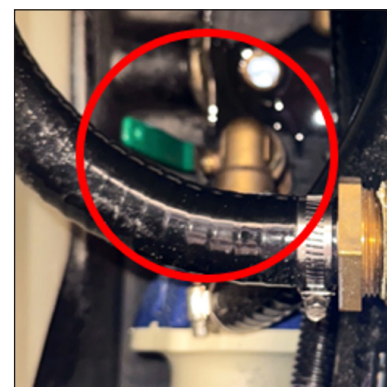

2000 GPH Fill Pump Valve Handle.

## Flushing/Winterizing the Ballast System

The boat may be equipped with a ballast flush system designed to completely flush the boat's entire ballast tank system, from the seacock to the thru-hull outlets, of potential Aquatic Invasive Species (AIS), as well as drain the tanks for winterization. The ballast flush system is controlled via the *Ballast Screen* on the 8" display—refer to the *Dash and Displays* chapter of this manual for more detailed information.

**Step 1:** Close all fill pump valves and remove T-handle. For model-specific fill pump valve locations, refer to the *Quick Reference Guide* chapter of this manual.

**Step 2:** Connect the fresh water flush hose to the ballast flush kit port on the starboard side of the transom.




*Ballast tank flush kit connector, located on starboard side of the transom.*

**Step 3:** Turn on battery isolator switch (ISO) and power up the operating system.

**Step 4:** Turn on fresh water source.

- *Note: Until a tank is selected via the Ballast Screen, flush water will bypass the system and drain into the center bilge compartment, which can be useful for cleaning the interior surfaces of the bilge compartment if so desired. Once a tank is selected via the Ballast Screen, flush water will begin to fill the tank.*

**Step 5:** On the 8" display, navigate to the automatic ballast system flush sequence controls (*Settings > Diagnostics > Ballast*).

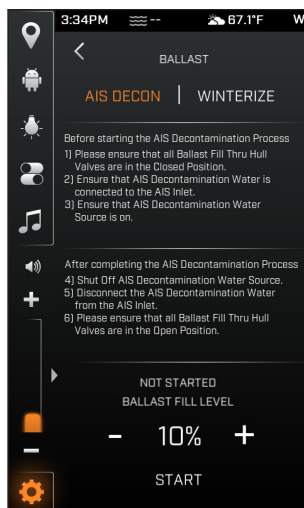

Use the (-) and (+) buttons to set the desired ballast fill level. **IMPORTANT: It is the responsibility of the operator to determine the appropriate fill level for AIS decontamination required by state and local laws.**

**Step 6:** Press *Start* to initiate the automatic flush sequence.

**Step 7:** Once the flush sequence is complete, shut off the flush water source and disconnect the flush hose from the flush kit port, allowing water in the system line to drain out.

**Step 8:** Open all fill pump valves.

**Step 9:**

- **Step 9a:** Leave flush kit cap removed until completion of Step 9b.
- **Step 9b:** From the *Ballast Screen*, select *Winterization* to show the winterization flush sequence controls. Press *Start* to initiate the automatic winterization flush sequence.
- **Step 9c:** Once the flush sequence is complete, re-install flush kit cap.

**Step 10:** Turn ISO to OFF and power down the operating system.

## For Extended Storage and Winterization

There are multiple steps required to prevent damage to the boat when it will not be used for an extended period, especially during colder weather months. Malibu recommends having an authorized Malibu dealer execute the storage/winterization process, followed by recommissioning when ready to begin use.

### Add Gasoline Stabilizer

For Monsoon engines, fill the fuel tank full. You will need to use a STA-BIL® gasoline stabilizer. **Reminder: Stabilizers work in fresh gasoline only.** Adding a stabilizer after storage during the recommissioning period will not eliminate the gumming or water separation that may have occurred. **Stabilizers are preventatives, not curatives.**

**All gasoline stabilizers have a limited life. Be sure to review the requirements as stated on STA-BIL® packaging or seek assistance from your authorized Malibu dealer in determining how long and under what conditions you can reasonably expect the STA-BIL® to serve as designed.**



**Gasoline should never be stored for a period to exceed six (6) months.** If it is necessary to remove gasoline from the tank and dispose of it, be certain to do so in compliance with local, state, and federal environmental laws/rules/ordinances.

### Remove All Water


All water that can be removed from the boat must be. This includes water in the engine, ballast, and bilge areas. Water that is not removed may freeze. Expansion and contraction




that takes place as a result will damage affected areas of the boat. Such damage is not covered under warranty. This damage can be extensive and very expensive to repair.

---

### Engine Drain Plugs

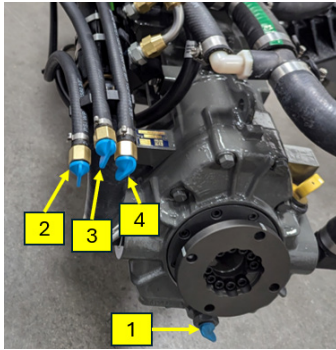

*Drain Plug Locations – M5/M6*

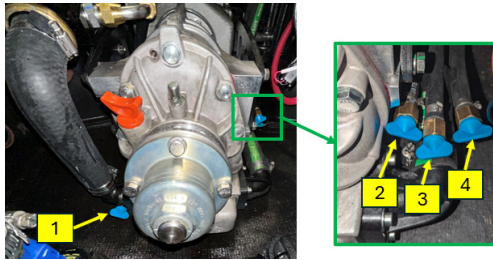

*Drain Plug Locations – LT4*

There are four (4) drain plugs on the Monsoon engine (see images) in addition to the T-handle in the bilge compartment and the transom drain plug.

Run the engine for three (3) seconds, then remove all drain plugs. **ALL PLUGS MUST BE REMOVED, AND ALL WATER DRAINED PRIOR TO STORAGE TO PREVENT POTENTIAL FREEZING AND DAMAGE TO THE ENGINE AND BOAT.**

All three (3) drain hoses should be removed from the clip and dropped down into the bilge to drain any residual water in the system. This is the lowest area of the circulating water system, and gravity should allow any water to drain that was not previously drained.

## NOTICE

All drain plugs in the boat must be removed and all water drained prior to storage, particularly during winter months, to avoid potential freezing and damage to the engine and the boat. Such damage is not covered under warranty.

---

### Shower

If the boat is equipped with a shower, disconnect the hose and blow out any water.

---

### Sea Strainer

After the engine has been flushed, remove the sea strainer cup and store it in a dry location at room temperature.

---

### Coolant

To ensure the glycol/water mix in the engine won't freeze during storage/non-use, check the glycol quality and freeze point by using an antifreeze coolant tester (available at most local automotive shops). Make sure the coolant freeze point is sufficient to prevent freezing in the environment in which the boat will be stored. Replace coolant and re-test if the freeze point is found to be too high.

---

### Ballast System

The electric valves (not visible) need to be opened to let water escape to avoid freezing that could crack the valves.

To open the valves and remove residual water in the ballast system, follow these steps:

- With the boat out of the water, navigate to the *Ballast Screen* on the 8" display (*Settings > Diagnostics > Ballast*).
- Select *Winterization* to show the winterization flush sequence controls.
- Press *Start* to initiate the automatic winterization flush sequence.

---

### Batteries

If the batteries are removed for storage, they should be fully charged prior to removal. Batteries should be stored in cool (but not cold), dry locations. Never store batteries near heat devices or anything that causes a spark or electrical charge. Fully recharge the battery prior to reinstallation.

**NOTE: If the battery is removed from the boat, the automatic bilge system will not operate, and water will not be discharged from the bilge. Therefore, boats that are stored in water must not have the batteries removed.**

---

## Additional Steps to Complete for Storage

- Drain any residual water from the plumbing.
- Thoroughly wash and clean the boat, inside and out, as instructed in the *Ongoing Care* section of this chapter.
- Leave the bow slightly elevated so that any further draining of water from the bilge system will run out and not accumulate inside the bilge system.
- Remove the drain plug(s) and place them in see-through plastic sacks or containers. Place them inside the boat so that they will be immediately locatable for recommission.



- If equipped, remove all bilge pump filters and store them in a dry, clean location.
- Using low-tack tape, tape around the exhaust flap (where equipped) so that vermin cannot chew their way into and nest inside the exhaust system.
- Apply wax to the entire exterior surface to protect the hull and deck finishes, particularly from dampness and condensation that may occur.
- Remove the propeller and store in a safe place.
- Remove the seat cushions and store in a cool, dry location. Open all storage compartments and areas to allow air circulation. Without it, mold and mildew may invade the compartments.
- Prop the engine compartment lid open several inches to allow for air circulation.
- If the boat will be outdoors, use an optional Malibu canvas cover that has been sewn to fit the boat deck snugly and not allow intrusions of rain and/or snow.
- Chock the trailer wheels if the boat is stored on a trailer.
- Prior to starting the engine in the water, key it on and off two or three times, allowing several seconds between key-on cycles, prior to cranking the engine to fully start. The purpose of this is to prime the fuel system. If the engine appears reluctant to start, allow a couple minutes of cool down for each attempt to crank and start the engine. Watch the 15" display for readings and listen for abnormal sounds. Keep speeds low until the engine temperature rises to the normal operating temperature.
- Reinstall all bilge pump filters if they were removed.

## NOTICE

Failure to properly perform annual maintenance, plus storage/winterization procedures as described in this manual is likely to result in damage to the boat, components, drivetrain, and features. Such damage is not covered under warranty.

---

### **WHEN RECOMMISSIONING THE BOAT, REVERSE THE ABOVE STEPS, PLUS ADD THE FOLLOWING:**

- Check all fluids, oil, and coolant. Add, replace, or change as necessary.
- Check the engine for cracks and leaks that may have been caused by freezing temperatures and/or water.
- Check all hose clamps to be certain they are secure and that the rubber hoses have not deteriorated over the period.
- Reinstall the propeller if it was removed. Grease the shaft taper prior to reinstalling the propeller.
- Have the alignment between the output flange on the transmission and the propeller shaft flange checked. An authorized Malibu dealer has the measurement detail for correct alignment.

## MAINTENANCE SCHEDULE — MONSOON ENGINES

Component(s)	Service Task	Annually*	First 10 Hrs	Every 50 Hrs	Every 100 Hrs	Every 150 Hrs	Every 300 Hrs	Every 2 Yrs	Other
Engine Oil & Filter**	Change	X	X	X					
Transmission Oil	Change	X	X		X				
V-Drive Oil	Change								1200 Hrs / 3 Yrs*
Raw Water Impeller	Change	***		X					
Sea Strainer #	Inspect	X	X	X					
Hoses & Hose Clamps #	Inspect	X							
Engine Coolant	Inspect	X	X						
Engine Coolant	Change							X	
Serpentine Belt	Inspect	X							
Serpentine Belt #	Change						X		
Air Filter	Inspect	X							
Air Filter #	Change							X	
Engine Fuel Filter	Change					X			
Fuel Pump Filter	Change					X			
Spark Plugs	Change								300 Hrs / 2 Yrs*
Shaft Alignment	Inspect	X	X			X			
Heat Exchanger	Inspect	X							
Sacrificial Anodes #	Change	X							

\* *Whichever comes first.*

\*\* *If the engine is subject to extreme use such as excessive ballast weight, long idle time, low use, elevations above 5,000 ft., or commercial use, it is recommended to change oil and filter every 25 hrs.*

\*\*\* *First of the season.*

# *Replace sooner if regular inspection indicates wear or damage.*

***It is always recommended that these requirements be performed by an authorized Malibu dealer, as their service technicians will have the proper equipment, training, and resources to best fulfill all maintenance requirements. Please note that routine maintenance is not covered by the Malibu Boats Limited Warranty. For details, please consult the Limited Warranty Statement.***

## **MALIBU BOATS, LLC LIMITED WARRANTY (HEREAFTER THE “LIMITED WARRANTY”)**

### **Section 1. Certain Limitations and Disclaimer of Implied Warranties**

THE LIMITED WARRANTY SET FORTH HEREIN IS IN LIEU OF ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS OR IMPLIED, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. MALIBU BOATS, LLC DISCLAIMS, AND THE PURCHASER HEREBY EXPRESSLY WAIVES, ANY AND ALL OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND OR NATURE, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE WARRANTIES WHICH ARE IMPLIED BY, AND ARE INCAPABLE OF EXCLUSION, RESTRICTION OR MODIFICATION UNDER APPLICABLE LAW. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF. ANY IMPLIED WARRANTY THAT IS FOUND TO ARISE BY STATE OR FEDERAL LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR ANY IMPLIED WARRANTY OF FITNESS, IS LIMITED IN DURATION TO THE DURATION SET FORTH IN THIS LIMITED WARRANTY OR THE DURATION SET FORTH BY APPLICABLE STATE OR FEDERAL LAW, WHICHEVER IS SHORTER.

PERFORMANCE OF REPAIRS AND NEEDED ADJUSTMENTS IS THE EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WITHOUT EXCLUSION, MODIFICATION OR RESTRICTION, OTHER THAN UNDER APPLICABLE LAW. MALIBU BOATS, LLC SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SUCH AS, BUT NOT LIMITED TO, LOST WAGES, SLIP FEES, TRANSPORTATION TO OR FROM REPAIR, OR RENTAL EXPENSES, RESULTING FROM BREACH OF THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY, OR OTHERWISE, EVEN IF MALIBU BOATS, LLC HAS BEEN ADVISED OF OR SHOULD HAVE FORESEEN THE POSSIBILITY OF SUCH

DAMAGES, AND EVEN IF ANY MALIBU BOAT OR COMPONENT PART THEREOF FAILS OF ITS ESSENTIAL PURPOSE. THIS EXCLUSIVE REMEDY SHALL NOT BE DEEMED TO HAVE FAILED OF ITS ESSENTIAL PURPOSE AS LONG AS MALIBU BOATS, LLC IS WILLING AND ABLE TO REPAIR OR REPLACE ANY DEFECTIVE GOODS SUBJECT TO THE TERMS PROVIDED HEREIN. UNDER ANY CIRCUMSTANCE, THE ENTIRE LIABILITY OF MALIBU BOATS, LLC IS LIMITED TO THE LESSER OF THE REPAIR OR REPLACEMENT OF ANY DEFECTIVE COMPONENT OR AFFECTED PORTION OF THE MALIBU BOAT, OR THE ACTUAL PRICE PAID FOR THE MALIBU BOAT, MONSOON POWERTRAIN, AND/OR TRAILER.

SOME STATES DO NOT ALLOW LIMITATIONS ON TIME LIMITS OR EXCLUSIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS WHICH MAY VARY FROM STATE TO STATE, BY JURISDICTION, AND COUNTRY. TO THE EXTENT THAT YOUR STATE DOES NOT ALLOW ANY EXCLUSION OR LIMITATION EXPRESSED HEREIN, SUCH EXCLUSION OR LIMITATION WILL NOT APPLY TO YOU. ALL OTHER ALLOWABLE LIMITATIONS OR EXCLUSIONS SHALL APPLY TO YOU.

### **Section 2. The Limited Warranty Application and Terms; Transferability**

Malibu Boats, LLC (“Malibu Boats”), warrants to the original user or purchaser, whoever comes first (hereafter the “Purchaser”), that each new and unused Malibu boat (“Malibu Boat”), Monsoon Powertrain manufactured by Malibu Boats, where applicable (“Monsoon Powertrain”), and/or Malibu trailer (“Malibu Trailer”), shall under normal authorized use remain free from defects in craftsmanship and materials during the applicable warranty periods, in accordance with and subject to the terms, conditions and limitations as described in this Limited Warranty. Any and all references to Monsoon Powertrain within this document refer to only those powertrains, complete or component, which are manufactured by Malibu Boats. Malibu Boats equipped with powertrains, complete or component, manufactured by outside suppliers are covered under, and subject to, limitations and time duration as described within the limited warranty statements provided by the supplier.

Subject to all other terms, conditions, and limitations, 1) original Purchaser(s) of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer and, 2) second owners of the Malibu Boat and/or Malibu Trailer who purchase the boat within five (5) years of the earlier of (a) the date the boat was purchased by the first retail purchaser through an authorized Malibu Boats Sales facility, or (b) the date the boat was first put into service as a demonstrator or other use except for commercial purpose (from which there is no transferability of the limited warranty), and qualify for and complete a warranty transfer as explained below, are provided coverage under the Malibu Boats Limited Warranty.

**Note: This Limited Warranty is expressly conditioned upon the timely dealer's completion of the warranty registration process to Malibu Boats. Although not obligated to and without creating such an obligation, this will enable Malibu Boats to notify you of any necessary performance or safety modifications to your Malibu Boat, Powertrain and/or Trailer and to verify ownership in case a warranty claim is filed on your Malibu Boat, Powertrain and/or Trailer.**

The Limited Warranty is expressly subject to the following terms, conditions and limitations. All warranty applications are dependent upon the Purchaser following the guidelines established for appropriate and reasonable care and maintenance of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer and operating his or her Malibu Boat, Monsoon Powertrain and/or operating the Malibu Trailer reasonably and as directed in this Owner's Manual, and as directed in any additional directions and/or owner's manuals relating to any specific component part or parts of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer (the "Guidelines and Directions"). **Purchaser's failure to follow such Guidelines and Directions shall void this Limited Warranty.**

All repairs performed by Malibu Boats, or its authorized service facilities, will be performed using either new or re-manufactured parts. Malibu Boats may, at its option, install parts which have substantially similar or greater performance characteristics if an identical replacement part is no longer available.

No person or entity is authorized to make any additional or revised statement or warranty, express or implied, on behalf of Malibu Boats or any component supplier beyond what appears within this Limited Warranty.

## Limited Warranty Summary

Coverage Type	Coverage Period*
<b>Structural Limited Warranty</b>	Lifetime
<b>Powertrain Limited Warranty</b>	Earlier of Sixty (60) Months or 500 Hours
<b>Trailer Limited Warranty</b>	Sixty (60) Months
<b>Trailer Paint Limited Warranty</b>	Twelve (12) Months
<b>Base Limited Warranty – Freshwater Boats</b>	Sixty (60) Months
<b>Base Limited Warranty – Saltwater Boats</b>	Thirty-six (36) Months
<b>Gel Coat &amp; Powder Coat</b>	Twelve (12) Months

\*Coverage Period is from the date of the original retail purchase or initial use of the Malibu Boat, whichever first occurs.

The repair and/or replacement of components or parts under warranty does not extend the warranty period beyond the original expiration date.

### Section 2.1. Structural Limited Warranty.

For the life of the boat, Malibu Boats will repair structural materials or structural workmanship supplied by it during the construction of the hull, deck, floor liner, or stringer, which are determined by Malibu Boats to contain substantial manufacturing defects. This Structural Limited Warranty does not apply to the Malibu Boat's gel coat or powder coat (see below for *Gel Coat & Powder Coat Limited Warranty*), powertrain (see below for *Powertrain Limited Warranty*), trailer (see below for *Trailer Limited Warranty*) or any cosmetic aspects of the hull, deck, liner, or stringer. The entirety of the structural warranty is limited to the specific laminates or bonding of laminates for the hull, deck, floor liner, or stringer only.

### Section 2.2. Base Limited Warranty, Powertrain Warranty and Trailer Limited Warranty.

For a period of sixty (60) months or 500 hours as recorded by the boat's hour meter, whichever is earlier, for fresh water boats and thirty-six (36) months for salt water boats, beginning on the date of the original retail purchase or the initial use of the Malibu Boat, whichever occurs first, Malibu Boats will repair or replace materials or workmanship supplied by it during construction of the Malibu Boat, including parts and labor, which are determined by Malibu Boats to contain substantial manufacturing defects.

For a period of sixty (60) months for powertrains manufactured by Malibu Boats, beginning on the date of the original retail purchase or the initial use of the Malibu Boat,



whichever occurs first, Malibu Boats will repair or replace materials or workmanship supplied by it during construction of the Monsoon Powertrain, including parts and labor, which are determined by Malibu Boats to contain substantial manufacturing defects. Powertrains manufactured by suppliers and installed by Malibu Boats will be subject to the limitations as described and provided by the supplier.

For a period of sixty (60) months for trailers, beginning on the date of the original retail purchase or the initial use of the Malibu Trailer, whichever occurs first, Malibu Boats will repair or replace materials or workmanship supplied by it during construction of the Malibu Trailer, including parts and labor, which are determined by Malibu Boats to contain substantial manufacturing defects.

This Limited Warranty does not provide coverage for any component part that is at any time covered by any warranty provided by any third party, other than Malibu Boats, including, but not limited to the manufacturer of the component part. Component parts shall include, but are not necessarily limited to, any items that are fastened to the boat through either mechanical means (screws/bolts) or chemical means (adhesives), which may or not be manufactured by Malibu Boats. Some examples of component parts include gauges, carpet, floor panels, upholstery substrates and bases, brake actuator, brakes, axles, lights, spark plugs, filters, etc. In the event that any warranty coverage for any component part is rendered or deemed void due to actions of the Purchaser or any third party other than Malibu Boats, this Limited Warranty will not provide warranty coverage for the component part.

Towers are configured by Malibu Boats for factory-installed components. The installation of any components onto the tower of any Malibu Boat after it leaves Malibu Boats' factory ("Non-Factory Tower Components") may require adjustments to the tower. Further, certain Non-Factory Tower Components may not be suitable to be installed on any Malibu Boat's tower. If Malibu Boats determines that any Non-Factory Tower Components have caused or contributed to the need for any repairs to the tower of a Malibu Boat, or to any other aspect of a Malibu Boat, Malibu Boats, in its sole discretion, may deny coverage for such repairs. It is the sole and exclusive obligation of the Purchaser to verify and ensure that all Non-Factory Tower Components are suitable to be installed on any Malibu Boat's tower, and that all Non-Factory Tower Components are properly installed on any Malibu Boat's tower.

---

### **Section 2.3. Gel Coat, Powder Coat and Trailer Paint Limited Warranty.**

**Note:** Minor distortions or imperfections resulting from the handcrafted application of the gel coat on a Malibu Boat are considered normal and unavoidable. Gel coat, powder

coat and trailer paint maintenance is the Purchaser's responsibility. Conditioned on the Purchaser having provided and performed all gel coat, powder coat and trailer paint maintenance and care described in this Owner's Manual, for a period of twelve (12) months, beginning on the date of the original retail purchase or the initial use of the Malibu Boat and/or Malibu Trailer, whichever occurs first, Malibu Boats will repair materials, or workmanship supplied by it, in applying the gel coat and/or powder coat finish to the boat, or paint finish to the trailer, which are determined by Malibu Boats to contain substantial manufacturing defects. This Gel Coat, Powder Coat and Trailer Paint Limited Warranty shall not include or provide coverage for gel coat finish, blistering, discoloration, scratching, cracks caused by negligence, impact or collision, stress crazing, fading or osmosis, or damage caused by in-water storage, scratches and other damage caused by trailering, including normal usage.

---

### **Section 3. Limited Warranty Exclusions and Limitations**

In addition to any prior limitations and exclusions, the following are NOT covered under this Limited Warranty:

- normal maintenance of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer or any component thereof;
- normal wear-and-tear of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer or any component thereof;
- damages or needed adjustments caused by items that are added, altered or changed after the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer leaves the possession of Malibu Boats, including but not limited to installation of aftermarket towers, tower accessories, ballast systems, barefoot booms, canvas accessories, and hull bottom painting;
- modification, alteration, unauthorized repair or replacement of components, including but not limited to damages resulting from such installations, on the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer;
- damages caused by accident (including impacts and collisions with any object), abuse, misuse, neglect, negligence, mishandling or alteration, including any damages caused by or during trailering or towing;
- damages caused by heat, fire, explosion or freezing (including the failure to perform proper winterization or preparations for storage or lack of use for periods in excess of thirty [30] days);

- damages caused by atmospheric fallout, chemical treatments, tree sap, salt, ocean spray, mold, animal droppings, lightning, hail, rain, flooding, wind, sand, floods or other environmental or natural conditions or Acts of God;
- staining, blistering, or discolorization resulting from failure to coat the hull with marine-grade hull paint on boats that are allowed to remain in bodies of water for extended periods (more than 14 days);
- damages caused by vandalism or theft;
- corrosion or damage, including oxidation, electrolysis including that which occurs to chrome plated, stainless, anodized or aluminum finish or the colorfastness of finish. Failure to follow the instructions within this Owner's Manual regarding corrosion prevention and operation in salt or brackish water may result in or contribute to these types of damage and are not covered under the Limited Warranty; damages caused by aftermarket cleaning products or additives not specifically approved by Malibu Boats;
- damages due to insufficient or improper maintenance, lack of maintenance, or delay of repair (unless specifically and directly authorized by Malibu Boats warranty department in writing);
- damage or contamination resulting from leaking or spilled fluids including, but not limited to, fuel or powertrain fluids;
- conditions resulting from use of the boat for anything other than recreational purposes (Note: Commercial use as described in this Owner's Manual will affect the length of warranty coverage. Please refer to *Section 5: Commercial Use Exclusions/Restrictions* for specific details);
- manufacturing variations or imperfections in cosmetic, convenience or aesthetic components or features of the boat, including the gel coat finish, which have no effect on use or safety;
- damages caused by the use of any trailer purchased through any entity other than Malibu Boats;
- damages caused by improper support of the boat on davits, hoist system or boat lift of any kind;
- damages caused by improper weight distribution or excessive weight combinations of persons aboard, ballast or simulated ballast and gear;
- any material, component or part of the boat that has a warranty period and/or conditions as specified by the producing entity which differs from this Limited Warranty unless such warranties are administered directly by the producing entity;
- damages caused by water intrusion into any part of the boat (including, but not limited to, the glove box and various storage compartments);
- performance characteristics, such as speed, acceleration, fuel or oil consumption, etc., as they are estimated and can vary as dictated by individual conditions;
- any and all consequential damages including, but not limited to, costs incurred for haul-out, launching, towing, storage charges, telephone, expedited shipping of replacement parts, or rental charges of any type (including slip fees), inconveniences, or loss of time or income;
- components such as Surf Gate™, fins and wedges not installed at the time of manufacture. Post-manufacture installation of any of these items, as well as any other component not installed at the time of manufacture, will void the warranty and other components of the boat that have their own warranty(ies) due to potential damage to the boat and possible danger to occupants;
- damage or injury resulting from failure to comply with recall notices, service bulletins and advisories, or requests from Malibu Boats to repair the boat or its components;
- damage or injury resulting from speeding, demonstration or any type of racing;
- damages resulting from the failure to properly maintain and care for the boat and its components in accordance with the instructions found within this Owner's Manual;
- shop supplies used in correction work, such as, but not limited to, sealants, lubricants, cleaning supplies;
- minor adjustments to the powertrain, such as, but not limited to, investigation of components, cleaning or adjusting spark plugs, verification of fluid levels and lubricants, controls for the powertrain;
- damage to water pump impellers, or any component of the cooling system that Malibu Boats determines, at its sole discretion, could have been avoided either through reasonable boating operation and practices or by maintenance as required and directed in this Owner's Manual;
- damage to the engine starter motor or other assemblies and components determined by Malibu Boats, at its sole discretion, is the result of excessive attempts to start the engine, or by condensation/submersion of these and similar components;
- damage resulting from water intrusion in the intake or exhaust system;
- damage resulting from the use of lubricants, gasoline, or other fluids other than those specified in this Owner's Manual or by subsequent approval by Malibu Boats following publication of this Owner's Manual;

- damage to the powertrain resulting from a lack of sufficient cooling or the powertrain operation outside a sufficient body of water to provide adequate cooling, or cooling failure resulting from blockage by foreign objects;
- damage resulting from erroneous service by the customer or technician not authorized by Malibu Boats to perform service or corrections;
- damage that cannot be traced to material defects in materials or workmanship, as determined by Malibu Boats;
- damages resulting from the use of any non-Malibu Boats-supplied boat cover (The sole and exclusive approved color for boat covers offered by Malibu Boats is grey.); and
- the use, even temporarily, of a non-Malibu Boat Trailer will void the Gel Coat & Powder Coat Limited Warranty.

## Section 4: International Exclusions/Requirements

Importing or exporting any Malibu Boat, Monsoon Powertrain and/or Malibu Trailer manufactured in the United States by Malibu Boats (“US Malibu Boat,” “US Monsoon Powertrain” and/or “US Malibu Trailer”) into Australia or New Zealand (the act of importing or exporting any US Malibu Boat, US Monsoon Powertrain and/or US Malibu Trailer into Australia or New Zealand) immediately and completely voids any and all coverage provided under this Limited Warranty and any and all obligations owed by Malibu Boats relative to the US Malibu Boat, US Monsoon Powertrain and/or US Malibu Trailer. This Limited Warranty does not provide coverage to any US Malibu Boat, US Monsoon Powertrain and/or US Malibu Trailer purchased from a dealer in another country where the primary use of the US Malibu Boat, US Monsoon Powertrain and/or US Malibu Trailer will require the US Malibu Boat, US Monsoon Powertrain and/or US Malibu Trailer to cross an international border. The Limited Warranty will not be honored by Malibu Boats for any US Malibu Boat, US Monsoon Powertrain and/or US Malibu Trailer that is acquired by the Purchaser through an international cross-border purchase. All repairs that are covered under this Limited Warranty must be performed in the country where the US Malibu Boat, US Monsoon Powertrain and/or US Malibu Trailer was originally purchased.

## Section 5: Commercial Use Exclusions/Restrictions

The use of any Malibu Boat, Monsoon Powertrain and/or

Malibu Trailer for commercial purposes, including but not limited to as a demonstrator, or in connection with any promotional program, ski, wakeboard, or surf school or show (“Commercial Purposes”) shall alter the Limited Warranty as set forth herein. The Limited Warranty applicable to any Malibu Boat, Monsoon Powertrain and/or Malibu Trailer used for any Commercial Purpose may not be transferred to any subsequent owner of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer. The Limited Warranty coverage periods for any Malibu Boat, Monsoon Powertrain and/or Malibu Trailer that has been used for Commercial Purposes, while owned by the original Purchaser, are as follows:

Coverage Type	Coverage Period*
<b>Structural Limited Warranty</b>	Five (5) Years
<b>Powertrain Limited Warranty</b>	Earlier of Twelve (12) Months or 300 Hours
<b>Trailer Limited Warranty</b>	Twelve (12) Months
<b>Base Limited Warranty</b>	Twelve (12) Months or 100 Hours
<b>Gel Coat Limited Warranty</b>	Six (6) Months

\*Coverage Period is from the date of the original retail purchase or initial use of the Malibu Boat, whichever first occurs.

The repair and/or replacement of components or parts under warranty does not extend the warranty period beyond the original expiration date.

## Section 6: Warranty Voiding Events

The following events will automatically void and discharge Malibu Boats from its obligations under this Limited Warranty and discharge Malibu Boats from any obligations herein:

- the unauthorized disconnection, tampering with, or altering of the Malibu Boat’s hour meter;
- the unauthorized disabling of any warning device or system installed in any Malibu Boat and/or Monsoon Powertrain;
- the unauthorized disconnection, disturbance or compromise of any wires, hoses, tubes, cables, looms or other components of the Malibu Boat’s electrical or fuel systems;
- the use of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer in any criminal enterprise or to perform any criminal acts;
- the determination by any state or federal entity or private insurance carrier that the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer is a total loss or fit only for salvage; and

- the purchase of the Malibu Boat, Monsoon Powertrain, and/or Malibu Trailer from an unauthorized third party such as—but not limited to—a bank (repossession), insurance company, salvage yard, or auction.

---

## **Section 7: Other Matters Related to the Limited Warranty**

In addition to the Limited Warranty terms and exclusions noted above, the following are additional important considerations regarding the Limited Warranty:

---

### **Section 7.1. Pre-Delivery.**

Defects and/or damage to the finish surfaces, trim, upholstery or other observable cosmetic components of your Malibu Boat, Monsoon Powertrain and/or Malibu Trailer may occur during production. These items are usually detected and corrected prior to shipment to the dealership or by the retail dealer prior to delivery to the retail customer.

Nonetheless, consumers are encouraged to inspect the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer for this type of damage prior to taking delivery, and all such defects or damage must be reported to the retail Malibu Boat dealer at the time of delivery to have any items covered by this Limited Warranty addressed, and to have any covered defects repaired at no cost to the Purchaser.

---

### **Section 7.2. Boat Operation, Care and Maintenance.**

To ensure the maximum benefit from ownership of this boat, Malibu Boats requires that you follow all of the instructions in this Owner's Manual, including all accompanying maintenance or service schedules and support material.

Because questions may sometimes arise relating to the cause of a particular failure, Malibu Boats strongly recommends keeping detailed records of any and all maintenance or service performed on the boat, powertrain and/or trailer to assist, if necessary, in the determination of whether a failure is covered under this Limited Warranty.

Damages to a Malibu Boat, Monsoon Powertrain and/or Malibu Trailer caused by improper operation, care and maintenance are not covered by this Limited Warranty.

---

### **Section 7.3. Design and/or Manufacturing Changes.**

Malibu Boats reserves the right to implement changes in the construction or components of any Malibu Boat, Monsoon Powertrain and/or Malibu Trailer at any time, without incurring any obligation to make the same or similar changes

on Malibu Boats, Monsoon Powertrains and/or Malibu Trailers previously built and/or sold.

---

### **Section 7.4. Other Warranties.**

Some manufacturers of component parts included in a Malibu Boat, Monsoon Powertrain and/or Malibu Trailer may provide limited warranties. Please refer to component part manufacturer's limited warranty disclosures, if any, for details, including their terms, conditions and limitations, of which Malibu Boats makes no representations or warranties.

Among other warranties, note that certain items including, but not limited to, some powertrain parts, Bimini's and boat covers are among those components covered by individual, separate warranties, which are explained and set forth in materials supplied by the component part manufacturer. Any and all claims or defects should be submitted directly to the manufacturers of those particular component parts.

---

### **Section 7.5. No Other Warranties.**

No oral or written information, advice or communication of any nature by or from Malibu Boats or its representatives, employees, dealers, agents, distributors or suppliers shall create a warranty or in any manner increase or modify the scope of this Limited Warranty. The repair and/or replacement of components or parts under warranty does not extend the warranty period beyond the original expiration date.

---

## **Section 8: Customer Satisfaction Procedure**

---

### **Section 8.1. Warranty Claim Procedure.**

To obtain warranty service and/or repairs, the following steps are required:

(a) Notify a service facility or dealership authorized by Malibu Boats to perform service or repairs to Malibu Boats, Monsoon Powertrains and/or Malibu Trailers ("Authorized Service Dealer") or Malibu Boats, Monsoon Powertrains and/or Malibu Trailers of the substantial defect in materials or workmanship attributable to Malibu Boats, within thirty (30) days of discovery of the defect (which must be in the applicable Coverage Period);

(b) Promptly schedule an appointment with and deliver the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer to an Authorized Service Facility for repairs. Warranty service must be performed by Malibu Boats or an Authorized Service Dealer. For assistance in locating an Authorized Service Dealer, please visit [www.malibuboots.com](http://www.malibuboots.com), select



the “Find a Dealer” tab, and utilize Malibu Boats’ Dealer Locator, or call Malibu Boats at (865) 458-7110;

*\* Malibu Boats reserves the right to require further evaluation and/or information regarding a warranty claim against a Malibu Boat, Monsoon Powertrain and/or Malibu Trailer prior to its repair as well as designate the place of repair.*

Subject to the terms of this Limited Warranty, any covered Malibu Boat, Monsoon Powertrain and/or Malibu Trailer or component part with a substantial defect in materials or workmanship that is returned to an Authorized Service Dealer during the appropriate Limited Warranty period will be repaired or replaced, in Malibu Boats’ sole discretion, without charge to the Purchaser for parts and labor. This provision is subject to the following terms and conditions:

(a) Malibu Boats shall be obligated only to repair or replace those items that prove defective, in Malibu Boats’ sole discretion, upon examination by a qualified representative of an Authorized Service Dealer or Malibu Boats’ own personnel, as applicable;

(b) Malibu Boats warrants authorized repairs or replacements made by or on behalf of Malibu Boats, Monsoon Powertrains and/or Malibu Trailers only for the remainder of the applicable Coverage Period;

(c) The Purchaser shall be responsible for all costs associated with the transportation of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer, towing bills, trailer or component part(s) to Malibu Boats’ facility and/or to the Authorized Service Dealer, as well as for any return transportation.

Note that Authorized Service Dealers, generally, are independently owned and operated businesses. Malibu Boats does not control the scheduling of service work. However, if you encounter any material delays in obtaining service at one of Malibu Boats’ Authorized Service Dealers, please call Malibu Boats for assistance at (865) 458-7110.

---

## **Section 8.2. Direct Contact Information for Warranty Issues.**

### **Boats built in the US:**

Malibu Boats, 5075 Kimberly Way, Loudon, TN 37774

(865) 458-7110

[www.malibuboots.com](http://www.malibuboots.com)

### **Boats built in Australia:**

Malibu Boats Australia, 813 Hope Court, Albury, NSW 2640

(02) 6040 1174

[www.malibuboots.com.au](http://www.malibuboots.com.au)

---

## **Section 8.3. Procedure Regarding Concerns with Covered Warranty Repairs.**

Concerns related to a Malibu Boat, Monsoon Powertrain and/or Malibu Trailer can normally be addressed by an Authorized Service Dealer. If concerns are not satisfied, the following steps should be followed:

(a) Ask to discuss concerns with a member of the Authorized Service Dealer’s management. Ordinarily this will be the Authorized Service Dealer’s service manager or service foreman. If resolution of the issue is not achieved, request to speak with the Authorized Service Dealer’s general manager or owner.

(b) If concerns are not resolved by the representatives of the Authorized Service Dealer, contact Malibu Boats’ Customer Service Department at the address noted above. Be prepared to provide the customer service representative with your name, address and phone number, your boat’s hull identification number, the Authorized Service Dealer(s) at which the boat has been serviced, and the nature of the concerns with the boat or the service. Malibu Boats will thereafter provide assistance to the boat owner and the Authorized Service Dealer, as necessary, to attempt to resolve the matter.

---

## **Section 8.4. Dispute Resolution.**

**EXCEPT TO THE EXTENT PROHIBITED BY ANY APPLICABLE STATE OR FEDERAL LAW, PRIOR TO INITIATING ANY LEGAL ACTION AGAINST MALIBU BOATS, (1) YOU ARE REQUIRED TO PROVIDE MALIBU BOATS WRITTEN NOTICE, AT THE ADDRESS ABOVE, OF ANY SUBSTANTIAL DEFECT IN MATERIALS OR WORKMANSHIP THAT REMAINS UNRESOLVED TO YOUR SATISFACTION UNDER THE TERMS OF THE LIMITED WARRANTY; AND (2) TO THE EXTENT PERMITTED BY ANY STATE OR FEDERAL LAW, YOU MUST FIRST USE AN AVAILABLE DISPUTE SETTLEMENT MECHANISM OR ARBITRATION.**

---

## **Section 9. Warranty Transfer**

Upon the first sale of a Malibu Boat, Monsoon Powertrain and/or Malibu Trailer that has not been utilized for any Commercial Purpose by the original, non-commercial, retail purchaser, within the first sixty (60) months, beginning on the date of the original retail purchase or the initial use of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer, whichever occurs first, any unexpired Limited Warranty coverage can be transferred to a second, non-commercial, owner and remain in effect for the unexpired period (except the Gel Coat & Powder Coat Limited Warranty, which is twelve [12] months), and the Structural Warranty, which

becomes ten (10) years. The Limited Warranty on all other components is as previously identified within this Limited Warranty Statement. This provision is pursuant to the requirements set forth in the Warranty Transfer information provided within this Owner's Manual. Only one transfer of the Limited Warranty within the applicable time period(s) established will be honored. All coverage under the Limited Warranty Statement will become null and void in totality with any subsequent conveyance of ownership of the Malibu Boat, Monsoon Powertrain and/or Malibu Trailer or transfer of the Malibu Boat's or Malibu Trailer's title to any third party.

---

## Warranty Transfer

The Malibu Boat, Monsoon Powertrain and Malibu Trailer (herein called the "boat package") may be transferred from the original owner to a second private owner within the first five (5) years of the original date of purchase to the second owner only. The boat package is not eligible to be transferred to a third owner for purpose of warranty coverage.

The boat package may transfer within the first five (5) years of ownership from the date of purchase. After five years from the date of original purchase, a warranty transfer is no longer eligible.

The boat package must be fully inspected by an authorized Malibu dealer. The dealer will complete a warranty transfer specific to that boat package. The transfer must be signed by the second private owner. The transfer forms are available through the dealership only.

Consumer payment must be made to the dealer directly in the amount of \$1,250.00. Payment cannot be made directly to Malibu. The dealer will complete the warranty transfer process on behalf of the seller and buyer.

---

## CALIFORNIA AND U.S. EPA EMISSION CONTROL WARRANTY STATEMENT

---

### Your Warranty Rights and Obligations

The California Air Resource Board ("CARB") and the United States Environmental Protection Agency ("EPA"), together with Malibu Boats, LLC ("Malibu Boats") are pleased to explain the Emission Control System Warranty ("ECS Warranty") on your 2024 inboard engine. In the United States, new inboard engines must be designed, built and equipped to meet all Federal- and State-mandated anti-smog standards.

Malibu Boats must warrant the emission control system on your inboard engine for the periods of time listed below, provided there has been no abuse, neglect or improper

maintenance of the inboard engine. Your emission control system may include parts such as the fuel injection system and the ignition system. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, Malibu Boats will repair your inboard engine at no cost to you, including diagnosis, parts and labor.

---

### Manufacturer's Warranty Coverage

Select electronic emission-related control parts from model year 2019 forward on Malibu Boats inboard engines are warranted for five (5) years or 500 hours as recorded on the boat's hour meter, whichever comes first.

If any emission-related part on your engine is defective under warranty as described in the Malibu Boats Limited Warranty Statement, the part will be repaired or replaced by Malibu Boats.

---

### Owner's Warranty Responsibilities

As the inboard engine owner, you are responsible for the performance of the required maintenance listed in this Owner's Manual. Malibu Boats recommends retaining all receipts received as a result of the maintenance performed on your inboard engine. Malibu Boats cannot deny warranty solely for the lack of receipts or your failure to ensure the performance of all scheduled maintenance.

Malibu Boats may deny warranty coverage if the inboard engine or component part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

To receive warranty correction(s), you are responsible for presenting your inboard engine to a Malibu Boats authorized servicing dealership as soon as a problem exists. The warranty repairs will be completed in a reasonable amount of time not to exceed thirty (30) days.

If you have questions regarding your warranty rights and responsibilities, please contact Malibu Boats at (865) 458-7110.

---

### General Emissions Warranty Coverage

The Malibu Boats engine is designed, built and equipped to conform with all applicable regulations adopted by CARB, pursuant to its authority in Chapters 1 and 2, Part 5, Division 26, of the Health and Safety Code, and by the EPA pursuant to 40 CFR 1045. The engine is warranted that it is free of defects in materials and workmanship that could cause the failure of a warranted part. It is identical in all material respects to parts as described in the engine manufacturer's application for certification.

---

## Exclusions

The engine's owner is referred to the Malibu Boats' Limited Warranty Statement for general guidelines regarding warranty provisions. Note that damage or failure resulting from circumstances other than those for which provision is made in the Limited Warranty Statement and this Emissions Control Warranty Statement are not covered by warranty. This warranty does not cover damage or failure resulting from owner abuse, neglect, improper maintenance, or modification with unapproved parts or components. The warranty also does not cover expendable maintenance items used in connection with routine and/or required maintenance. Such examples include, but are not limited to, filters, spark plugs or fluids. If a part or component requires repair or replacement, the life of the warranty is not extended beyond its original expiration date.

- pressure regulator;
- ignition wires;
- ignition coil;
- spark plugs;
- sensors, including, camshaft position, crankshaft position, engine coolant temperature, intake air temperature, knock, manifold absolute pressure (MAP), throttle position, electronic control unit, electronic throttle control, camshaft position actuator solenoid valve, oil pressure, and oxygen;
- carbon canister;
- fuel tank;
- purge valve, where installed;
- non-metal, low-permeation hoses.

---

## Disclaimer

This Emissions Control Warranty is applicable only where CARB and/or U.S. EPA emission control system warranty regulation is in effect. The use of additional or modified part(s) is not exempt. If a non-exempt part or component causes the failure of a warranted part or component, the warranted part or component will not be covered under warranty.

---

## Emission Control Parts Covered Under Warranty

The following components are considered part of the emissions control system for your inboard engine and will be warranted under the guidelines of this warranty:

- exhaust manifold;
- exhaust valves;
- PCV valve;
- oil filler cap;
- oil pump, including internal parts;
- intake manifold;
- spark arrestor/air filter;
- intake valves;
- serpentine belt;
- hoses;
- clamps;
- fittings;
- pulleys/idlers;
- mounting hardware;
- tubing;
- sealing gaskets or devices;
- fuel injectors;
- fuel pump;

# TROUBLESHOOTING

## TROUBLESHOOTING THE BOAT

### General

#### ***The boat will not start.***

- Verify that the battery switch is ON.
- Be certain the Emergency Safety Stop Switch is attached to the connection point on the driver's panel and to the boat operator.
- Be certain the engine electrical system is ON. Generally, this requires turning the ignition key ON or pressing the ON button.
- It is possible the display is in a "sleep" mode. Press a key or touch the screen to see if the affected display activates.
- Verify that the battery connections are secure.
- Refer to the *Engine* section of this manual for additional guidance.

#### ***The boat will not shift into gear.***

- When engaging the transmission from neutral either forward or backward into reverse, pull up on the safety collar located directly below the throttle lever knob. The safety collar helps avoid unintentional gear shifting.
- When shifting gears, always do so smoothly and briskly. Shifting too hard and slamming the gears, or too tentative, is hard on the shifter/throttle system and can result in damage that is not covered under warranty.

#### ***The engine/drivetrain is not operating properly.***

- Refer first to the *Engine* chapter of this manual for guidance.
- Check the boat's fuel level to verify that the engine is not "starving" from lack of fuel or contaminated fuel.
- Check for engine warning messages on the gauges/display. If any are present, take the boat to the closest authorized Malibu dealer for evaluation and repair.

## Displays, Gauges, and Switches

### ***A gauge or display does not light up and work as expected.***

- Be certain the engine electrical system is ON. Generally, this requires turning the ignition key ON or pressing the ON button.
- It is possible the display is in a "sleep" mode. Press a key or touch the screen to see if the affected display activates.
- Verify that the battery connections are secure.
- Determine if other gauges, switches and/or displays are operational. If they are, check the circuit breaker panel to determine if the breaker has tripped. Reset. If the circuit continues to trip, the boat must be serviced by an authorized Malibu dealer as it indicates a recurrent and potentially significant problem. Another cause is a loose electrical connection to the non-working gauge/switch/display. This matter should be addressed by an authorized Malibu dealer.
- If a display freezes or displays an unreadable or invalid screen, turn the entire system OFF, including the engine electrical system. Allow a few minutes for the system to reset itself, and then try rebooting the system. If the issue persists or another issue arises, take the boat to an authorized Malibu dealer for correction. Where equipped, check the battery isolator switch.

## Electrical Systems

### ***A boat component that is electrically operated will not operate.***

- Be certain the boat electrical system is ON. Generally, this requires turning the ignition key ON or pressing the ON button.
- Verify that the battery connections are secure and that there is sufficient charge and power. See the Battery information in this manual for additional details.
- Verify that the circuit breaker has not tripped. If it has, reset it. Recurrent trips are indicative of a problem that requires the attention of an authorized Malibu dealer.
- Check for loose connections, but do not remove any closeout panels to do so. If a loose connection is suspected but cannot be seen, have the system checked by an authorized Malibu dealer.



- If the component is electronic, be certain the component is operational. If it requires reception from a satellite, tower or other supplier, Malibu cannot guarantee that it will receive the signal. It may be necessary to move the boat to another location or body of water, or pay a subscription fee.

---

**Accessories will not recharge in the 12-volt receptacle.**

- Verify that the correct charger is used for the accessories(s) and that the charger plug-in is fully seated in the 12-volt receptacle.

---

## Battery Failure

Often, a battery that will not start the boat requires recharging. Use **ONLY** a marine-approved battery charger. Any other can damage the electrical system, and such damage is not covered under warranty. **NEVER** attempt to “jump” from a vehicle or another boat as there is a potential for overload that could significantly damage the boat’s electrical system, which is not covered under warranty! Read the battery information provided in the *Dash and Displays* section of this manual before undertaking any attempt to replace, use both batteries simultaneously, or replace the battery.

---

## Alarms

---

**The low voltage alarm sounds.**

- Most often, this signals the need to turn OFF and leave OFF the stereo component or similar electronics that require substantial support from the batteries. Start the engine and allow the alternator to recharge the batteries, which will require a fairly short period of time if there is no additional drain occurring during the recharging time. If this does not work, it may be that the battery or batteries are nearing their terminal life span.

---

**Another alarm sounds.**

- These occur when a sensor detects that the engine or transmission temperature range or oil pressure range have exceeded programmed limits. The boat’s main system may begin shutting off peripheral activity to retain proper operation as long as possible. It is usually in the operational best interest to return to shore as soon as possible to avoid being stranded. Even if the ranges return to acceptable operating range, this matter should be shared with the service department of your authorized Malibu dealer to determine the cause and avoid a repeat.

---

## Bilge and Ballast

---

**One or more bilge pumps are not operating.**

- The bilge pump(s) should operate automatically. If they do not, manually activate the bilge pump(s) from the *Controls Screen* via the 8” display.
- Select *Forward Bilge* to toggle the forward bilge pump ON/OFF.
- Select *Rear Bilge* to toggle the rear bilge pump ON/OFF.
- If an *Auto-Bilge Alert* occurs, navigate to the *Controls Screen* to see which bilge pump is running.
- If toggling the bilge pump(s) from the 8” display does not work, you may manually test the physical switches—see instructions in next section.

---

**Manual Testing – Center Bilge Pump**



1. Access the center bilge pump via the center access pie plate on the floor, directly port of the helm.
2. Hold fingers on the two raised circles on the face of the testing switch (see image above) for 10 seconds. The pump should activate.
3. Remove finger from raised circle #1. The pump should stay on.
4. Remove finger from raised circle #2 (both fingers are now removed). The pump should deactivate after a 30-second delay.
5. If it still does not operate correctly, return to shore **IMMEDIATELY** and terminate the outing. See an authorized Malibu dealer before the next outing to ensure the bilge pumps are working properly. Failure to pump water out of the bilge can result in the boat swamping. This could result in serious injury or death to those on board.

---

## Manual Testing — Rear Bilge Pump



1. Access the rear bilge pump by opening the starboard engine hatch and removing the bulkhead/divider.
2. Rotate the knob clockwise (approximately 1/4 turn) to ensure there is no internal obstruction/binding. If pump is operating correctly, it should activate once the knob is rotated clockwise.
3. Release the knob, allowing it to rotate counterclockwise back to its original position. If the pump is operating correctly, it should deactivate when the knob is released.
4. If it still does not operate correctly, return to shore **IMMEDIATELY** and terminate the outing. See an authorized Malibu dealer before the next outing to ensure the bilge pumps are working properly. Failure to pump water out of the bilge can result in the boat swamping. This could result in serious injury or death to those on board.

---

### **The ballast pump is not operating.**

- If the ballast pump does not pump water into the system, and having verified that the electrical system is operational, leave the pump OFF and have it serviced by an authorized Malibu dealer. If the pump does not pump water out of the system, seek assistance by calling your Malibu dealer. You should never attempt to tow your boat on a trailer with water in the ballast system as it could cause damage to the trailer, which can result in the driver losing control while towing. Such activity could result in serious injury or death to anyone in the area.
- Additional information on the bilge and ballast systems can be found in *How It Works* and *Care and Maintenance* sections of this manual.

---

## Blower System

---

### **The blower is not working.**

- Never operate the boat without the blower system operating correctly! Accumulating fumes that are not

released through the blower system can result in an explosion or other serious accident that could result in death to those on board. If the blower ceases to work properly while boating is underway, terminate the outing **IMMEDIATELY** and return to shore with the engine compartment covers open. If there is an odor of fuel or exhaust present, turn OFF the engine **IMMEDIATELY** and seek a tow to shore. See the *Safety* section of this manual; additional details are also available in the *How It Works* and *Care and Maintenance* sections, as well.

---

## Steering System

---

### **The boat's steering is responding poorly.**

- Anytime the steering does not respond crisply to turns by the steering wheel, discontinue the outing and return to shore as soon as possible. Steering components are, generally, inaccessible to boat operators and owners. Repairs should be completed by an authorized Malibu dealer.
- Inboard-engine boats have an inherent pull to one side due to rudder torque. While some can be adjusted, it is possible that all pull cannot be eliminated.

---

## Power Wedge and Surf Gates

---

### **The Power Wedge and/or the Surf Gates are not operating as designed.**

- See the information provided in the *Care and Maintenance* section of this manual for information about how to manually move these components. However, you may want to take the boat to your authorized Malibu dealer for assistance and to address warranty issues.

---

## Lights

---

### **Any light system is not working properly.**

- See the Electrical troubleshooting information above.

---

## TROUBLESHOOTING THE TRAILER

Whenever possible, it is advisable to have issues with the trailer addressed by a trained service technician at an authorized Malibu trailer dealer. However, there can be instances when this is not feasible, particularly in cases of emergency or distance from the dealer. The following troubleshooting advice is not guaranteed to fix the issue, and Malibu Trailers does not warrant any repair effected by other than a trained service technician at an authorized

Malibu dealership. If you must troubleshoot the trailer and/or its components while the trailer is under warranty, we recommend having a follow-up consultation with the dealer.

Here are some of the more common issues that may arise:

---

***The coupler latch handle does not open or close, or does not open/close smoothly and easily.***

- Verify that the hitch ball is the specified, correct size.
- The hitch ball may not be fully seated within the socket.
- The trailer and tow vehicle may not be level.
- Ensure there is no debris or foreign objects interfering with the match.
- Ensure there is sufficient lubrication in the moving parts.
- Verify that there is little to no corrosion on any of the metal parts.

---

***The tongue actuator is making unusual noises, including, but not limited to, clunking or squawking.***

- The shock absorber inside the tongue may be worn and require replacement by an authorized Malibu Trailer dealer.
- The brakes may require bleeding.
- The hitch ball may be too small, too worn, or require lubrication.

---

***Braking is uneven, including instances of the brake releasing when the driver's foot is on the brake pedal in the tow vehicle.***

- There may be an issue in the tongue actuator such as a worn shock absorber.
- The hitch ball may not be seated properly in the socket.
- There is too little or too much weight percentage on the tongue.
- The tow vehicle's shock absorbers are too worn.
- The brakes need adjustment.
- The brake lines require a re-bleeding.
- Verify that the brake linings, rotors, calipers and other components are correctly aligned and operational.
- Verify that the master cylinder is not corroded.
- Verify that the brake lines are not rusted or corroded.
- Verify that the breakaway cable has not pulled free.

---

***Brakes perform poorly, beyond the intermittent issues mentioned above.***

- The brake shoes or disc pads may be worn beyond acceptable use.
- Corrosion/rust is preventing the brakes from operating as designed.
- Verify that there is a sufficient amount of brake fluid in

the reservoir. Re-bleed as necessary.

- Verify that the brake lines are not damaged.
- The master cylinder may be malfunctioning.
- Adjust the "gain" control on the in-cab controller.
- Verify that the electrical wire connections are connected.

---

***A single brake is overheating.***

- The trailer may have been stored with the actuator compressed and rust is in the system.
- A brake line may have been pinched, broken or damaged and is inhibiting or preventing brake fluid from circulating.
- There are several other potential causes for this problem. Due to the technical nature of the potential causes, it is best to have the system checked by an authorized Malibu Trailer-trained service technician.

## **DANGER**

**NEVER** tow a trailer with faulty brakes. Operating the rig when the brakes are grabbing or failing to respond will likely result in a loss of control of the entire rig, which can cause serious injury or death to persons onboard and/or nearby, as well as damage to the tow vehicle, trailer, boat, and/or other nearby vehicles.

# SERVICE LOG

Service Performed	Date	Date	Date	Date	Date	Date	Date	Date	Date	Date
Oil Change and Oil Filter Replacement										
Wax Exterior										
Thoroughly Clean Interior										
Replace Battery										
Charge or Replace Fire Suppression Equipment										
Check/Repair PFDs and Other Safety Equipment										
Check/Repair Engine Mounts										
Check/Repair Steering System										
Check/Repair Shift & Throttle System										
Inspect/Repair/Replace Ballast Pumps										
Inspect/Repair/Replace Bilge Pumps										
Replace Fuel Filter/Inspect Fuel Lines										
Check/Repair Wedge & Surf Gate Operation										
Check Hull Paint (where applied)										
Prepare for Storage/Winterization										
Recommission Boat										
Other										
Other										
Other										
Other										



## Symbols

3-in-1 Event (Response TXi) .....	70
7" Display (Response TXi) .....	65
12-Volt Receptacles .....	78

## A

After 10 Hours.....	164
After 50 Hours/Annually.....	164
After Starting the Engine, Check for Odors.....	163
After the Outing .....	163
Aids to Navigation.....	21
Alarms.....	69, 88
Anchoring .....	149
Aquatic Invasive Species (AIS).....	144, 150
Armrests.....	107
Auto Detect.....	74

## B

Backlighting .....	57, 60
Ballast System.....	117
Basic Electrical Components .....	75
Basic Safety Rules .....	1
Basic Tire Maintenance .....	137
Batteries.....	76, 165
Battery Maintenance.....	78
Bilge Pumps .....	9, 116
Bimini Top .....	112
Blower System .....	115
Bluetooth Connection.....	63
Boating Regulations .....	19
Boating Safety Education Opportunities .....	5
Boating Under the Influence .....	13
Boat Model/Hull ID.....	61
Boat Options.....	61
Bow Eye and Transom Eyes .....	99
Break-In Period All Boats .....	148
Break-In Period .....	91
Buzzer Volume.....	71, 72, 73

## C

California Emissions Information .....	83
Canvas .....	152
Breathability of Fabrics—Air Permeability .....	152
Condensation Cause and Protection .....	153
Focus on Prevention .....	153

Maintaining Zippers and Hardware .....	154
Maintenance Tips .....	154
Mold & Mildew Cause and Prevention.....	153
Pooling Water.....	153
Treatment.....	153
Capsizing.....	29
Carbon Monoxide Safety .....	10
Care and Maintenance.....	70
Circuit Breakers.....	75
Clamping Spinner Board Racks or Ski Rack.....	114
Cleaning Agents .....	15
Cleats.....	98
Collisions .....	29
Color Scenes.....	57
Coolant Requirements .....	90
Coolant System.....	88, 166
Corrosion in Fresh Water .....	159
Course Manager .....	73
Courtesy Lights .....	97
Cup Holders.....	108

## D

Dam Spillways .....	14
Debug Assist .....	62
Depth Alarm.....	61
Develop WATER SENSE.....	26
Discharge/Disposal of Waste .....	15
Docking and Tie-Up.....	149
Docking Lights .....	97
Drowning.....	30

## E

Electrical Harnesses and Wiring.....	75
Electrical System .....	88
Electronic Throttle Control (ETC) .....	101
Emergency Back-Up Key Switch.....	97
Emergency Procedures .....	28
Emergency Safety Stop Switch.....	6, 96
Emissions, General Information.....	84
Encountering Another Vessel.....	19
Engine	
After 10 Hours on the Hourmeter .....	160
After 50 Hours or Annually.....	160
After Starting.....	160
After the Outing.....	160
Before Starting .....	160
Engine, Additional Information, Including Warranty ....	85
Engine - Before Starting	

Check Coolant Level .....	160
Check Flush Kit Cap.....	163
Check for Odors.....	162
Check the Battery Holders and the Connections.....	162
Check the Engine Oil Level.....	161
Inspect the Sea Strainer .....	161
Engine Coolant.....	81
Engine Diagnostics .....	62
Engine Fuse Box.....	75
Engine Maintenance Schedule.....	82
Engine Oil .....	82
Engine Sensors .....	78
Engine Specifications.....	81
Environmental Concerns.....	14
Excessive Noise .....	15
Exhaust Emissions .....	15
Exhaust System.....	90
Explosion and Fire.....	28
Extended Storage and Winterization.....	169,171

## F

Final Checks Before Starting .....	146
Fins .....	122
Fire.....	28
Fire Extinguishing Equipment .....	8, 94
Flip-down Step.....	99
Flip-Up Windblock Door (Natalie Seat).....	104
Flush Kit .....	159
Flush Kit, Winterizing.....	169
Foreign Species.....	14
Fuel Fill .....	100
Fuel Filter.....	82
Fuel Information .....	86
Fueling.....	87
Fuel/Oil Spillage.....	15
Fuel System.....	85, 145, 168
Fuel, When the Boat Is Not in Operation.....	87
FWMS System.....	21

## G

Gauges Screen .....	66
General Boating Safety Topics .....	10
General Cleaning.....	152
Glove Box.....	107
GPS Information .....	70
Grab Handles.....	108
Grounding.....	29

## H

Hand Signals .....	24
Hazardous Conditions .....	14

Heated Steering Wheel .....	79
Heater.....	109
High Speed Maneuvers.....	148
Home Screen and Buttons.....	70
Horn .....	99
Horn or Whistle .....	9
Hull Gel Coat.....	169
Hydraulic Steering Fluid.....	82
Hydraulic Steering System .....	168

## I

Important Safety Information .....	4
Insurance.....	5
Interior Luxury .....	102
Interior Performance .....	100
Isolator System, Four-Position .....	76
Isolator System, Three-Position with ACR.....	76
Isolator System, Two-Position .....	76

## J

Jump Settings.....	71
Jump Switch.....	72
Jump Switch Timeout .....	72

## L

Lifting the Boat.....	169
Lighting .....	96

## M

M230 .....	44
M242 .....	45
Maintenance Schedule.....	174
Malibu Bluetooth.....	69
Malibu Operating System .....	46
MARPOL Treaty.....	15
Max Pivot Seat.....	105
Medical Emergency.....	30
Meeting Head-On.....	20
Mirror .....	99
M-Link.....	58, 59, 62
Monsoon Engine Support Systems .....	85
Mooring Buoys .....	22
Multi-View Wake Bench.....	104
Music Sync.....	57

## N

Navigation Lights .....	97
Night Running.....	22

---

## O

Oil, Adding New .....	167
Oil, Draining the .....	166
Oil Filter, Replacing .....	167
Oil System .....	166
On and Under the Water .....	115
Ongoing Care .....	152
Operation by Minors and Licensing .....	5
Operation Failure .....	30
Operations .....	146
Optional Joystick Controller .....	65
Other Rules of the Road .....	20
Overtaking .....	20
Owner Responsibility And Boating Education .....	4

---

## P

Paints .....	15
Passenger Safety .....	10
Personal Flotation Devices .....	7
Person Overboard .....	29
Plus (+) Factor .....	74
Powered Swim Step .....	125
Power Wedge III .....	121
Power Wedge III and Surf Gate .....	61, 168
Precautions for Towed Skier/Rider .....	25
Precautions While Underway .....	2
Pre-operation Check List .....	1
Prior to Operation .....	80
Privileged Vessel .....	19
Product Misuse .....	13
Propeller .....	122
Pull Type .....	74
Pumps .....	166
Pylon .....	101

---

## R

Radio Configuration .....	62
Raw Water Intake / Sea Strainer .....	123
Rear and/or Dock Camera .....	102
Recommended Safety Equipment .....	9
Recommissioning .....	173
Registration .....	5
Removable Cooler .....	108
Removable Trash Receptacle .....	108
Rendering Assistance .....	14
Reporting Accidents .....	13
Response Series Walk-Thru Seat .....	107
Responsibilities of Boat Owner and Operators .....	4
Restricted Areas .....	14
RGB Lighting .....	62, 98

River Mode and Offset .....	73
Routine Care	
Hull and Deck Finishes .....	156
Swim Board .....	156
Routine Maintenance .....	159
Routine Salt Water/Brackish Water Protection .....	157
Rudder .....	122
Rudder Calibration .....	62

---

## S

Safe Speed .....	10
Safety .....	80
Safety and Required Equipment .....	5
Safety Double Checks .....	80
Safety Equipment .....	168
Safety First .....	94
Safety While Maintaining the Vessel .....	3
Saltwater Boats .....	168
Saltwater Care and Maintenance .....	156
Saltwater Series .....	126
Seating .....	103
Settings Menu .....	60
Settings Screen .....	68
Shallow Water Operation .....	14
Shift and Throttle System .....	165
Shifter/Throttle .....	101
Show Engine Code .....	69
Shower .....	123
Signal Words and Symbols Used in this Manual .....	1
Slalom Settings .....	71
Smart Helm Seat .....	51, 52
Smart Operations .....	148
Soft Grip .....	108, 156
Special Conditions .....	149
Speed/Throttle .....	61
Speed/Wake/Wash .....	15
Sport Dash .....	102
Stainless Steel, Chrome, and Aluminum Components .....	157
Star Labels .....	84
Starting and Operation .....	146
Starting the Engine, Wakesetters & M-Series .....	146
Staying Afloat .....	29
Steering System .....	165
Steering Wheel .....	100
Stereo Components .....	102
Stern Turn .....	123
Stopping .....	148
Storage and Winterization .....	160, 169
Storage Compartments .....	107
Struts and Strut Housing .....	122
Surf Band .....	79
Surf Gate .....	121
Surf Gate Control .....	48

Swamping and Flooding .....	29
Swim Board and Flip Step.....	124
System Diagnostics .....	62
System Settings.....	60

## T

Temperature Offset.....	61
The General Prudential Rule .....	20
Three Event Information .....	70
Tie-Ups .....	98
Timing Recap.....	71, 72
Tire Pressure .....	137
Tires	
Balance.....	138
Fundamentals.....	138
Information on Trailer Tires .....	138
Maintaining Proper Tire Pressure .....	137
Repair.....	138
Rotation .....	138
Safety Checklist .....	139
Safety Tips .....	139
Size.....	138
Tread .....	138
Uniform Tire Quality Grading System.....	138
To Turn Off, Wakesetters & M-Series.....	147
Towed Person Safety Responsibilities.....	24
Tower Accessories .....	112
Tower, Canvas, and Accessories .....	109
Tower, Ascend Mirror.....	115
Tower, Ascend Pro .....	110
Tower, Ascend Mister .....	115
Tower, Lowering the Ascend.....	110
Tower, Lowering the Ascend Pro.....	111
Tower, Lowering the Ski .....	112
Tower, Raising the Ascend .....	110
Tower, Raising the Ascend Pro .....	111
Tower, Raising the Ski.....	112
Tower Speakers.....	114
Towing .....	31
Towing Advice .....	142
Towing and Interaction.....	149
Towing, Legal Requirements for .....	128
Towing, Pre-Tow Check List.....	142
Towing, Prior to.....	142
Towing, Underway.....	143
Towing Vessel.....	31
Tow Line Guidelines .....	26
Trailer, Launching and Reloading the Boat .....	143
Trailers	
Additional Options .....	141
Axles.....	134
Back-up Camera .....	141
Basic Safety Rules.....	128

Bow Safety Strap.....	142
Brakes.....	139
Breakaway Cable.....	130
Cleaning, Maintenance, and Storage .....	144
Connecting to the Boat .....	132
Depth Alarm .....	141
Finding Your Vehicle's Recommended Tire Pressure and Load Limits .....	137
How to Connect to the Tow Vehicle .....	131
Lights .....	134
Lug Nuts .....	135
Optional Electrical Brakes .....	140
Removable Guide Poles .....	133
Safety Cables .....	129
Tire Pressure Monitoring System .....	141
Tires.....	136
Trailer Components and How They Function .....	133
Trailer Hitch .....	129
Trailer Jack .....	133
Trailer Winch .....	132
Weight Distribution.....	130
Wheel Chocks .....	142
Wheels and Hubs.....	135
When Towed by 2006 Mid-Year or Later Ford, Chevy, GMC Truck Equipped with a Factory Brake Controller .....	140
Transmission Fluid.....	82
Transmissions .....	93
Transmissions and V-Drive.....	93
Troubleshooting - Boat	
Alarms.....	185
Battery Failure.....	185
Bilge and Ballast.....	185
Blower System .....	186
Electrical Systems.....	184
Lights .....	186
Steering System.....	186
Troubleshooting - Trailer .....	186
TXi Premium Dash .....	65
TXi Response.....	34
TXi Warning Labels .....	16
Types of Buoys.....	21

## U

Unassisted Means of Reboarding.....	30
Underwater Gear .....	122
Underwater Transom Lights .....	98
Uniform State Regulatory Markers.....	22
Units .....	61
Upholstery.....	154
Additional Routine Care .....	156
Approved Cleaners .....	155
Common Stains And Steps To Treat.....	155



Mold and Mildew.....	154
USWMS System.....	21

## V

V-Drive Oil.....	82
V-Drive .....	93
Vessel Being Towed .....	31
Visibility of the Operator.....	13
Visual Distress Signals.....	9

## W

Wakesetter 20VTX.....	35
Wakesetter 21LX.....	36
Wakesetter 22LSV.....	37
Wakesetter 23LSV.....	38
Wakesetter 22MXZ .....	41

Wakesetter 23MXZ .....	42
Wakesetter 24MXZ .....	43
Wakesetter 25LSV.....	39
Wakesetter 26LSV.....	40
Wakesetter and M-Series Warning Labels .....	17, 18
Warning Markers.....	14, 22
Warranty, Manufacturer .....	83
Warranty Responsibilites, Owner .....	83
Watersports Safety.....	24
Watersports Safety Code .....	27
Weather .....	14
Weeds .....	14
Weighting Your Boat During Watersport Activities.....	12
Wireless Charging .....	78





Operating, servicing, and maintaining a recreational marine vessel can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, service your vessel in a well-ventilated area, and wear gloves or wash your hands frequently when servicing this vessel. For more information, go to [www.P65warnings.ca.gov/marine](http://www.P65warnings.ca.gov/marine).

Owner's Manual

2026

## MALIBU BOATS



### TENNESSEE

5075 KIMBERLY WAY, LOUDON, TN 37774

865.458.5478

### AUSTRALIA

813 HOPE COURT, ALBURY, N.S.W., 2640

02.6040.1174

MALIBUBOATS.COM

